



TWIN PACK CEILING LIGHTS ASSEMBLY/INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

WARNING: Risk of Fire. Min 90°C supply conductors. Consult a qualified electrician to ensure correct installation
Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.


Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustration.

ASSEMBLY AND INSTALLATION

- Before installing, preset the NIPPLE length:
 - Thread the HEX NUT onto the NIPPLE, and screw the NIPPLE into the COUPLING on the PAN a minimum of four turns.
 - Place the center holes of the GLASS SHADE over the NIPPLE and adjust the NIPPLE so that it protrudes out of the GLASS SHADE 3/8". Remove the GLASS SHADE and secure the NIPPLE in place by tightening the HEX NUT.
- Pull the SUPPLY WIRES and the SUPPLY GROUNDING WIRE out from the OUTLET BOX and attach the MOUNTING STRAP to the OUTLET BOX using the slotted holes on the MOUNTING STRAP and the MOUNTING SCREWS provided.
- Thread the FIXTURE SCREWS two full turns into the appropriate threaded holes in the MOUNTING STRAP. (Check the MOUNTING STRAP against the fixture key hole slots to ensure proper fit.)
- Make the wiring connection: Attach the FIXTURE GROUNDING WIRE to the SUPPLY GROUNDING WIRE. Attach both to the MOUNTING STRAP with the GREEN GROUNDING SCREW. Connect the black supply wire to the black fixture wire and white supply wire to the white fixture wire with WIRE NUTS.

ASSEMBLY AND INSTALLATION (CONT.)

- Carefully tuck all wiring back into the OUTLET BOX. Lift the PAN over the OUTLET BOX, positioning the FIXTURE SCREWS heads through the large openings of the key hole slots. Rotate the PAN until the FIXTURE SCREW heads are seated at the small ends of the KEY HOLE SLOTS, secure them with a screwdriver.
- Install the bulbs (sold separately). Risk of fire, Use (1) MAX 60W Type A lamp. DO NOT EXCEED THE MAXIMUM WATTAGE.
- Place the center hole of the GLASS SHADE over the NIPPLE and secure it with HEX NUT and FINIAL. Restore electric power to installation point.

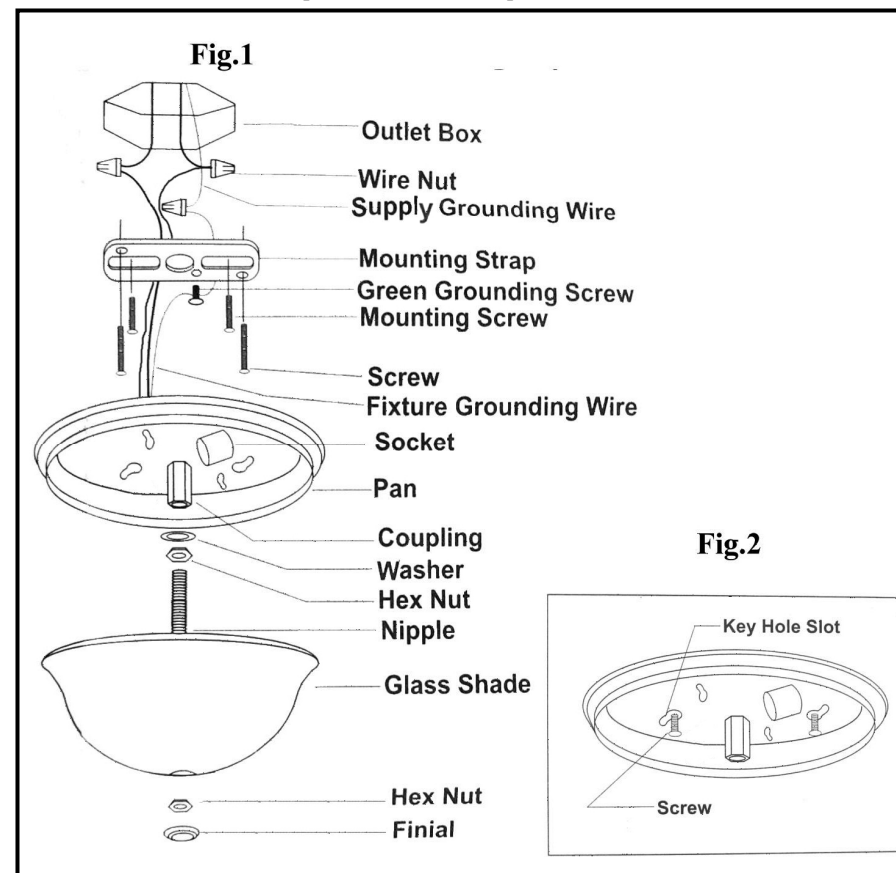

#512988, 512996

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN.**

Customer Service 1-800-558-8700