



HARRIS LED WALL SCONCE ORB SKU#578427

ASSEMBLY / INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards.

If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician. Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions. Tools are required when install this fixture.

REQUIRED TOOLS


Philips screwdriver

ASSEMBLY AND INSTALLATION

Turn off the power at fuse or circuit breaker

1. Carefully unpack the fixture; lay out all parts on a clean surface.
2. Twist the SHADE counterclockwise onto the FIXTURE, place SCREW into the STEEL WASHER and one PLASTIC WASHER provided in turn as shown, then thread it into the hole from the backside of WALL PLATE to secure the SHADE until tightened.
3. Fasten the CROSS BAR onto the OUTLET BOX by using 2 OUTLET BOX SCREW provided.
4. Tie ground wire from OUTLET BOX and from fixture to the GROUND SCREW on the CROSS BAR. Connect white wire from fixture to white wire (neutral wire) from supply circuit. Connect black wire from fixture to black wire (live wire) from supply circuit. Cover connections using provided WIRE CONNECTORS.
5. Place the FIXTURE with attached SHADE over the MOUNTING SCREW and PLASTIC WASHER, then secure them with the LOCK NUTS until tightened.
6. Use silicone caulking to seal between wall canopy and wall. Leave bottom unsealed so moisture can drain out.

Turn on the power at fuse or circuit breaker.

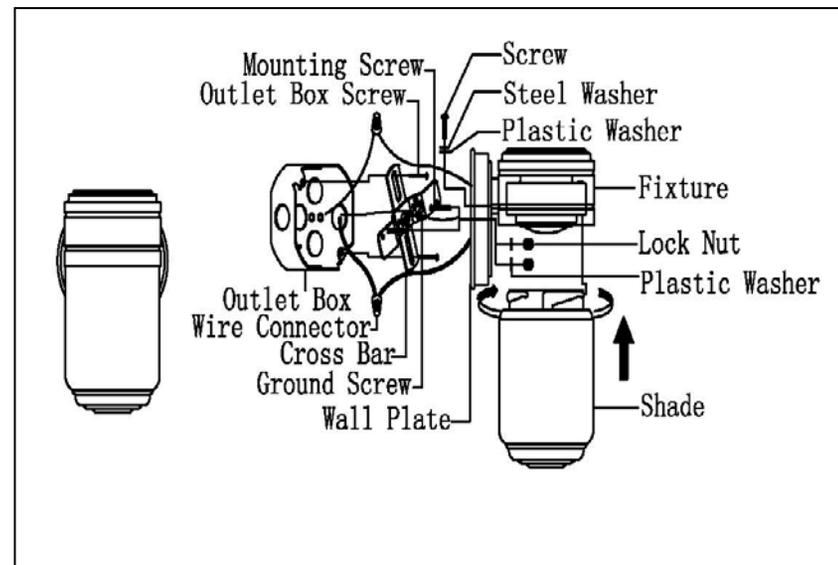

ITEM#578427

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN.**

Customer Service: 1-800-558-8700