



BRANSON OUTDOOR WALL LIGHT ASSEMBLY/INSTALLATION INSTRUCTIONS

Item # 588608-BLK

Please read carefully and save these instructions, as you may need them for a later date.

CAUTION

WARNING: For fixtures labeled for outdoor and wet location use, provide a water-tight seal between the fixture and the wall surface by using silicone or similar caulking. Turn off the main power at the breaker before installing or service the fixture.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

TOOLS REQUIRED


Phillips screwdriver

ASSEMBLY AND INSTALLATION

1. Carefully unpack and identify all parts referring to the illustration.
2. Attach the CROSS BAR (C) to the OUTLET BOX (A) with the OUTLET BOX SCREWS (D).
3. Pull out the outlet wires and the house grounding wire from the outlet.
4. Put the glass(I) inside the frames(H), press the buckle tightly onto the glass.

*IF IN DOUBT ABOUT ELECTRICAL
INSTALLATION, CONSULT A LICENSED
ELECTRICIAN.*

5. Make wire connections with WIRE NUTS (B).
 - connect the black fixture wire to live supply wire.
 - connect the white fixture wire to neutral supply wire.
 - connect the fixture ground wire to the supply ground wire or attach the fixture ground wire to the cross bar with the green screw, then attach to the supply ground wire.
6. Carefully tuck the wires and WIRE NUTS (B) into the OUTLET BOX(A).
7. Unscrew the Ball NUTS(G) and PLASTIC WASHERS(F) from BACK PLATE(E) then attach BACK PLATE to the wall going through OUTLET BOX with screws and fasten PLASTIC WASHERS(F) and BALL NUTS(G).
8. Install the bulb (not included) into the head of the light, see wattage label at socket area or packaging for maximum allowed wattage.
9. To prevent moisture from entering the outlet box and the fixtures back plate causing a short, apply a bead of clear caulking to outline the outside of the fixtures back plate where it meets the wall. Leave a small space at the bottom to allow any condensation or moisture to escape.
10. Turn on the power at the main fuse or circuit breaker box.

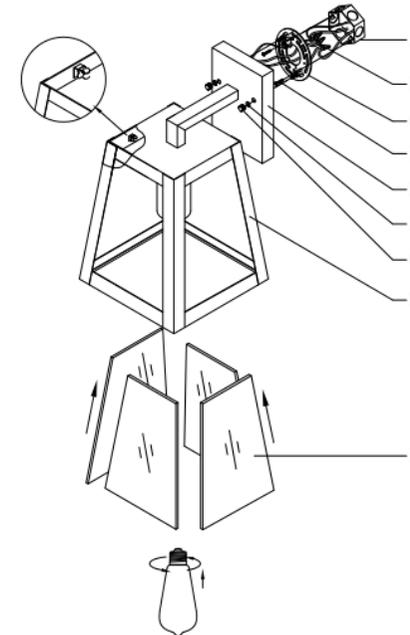

Customer Service: 1-800-558-8700