





www.todaysdesignhouse.com

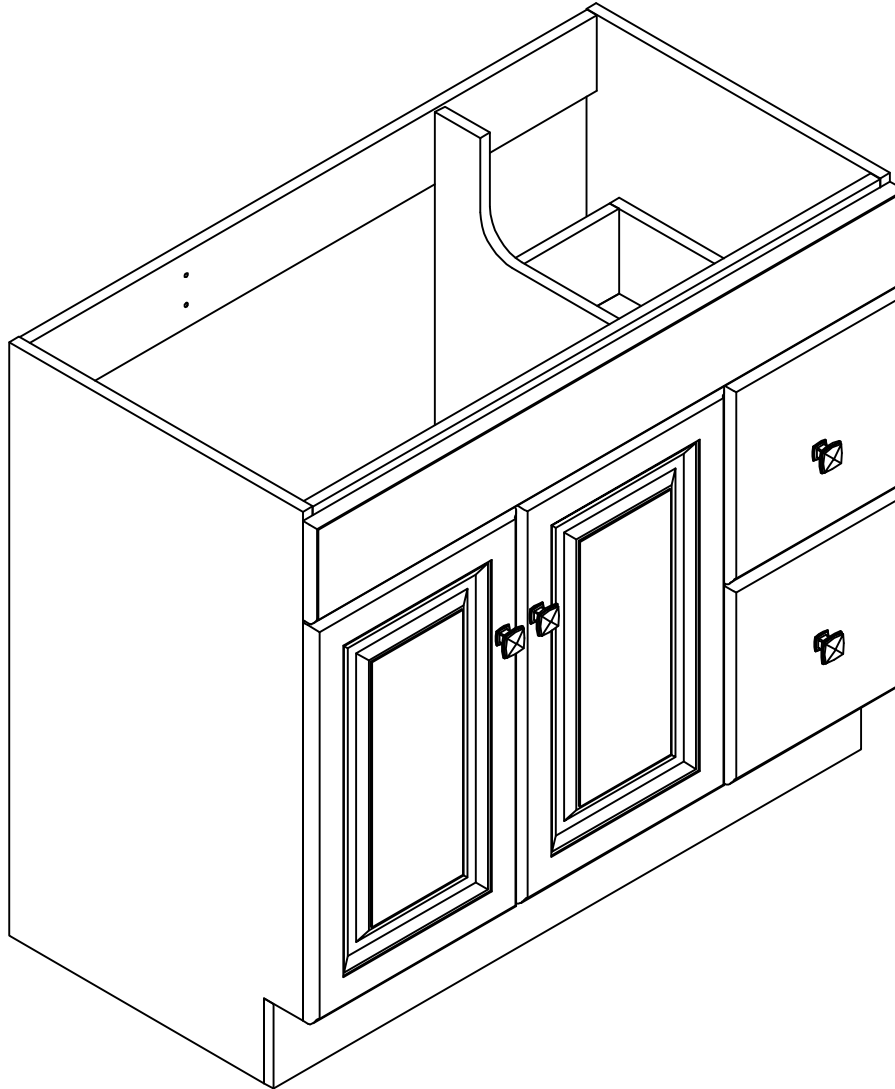


545087 • 545095

ASSEMBLY INSTRUCTIONS

DHI Corp. • 5205 W. Donges Bay Rd. • Mequon, WI 53092 • 800.558.8700


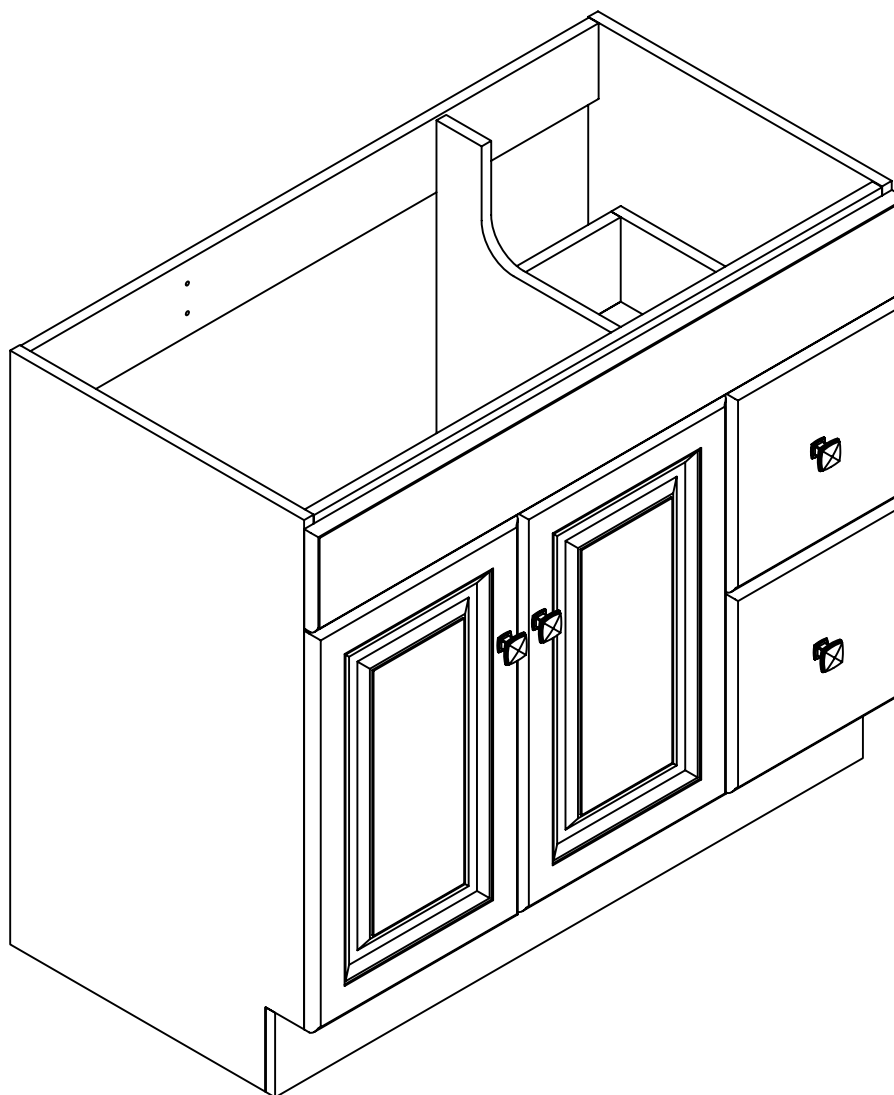


PLEASE FOLLOW STEP1~STEP10 IF YOU
WOULD LIKE THE DOOR INSTALL ON THE
LEFT SIDE AND THE DRAWERS INSTALL
ON THE RIGHT SIDE


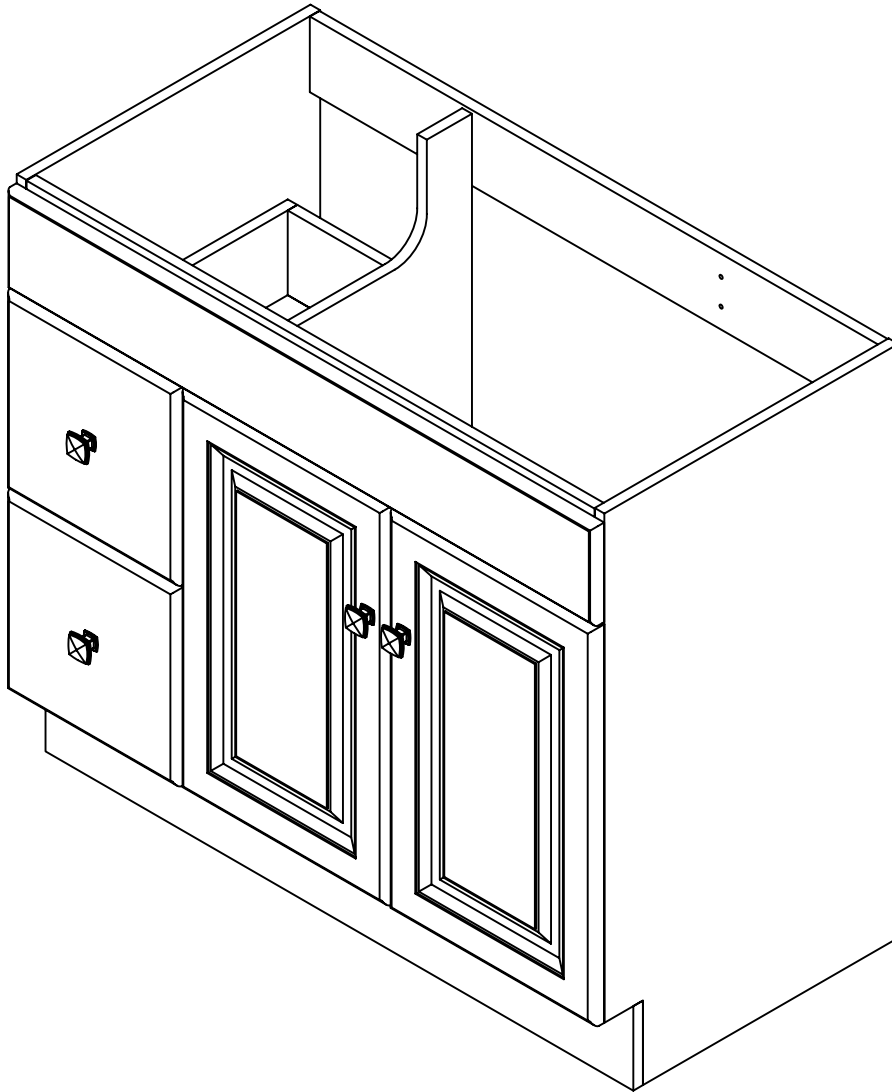


PLEASE FOLLOW STEP11~STEP20 IF YOU
WOULD LIKE THE DOOR INSTALL ON THE
RIGHT SIDE AND THE DRAWERS INSTALL
ON THE LEFT SIDE



STEP 1

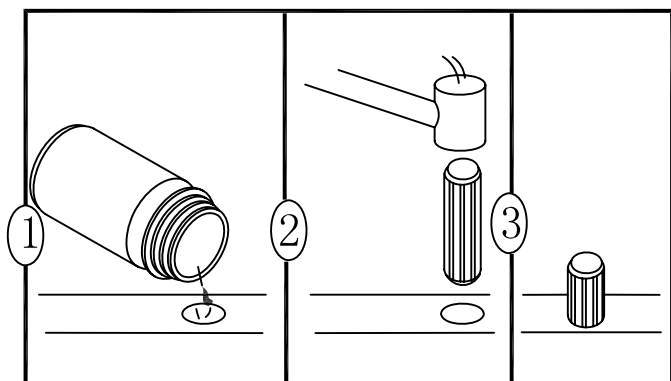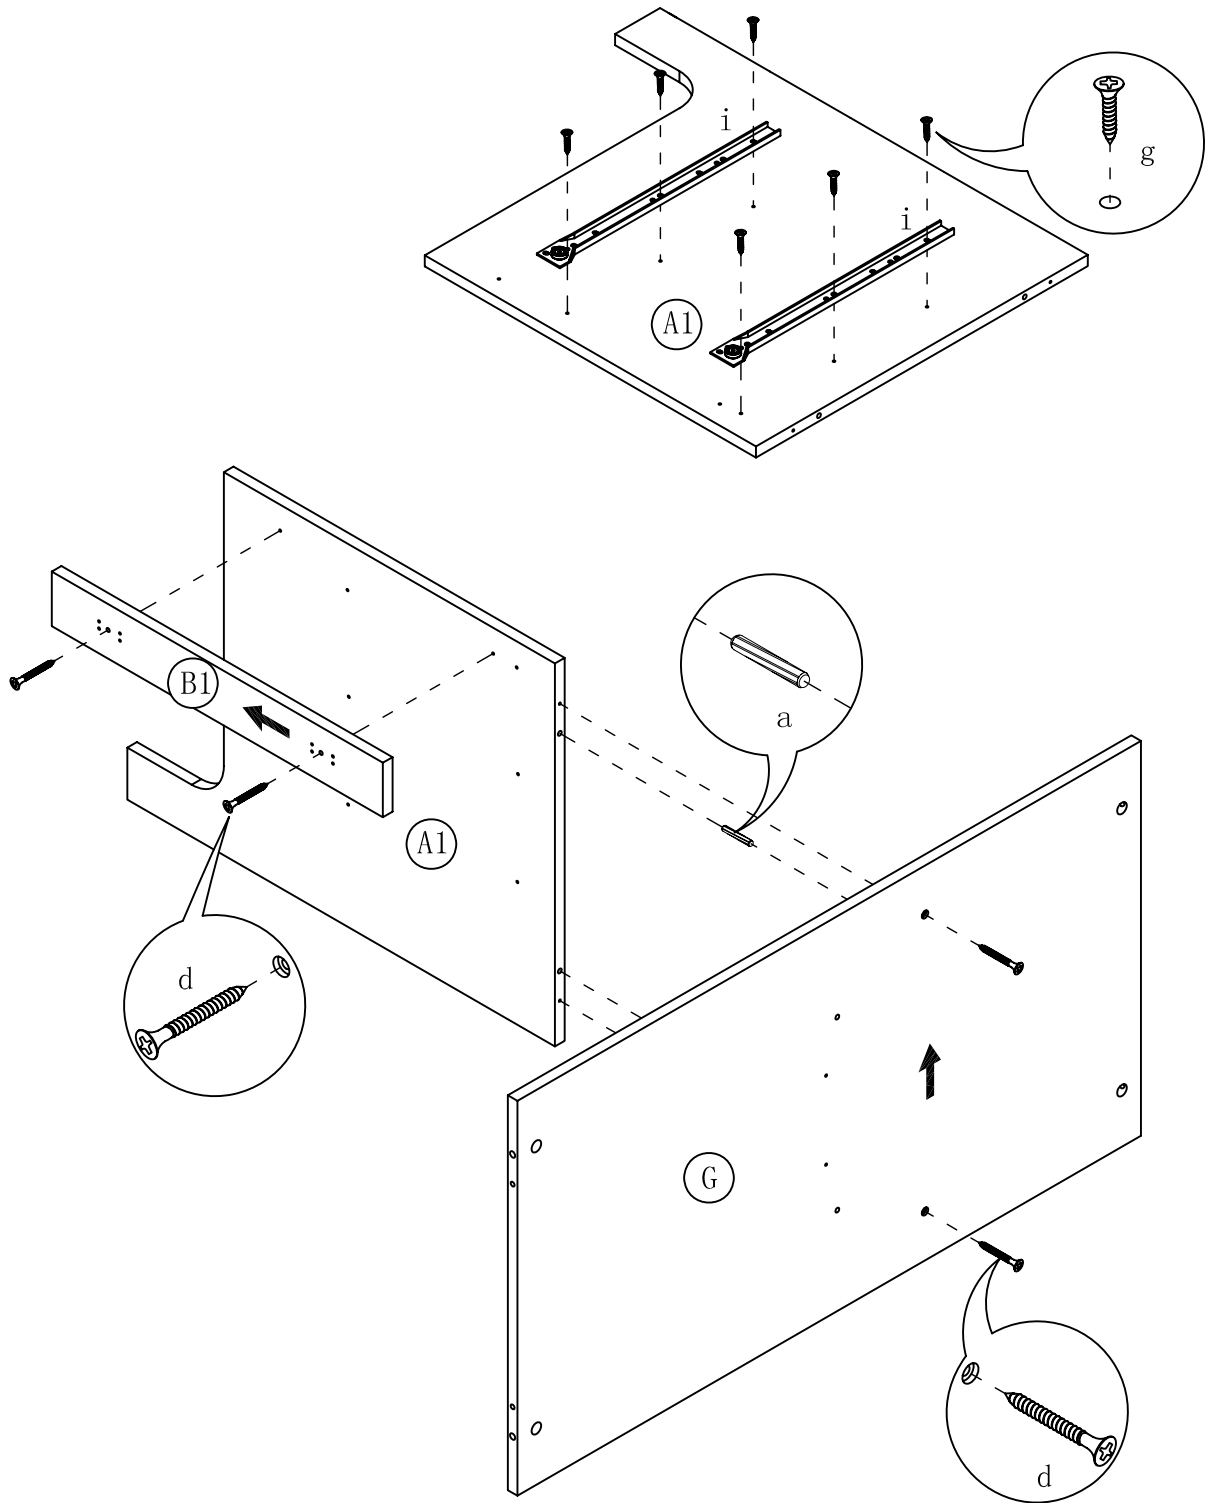



STEP 2

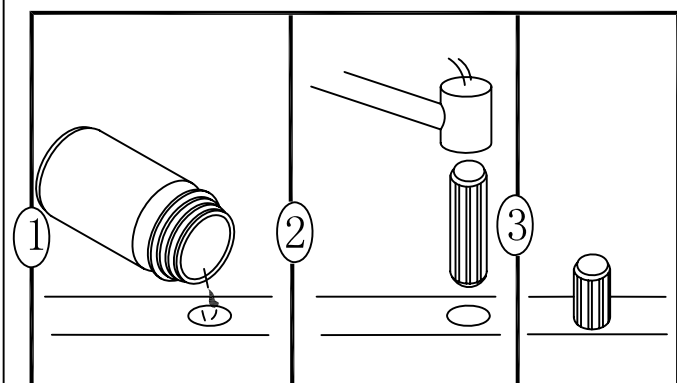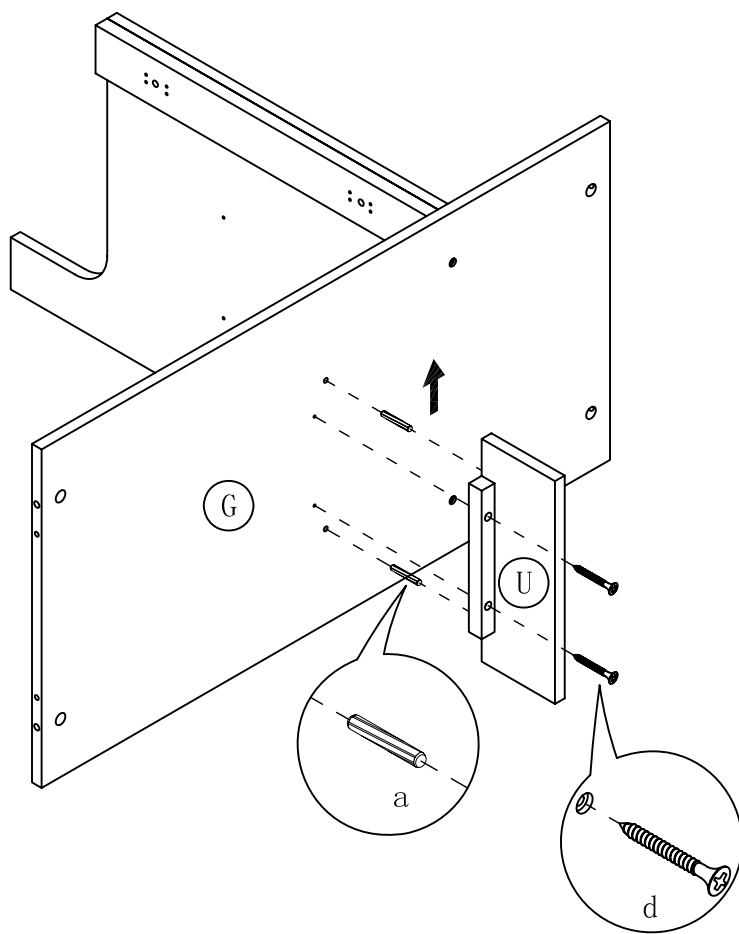


STEP 3

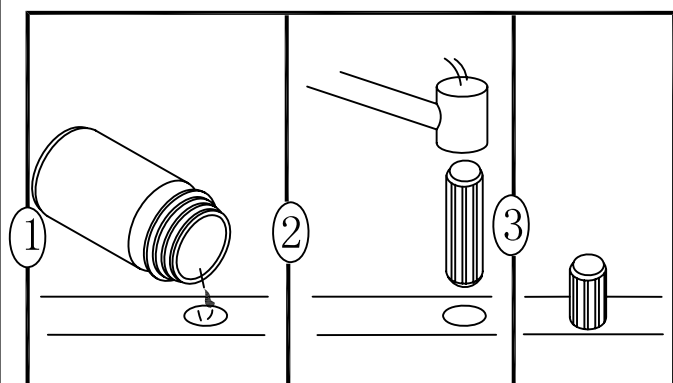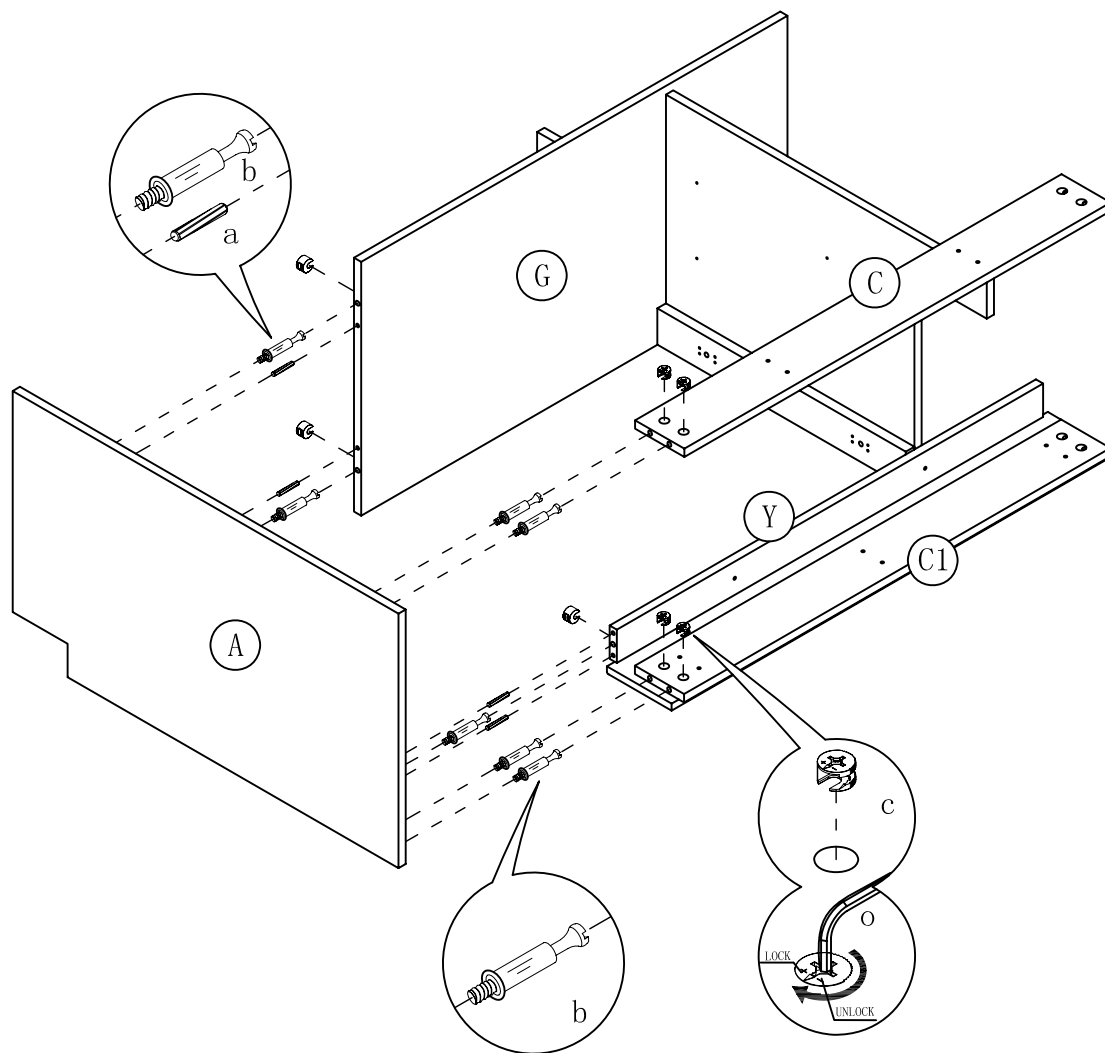



STEP 4

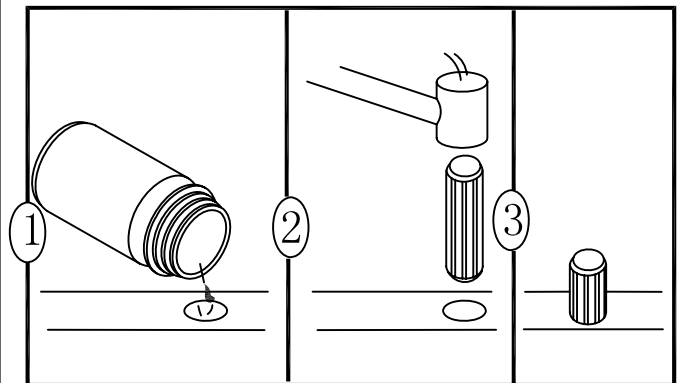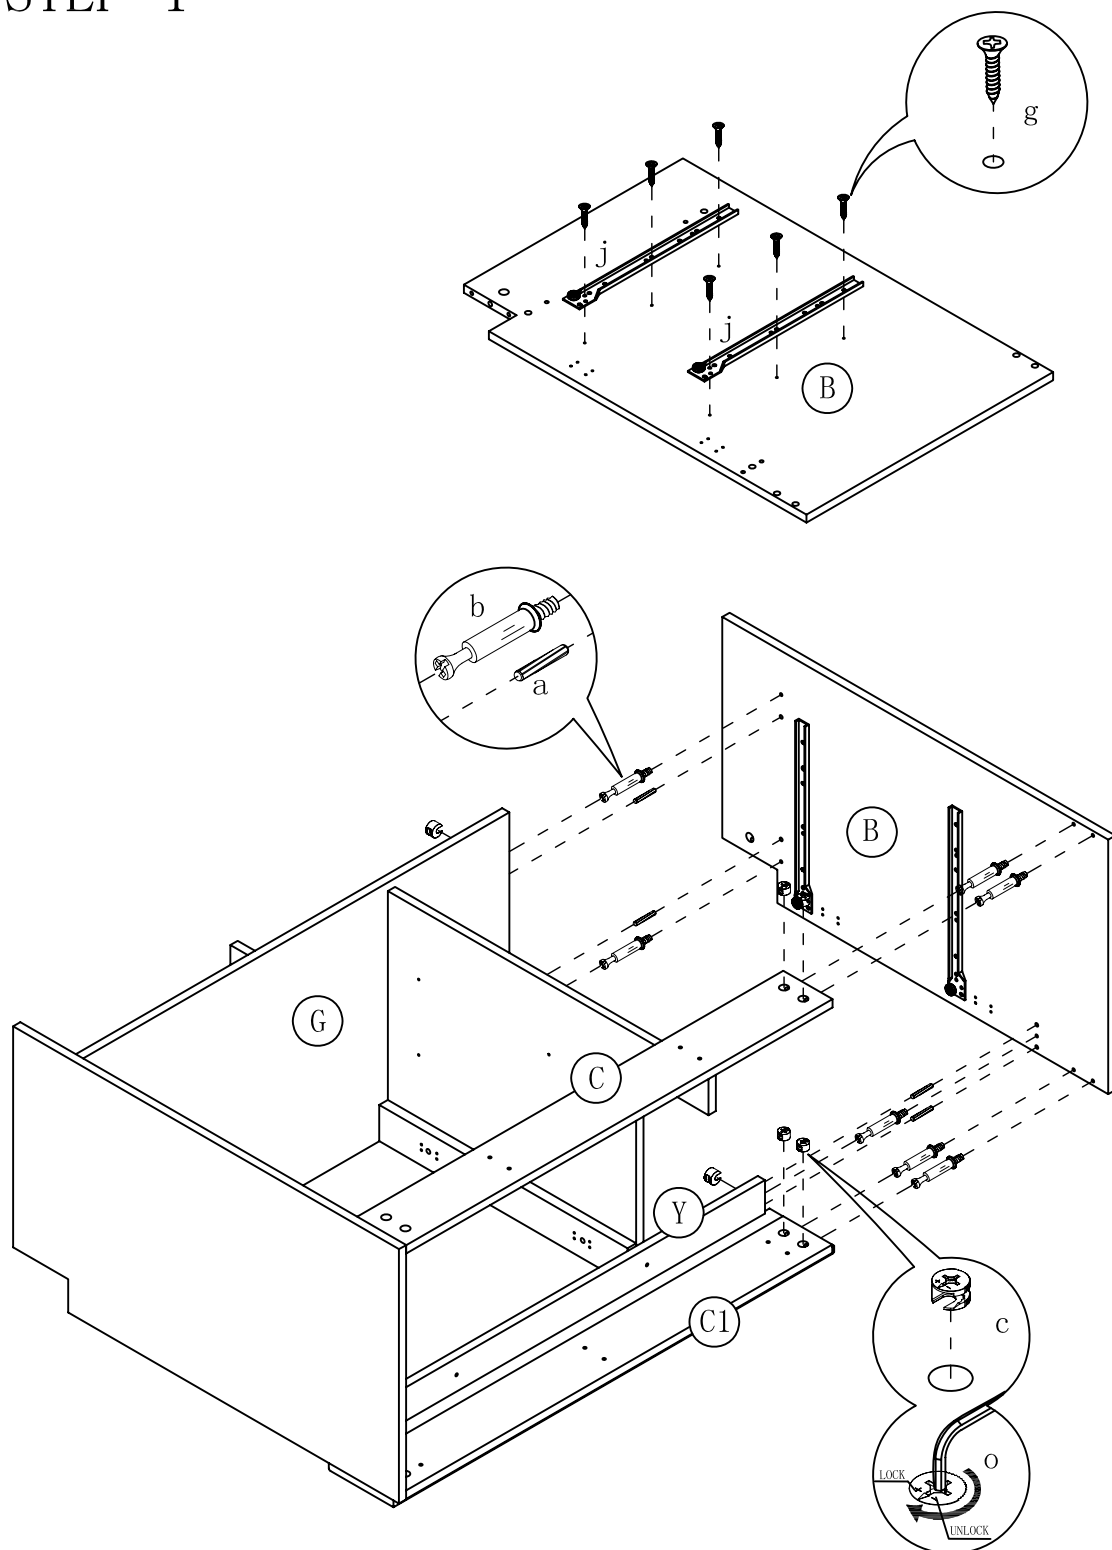



STEP 5

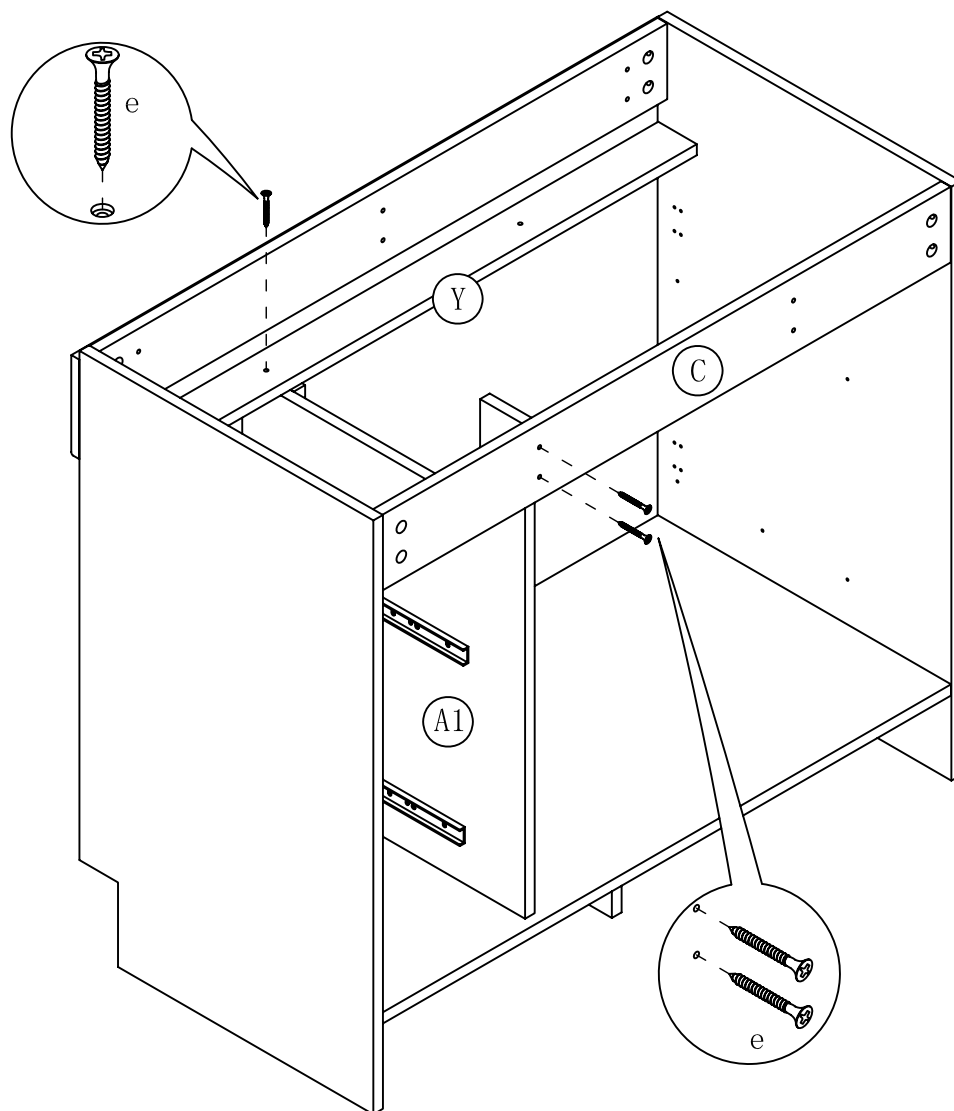


STEP 6

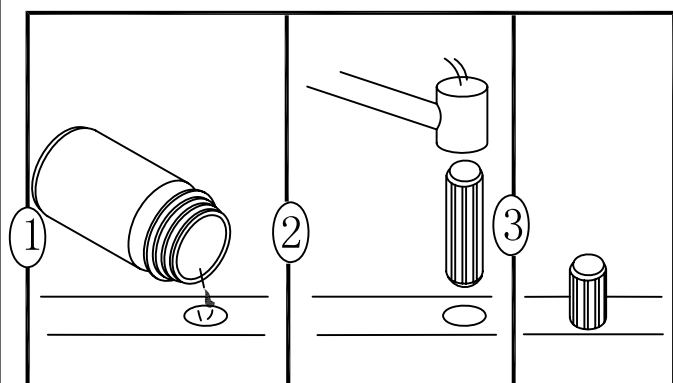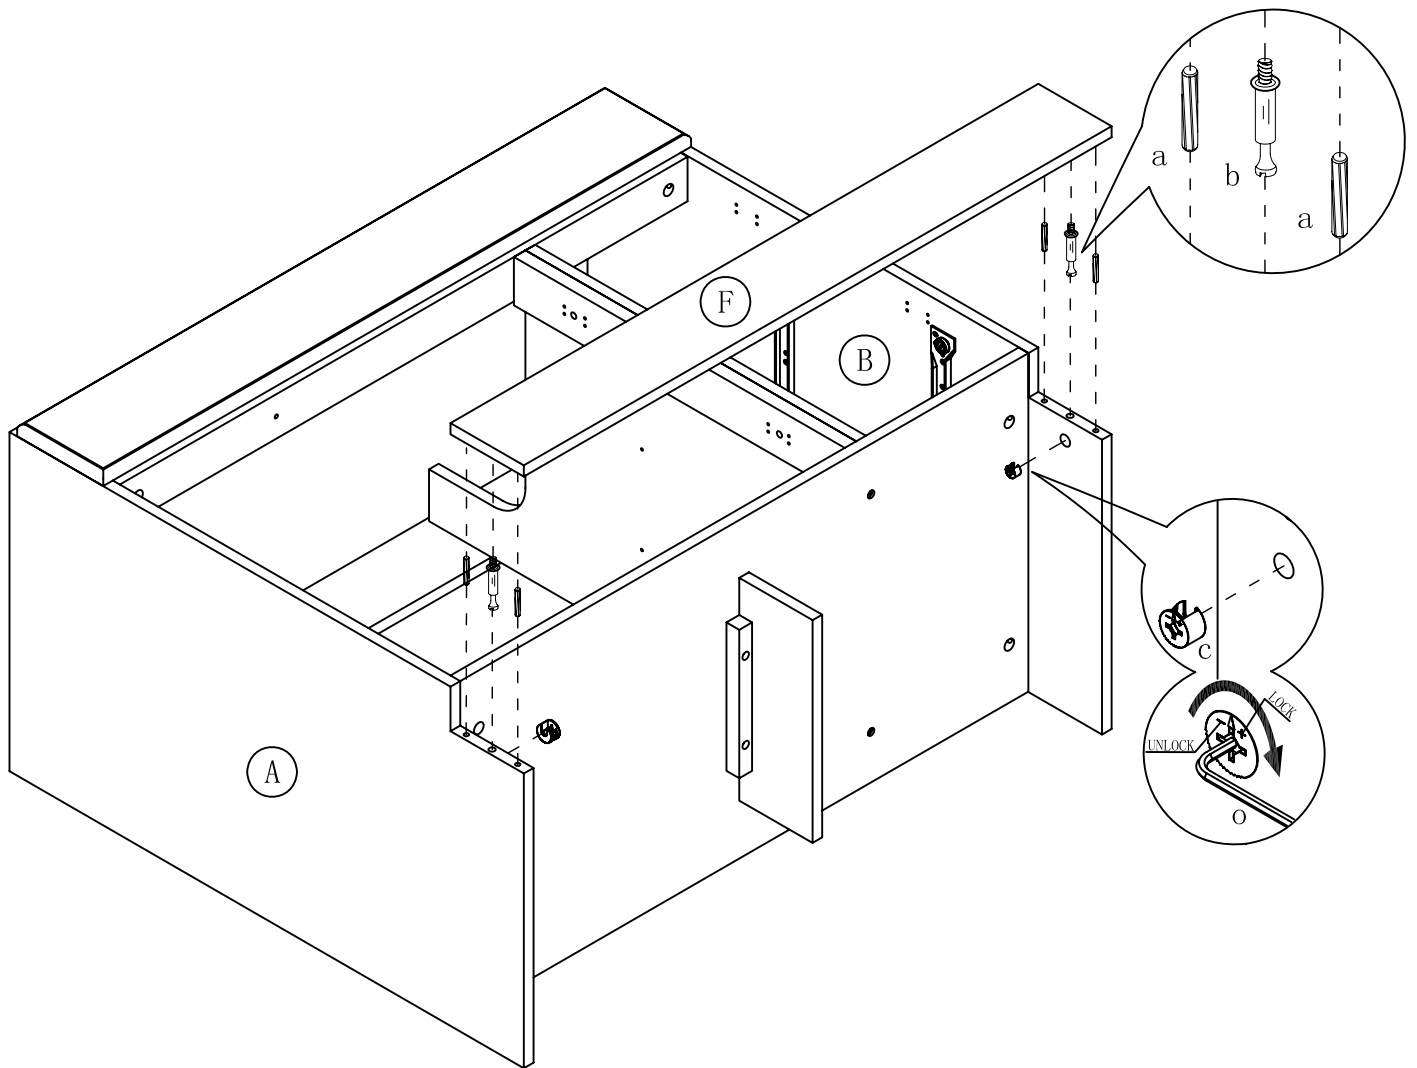

STEP 7

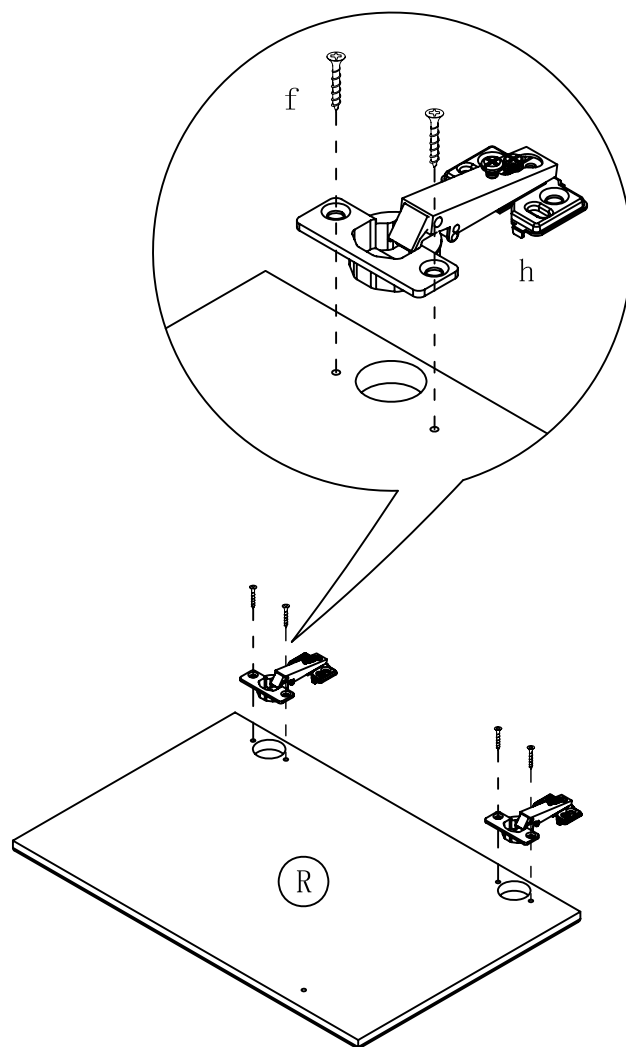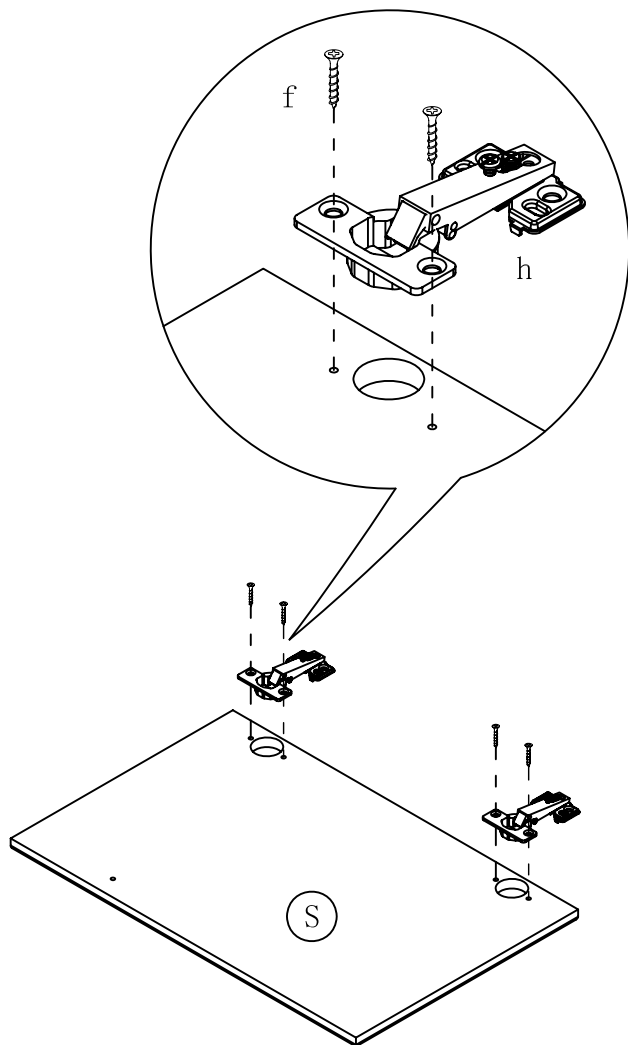


STEP 8

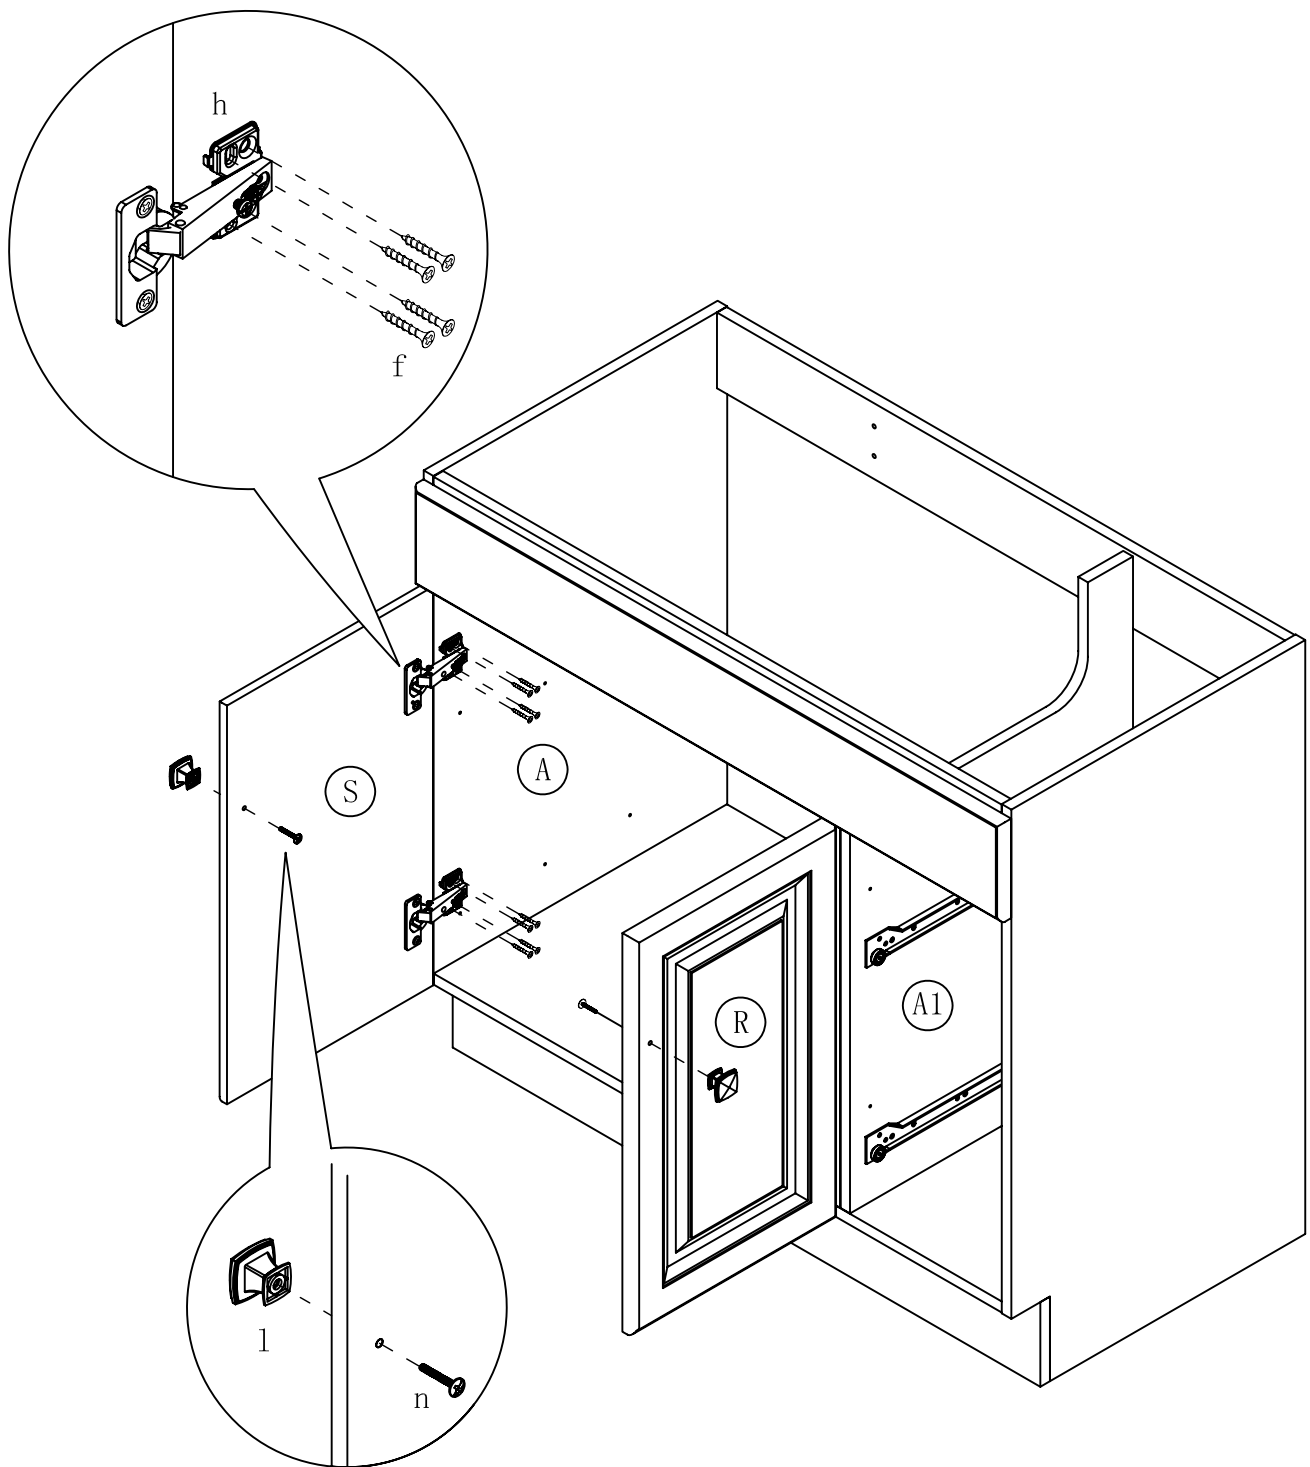


STEP 9



x 2

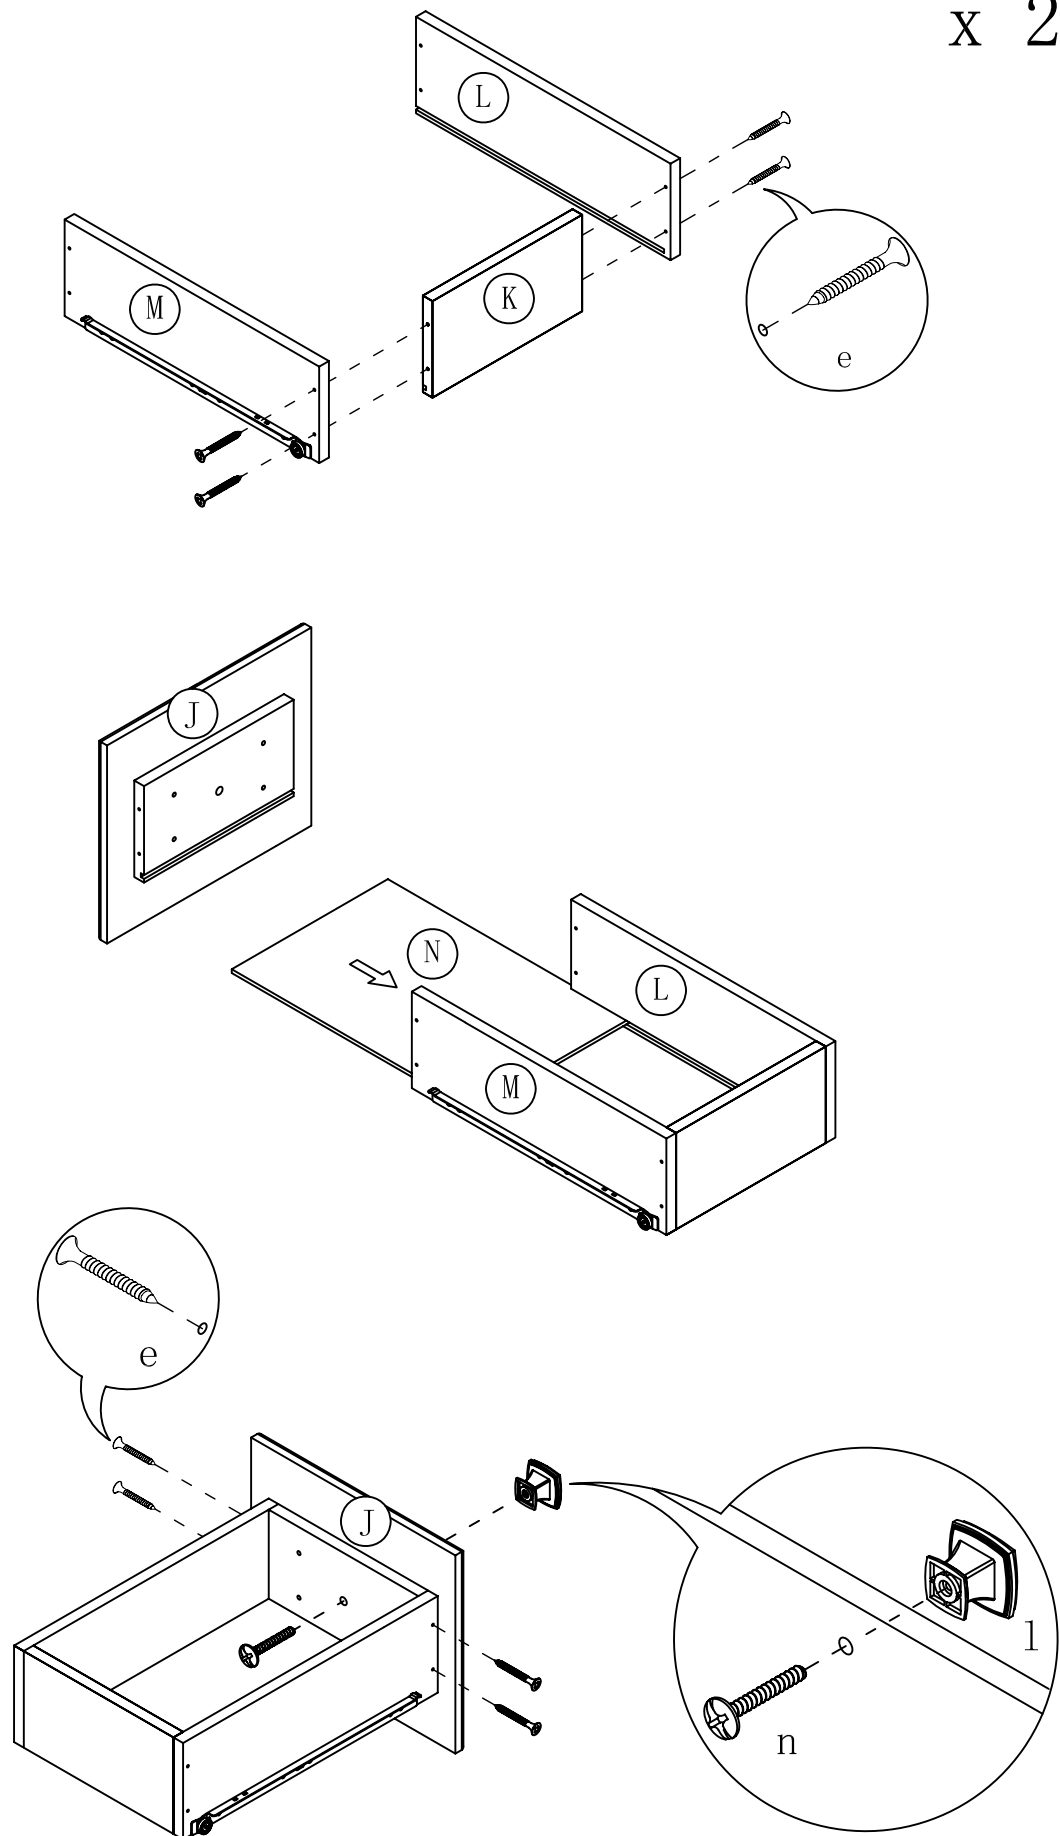



STEP 10

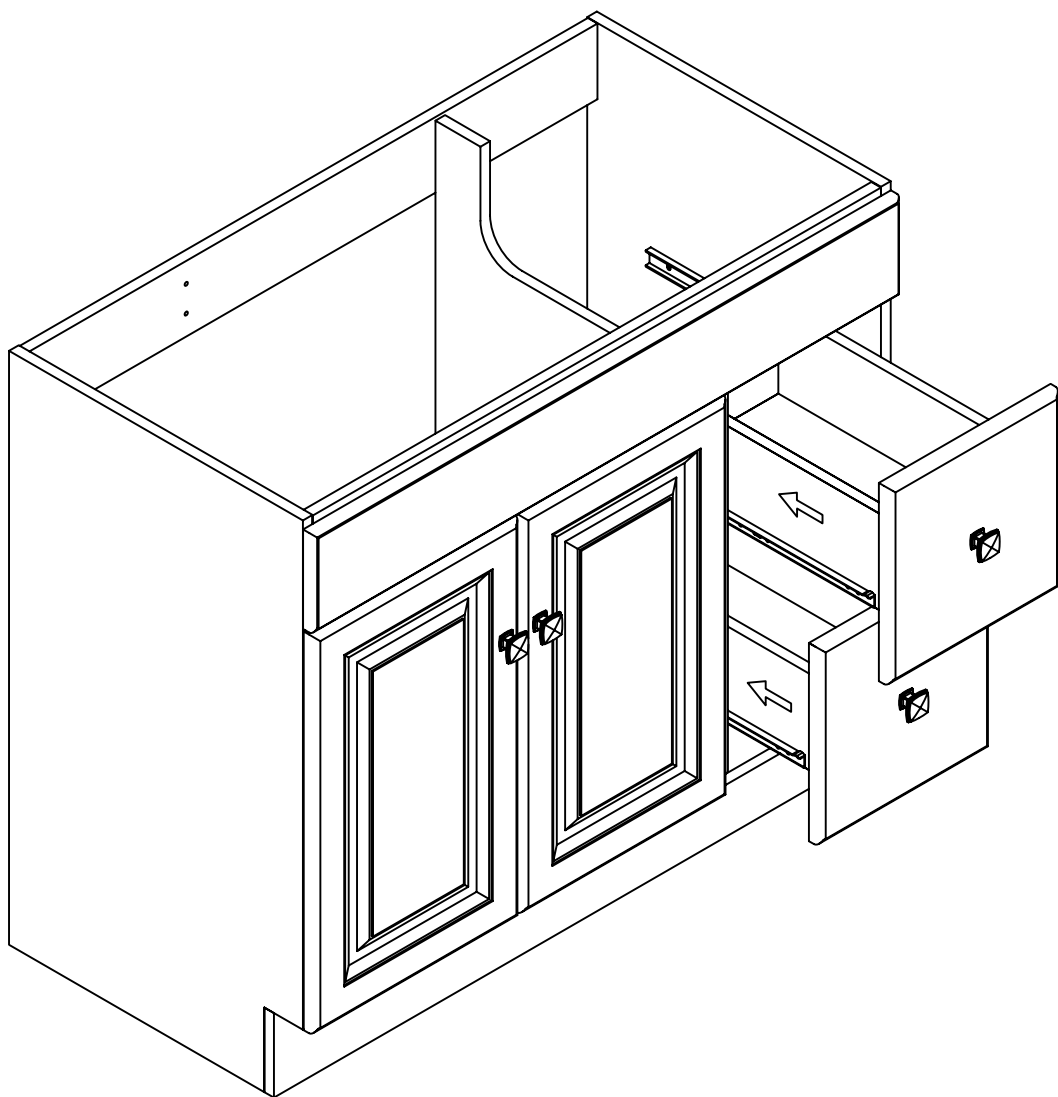




STEP 11

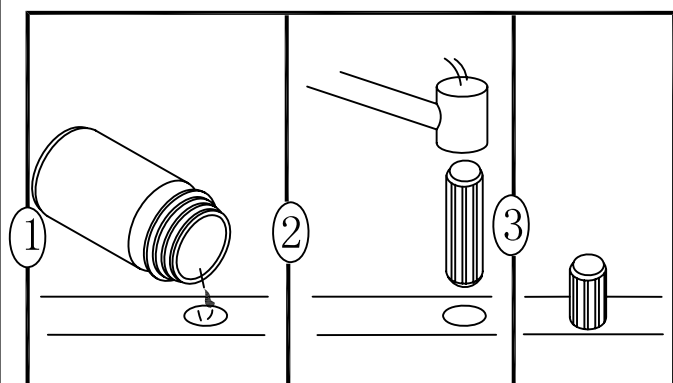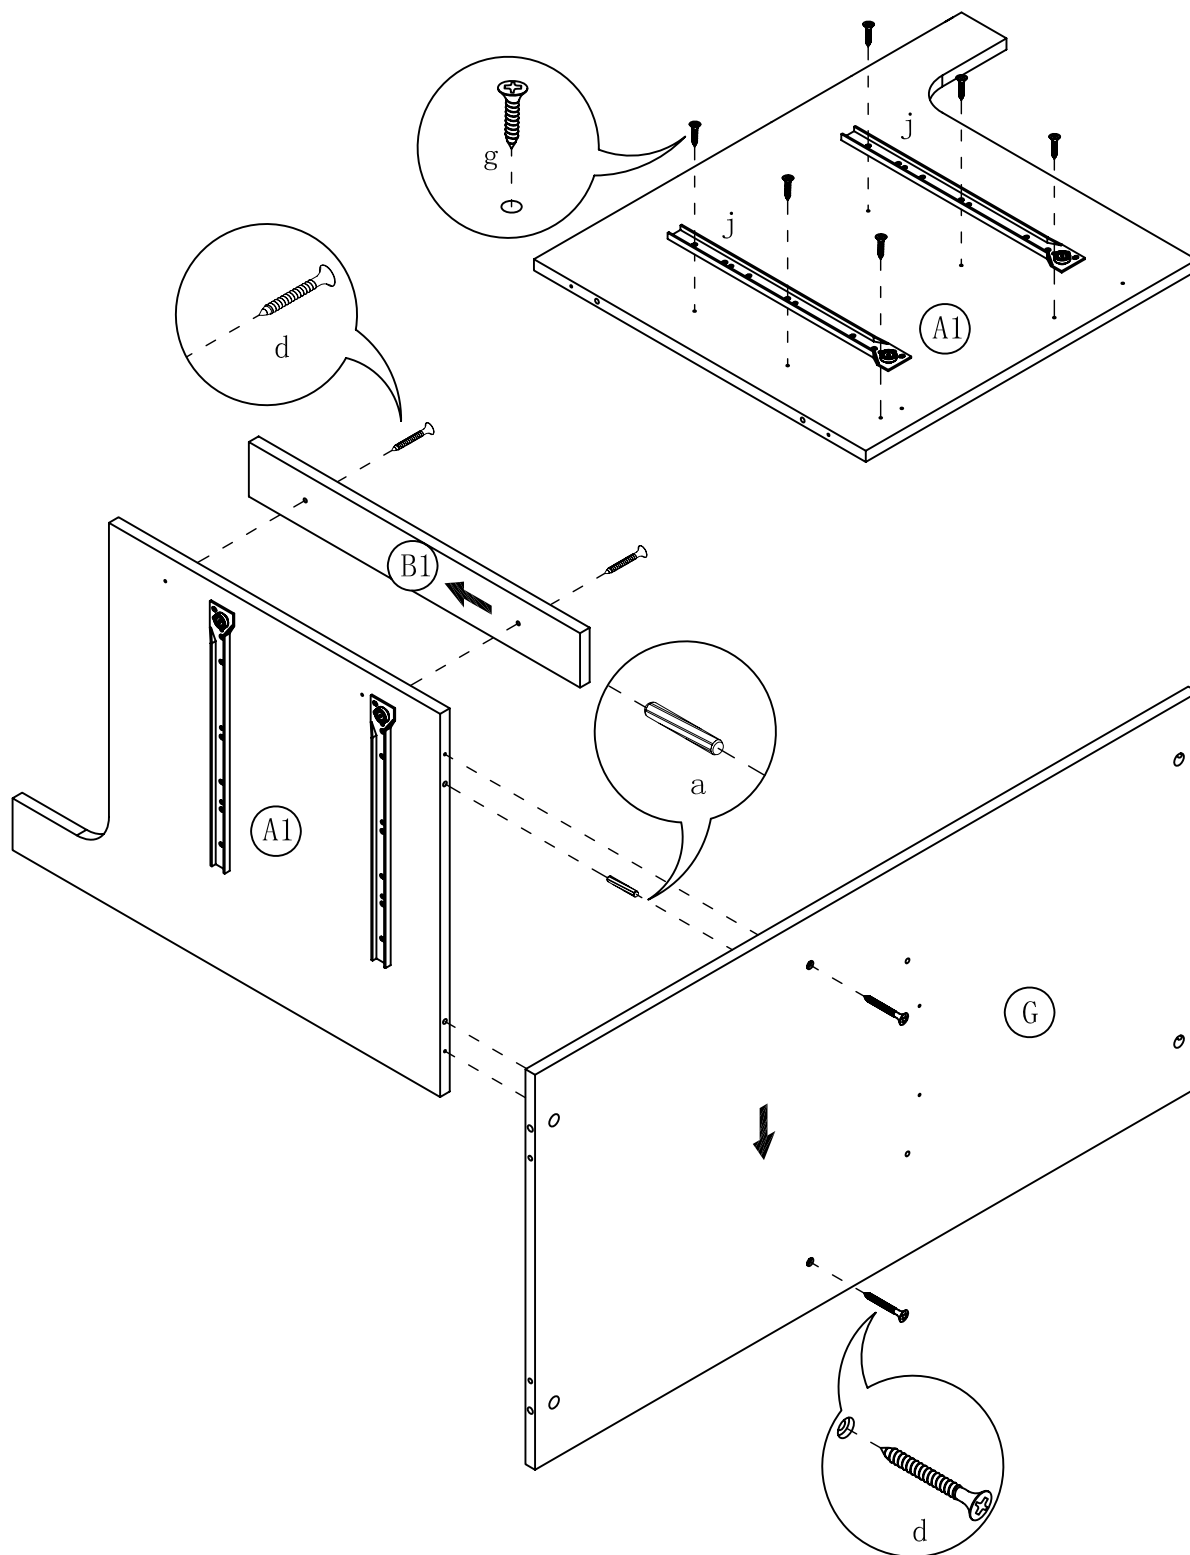



STEP 12

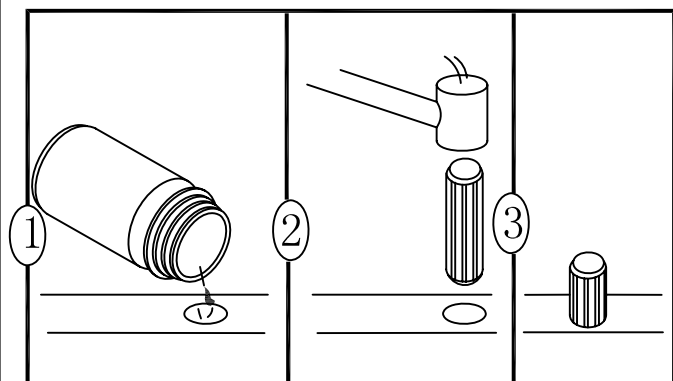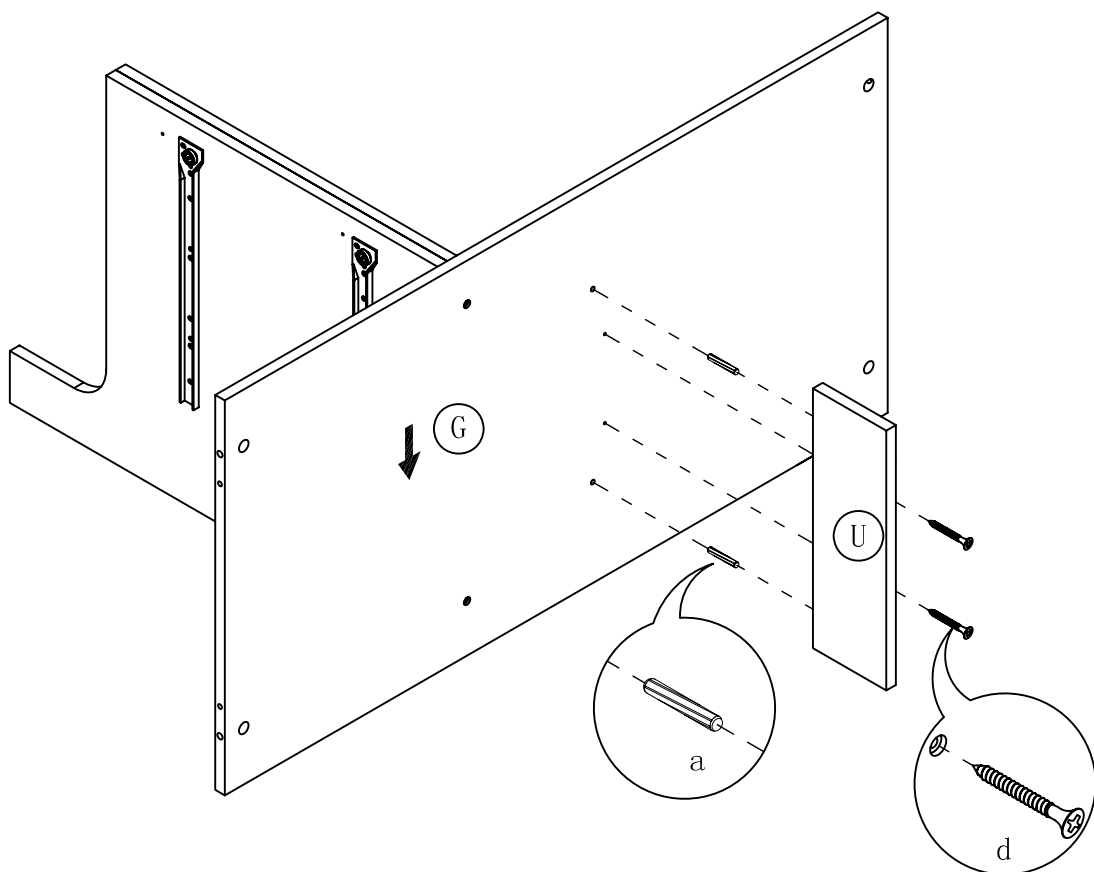


STEP 13

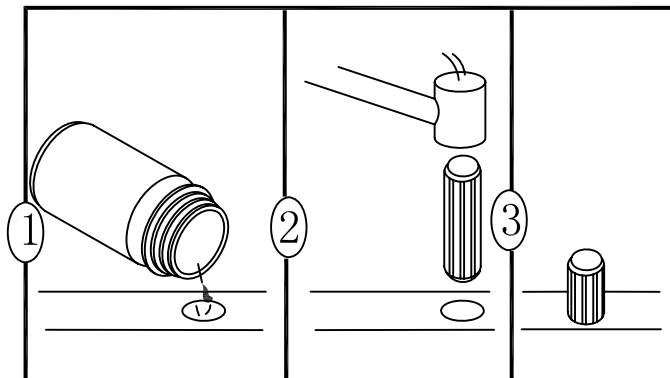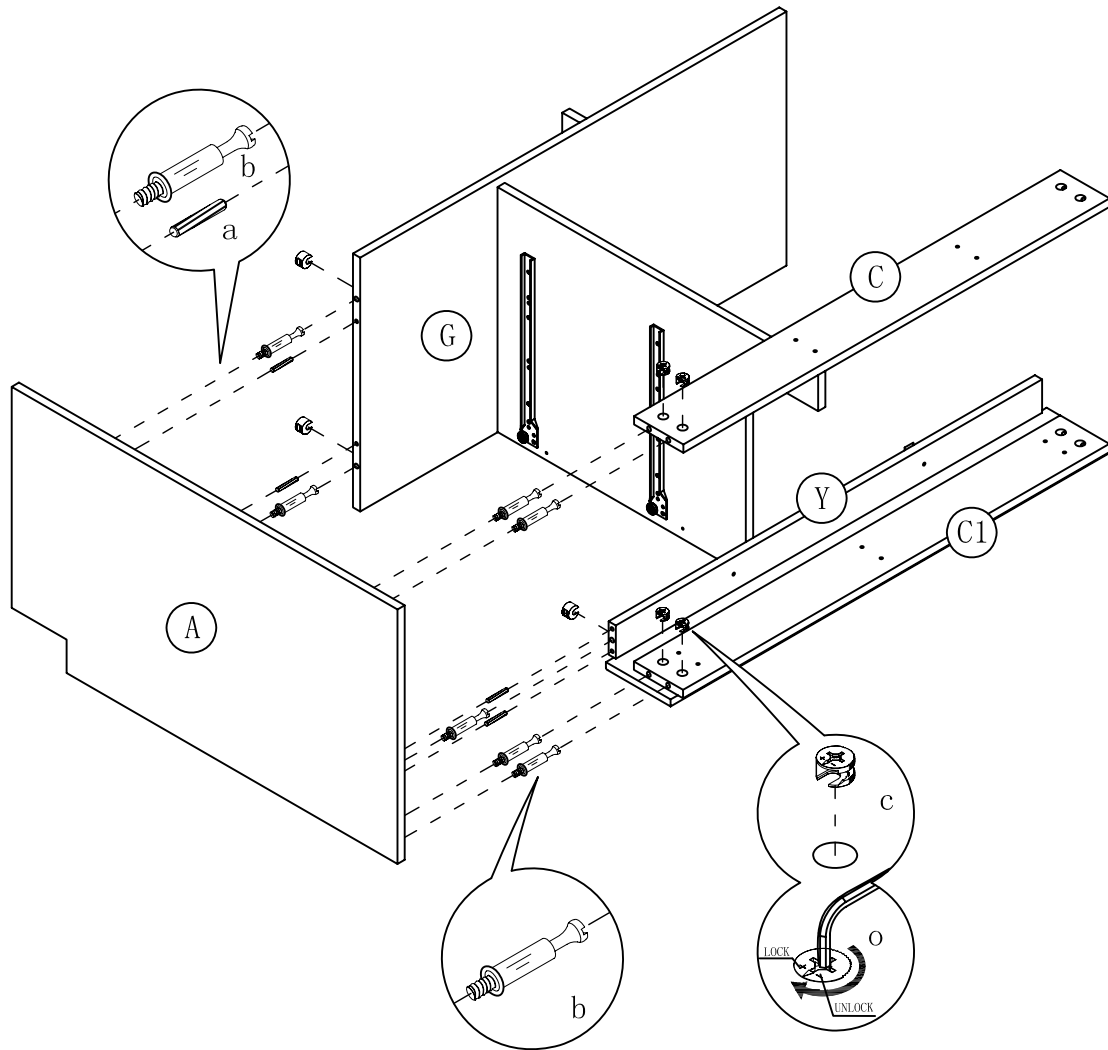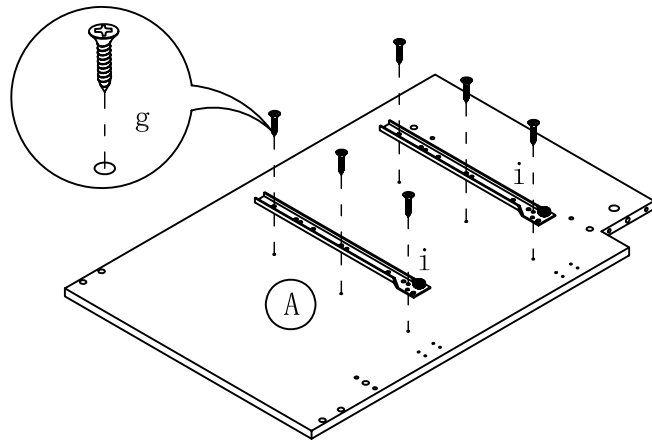



STEP 14

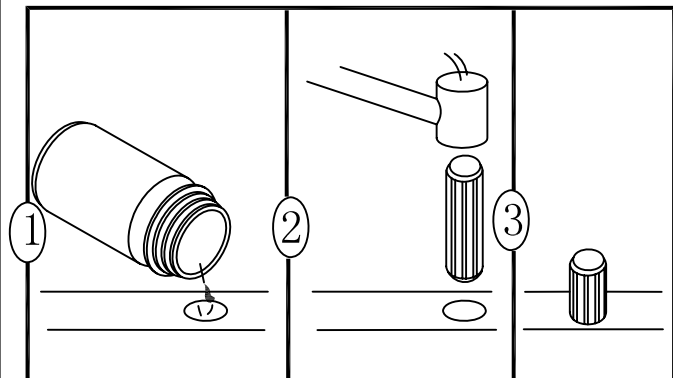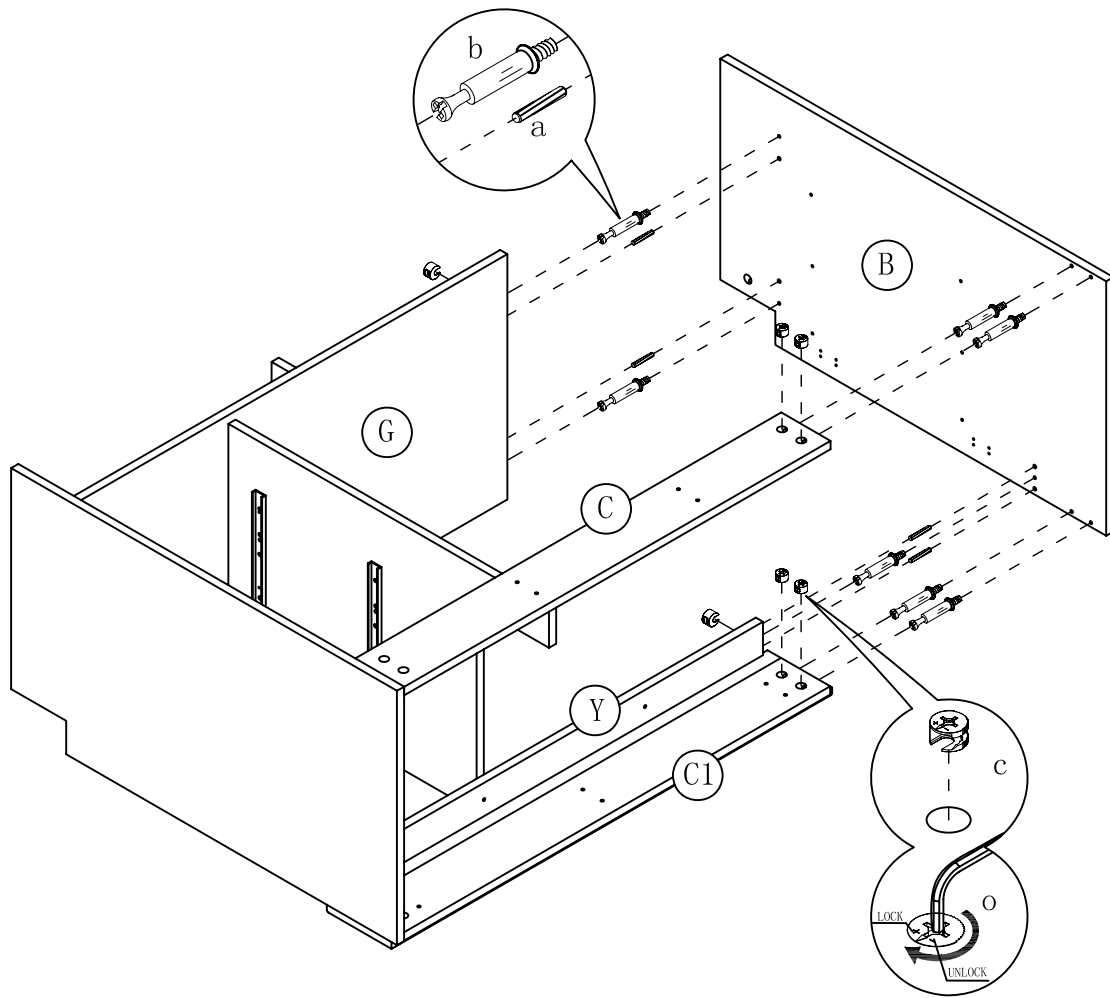



STEP 15

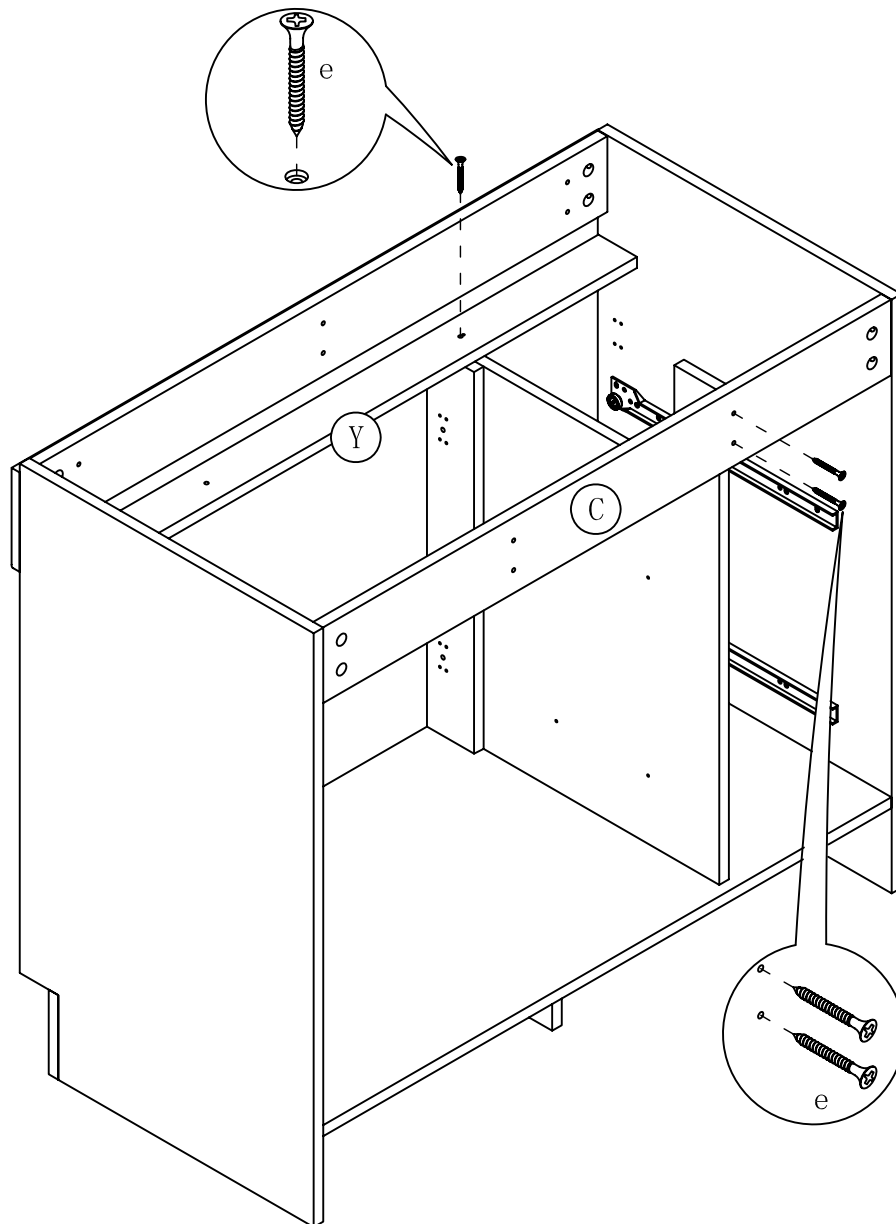


STEP 16

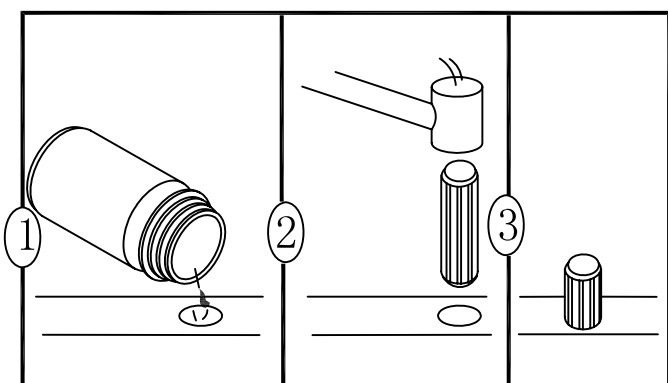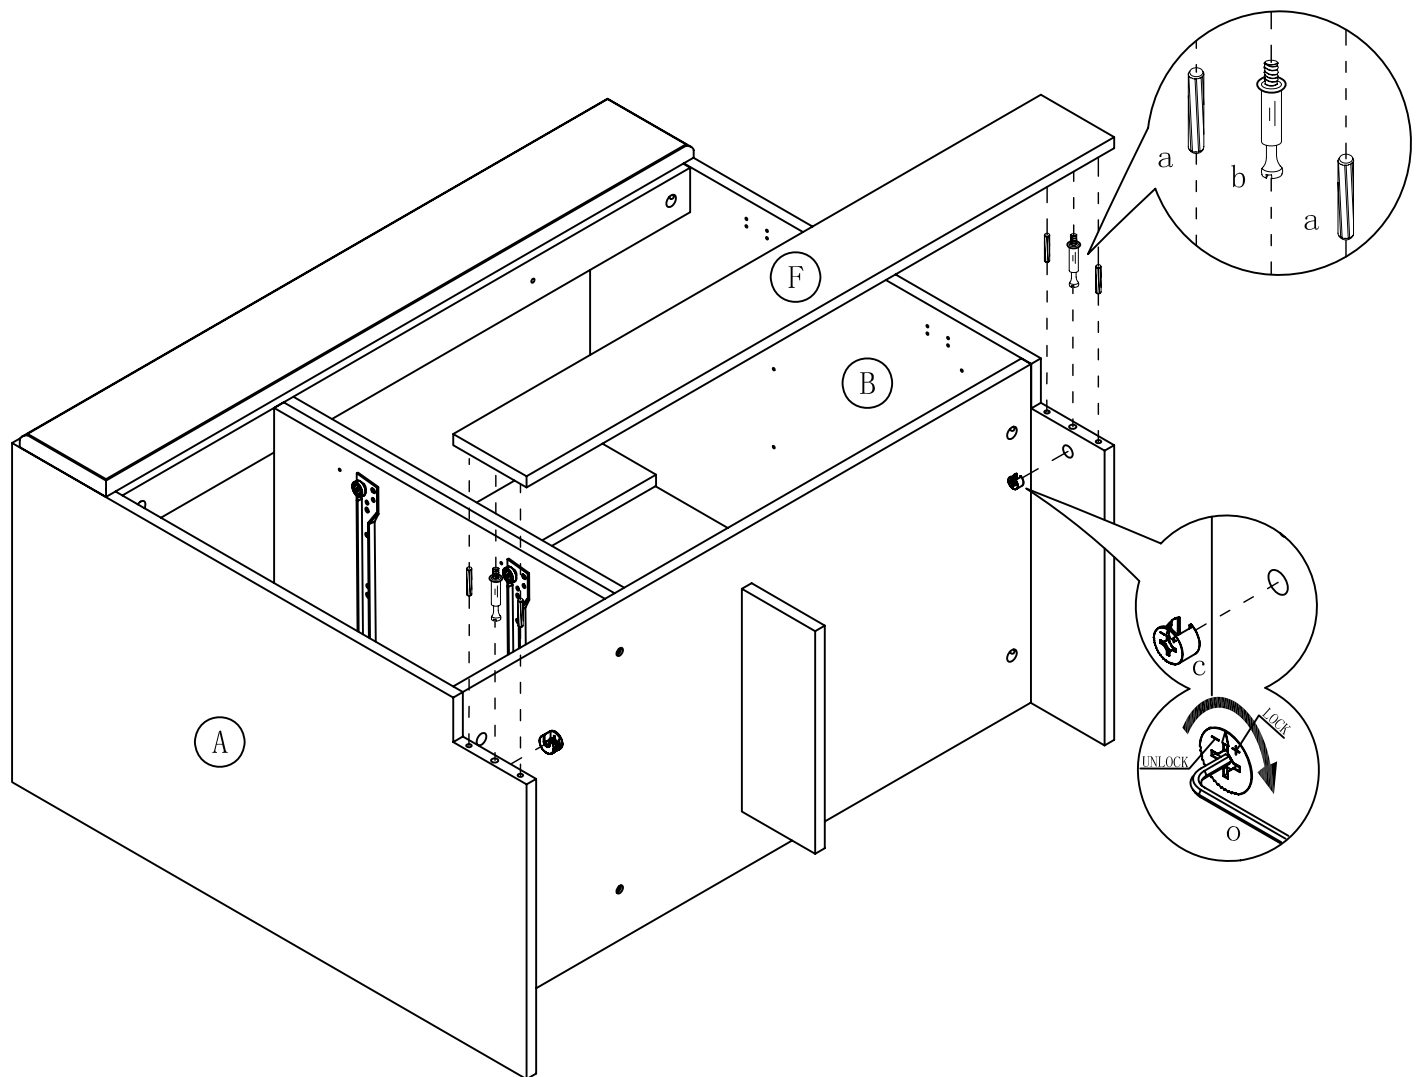

STEP 17

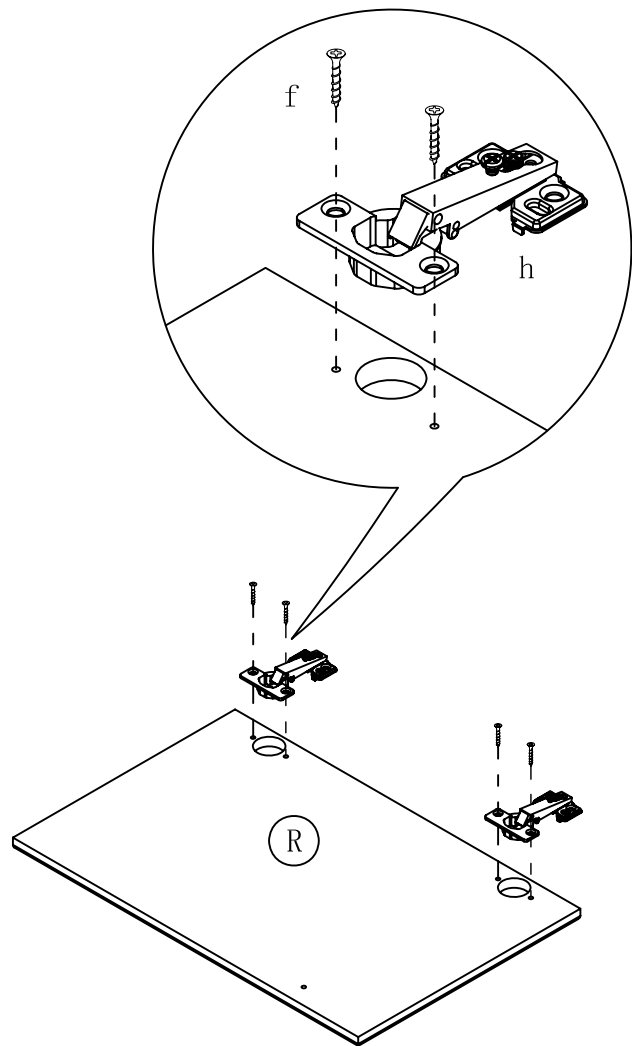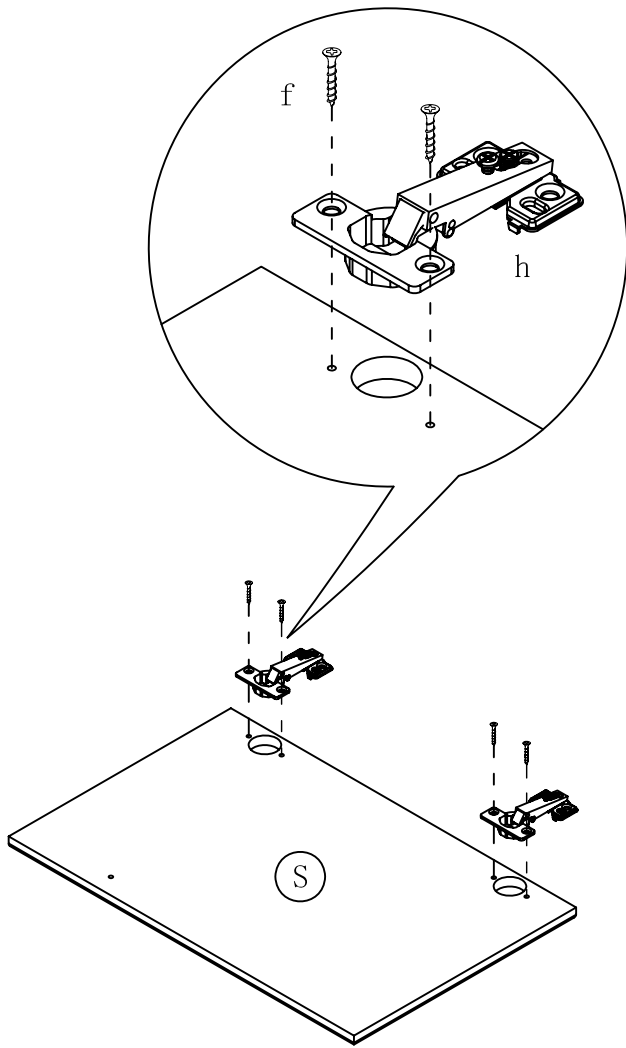


STEP 18

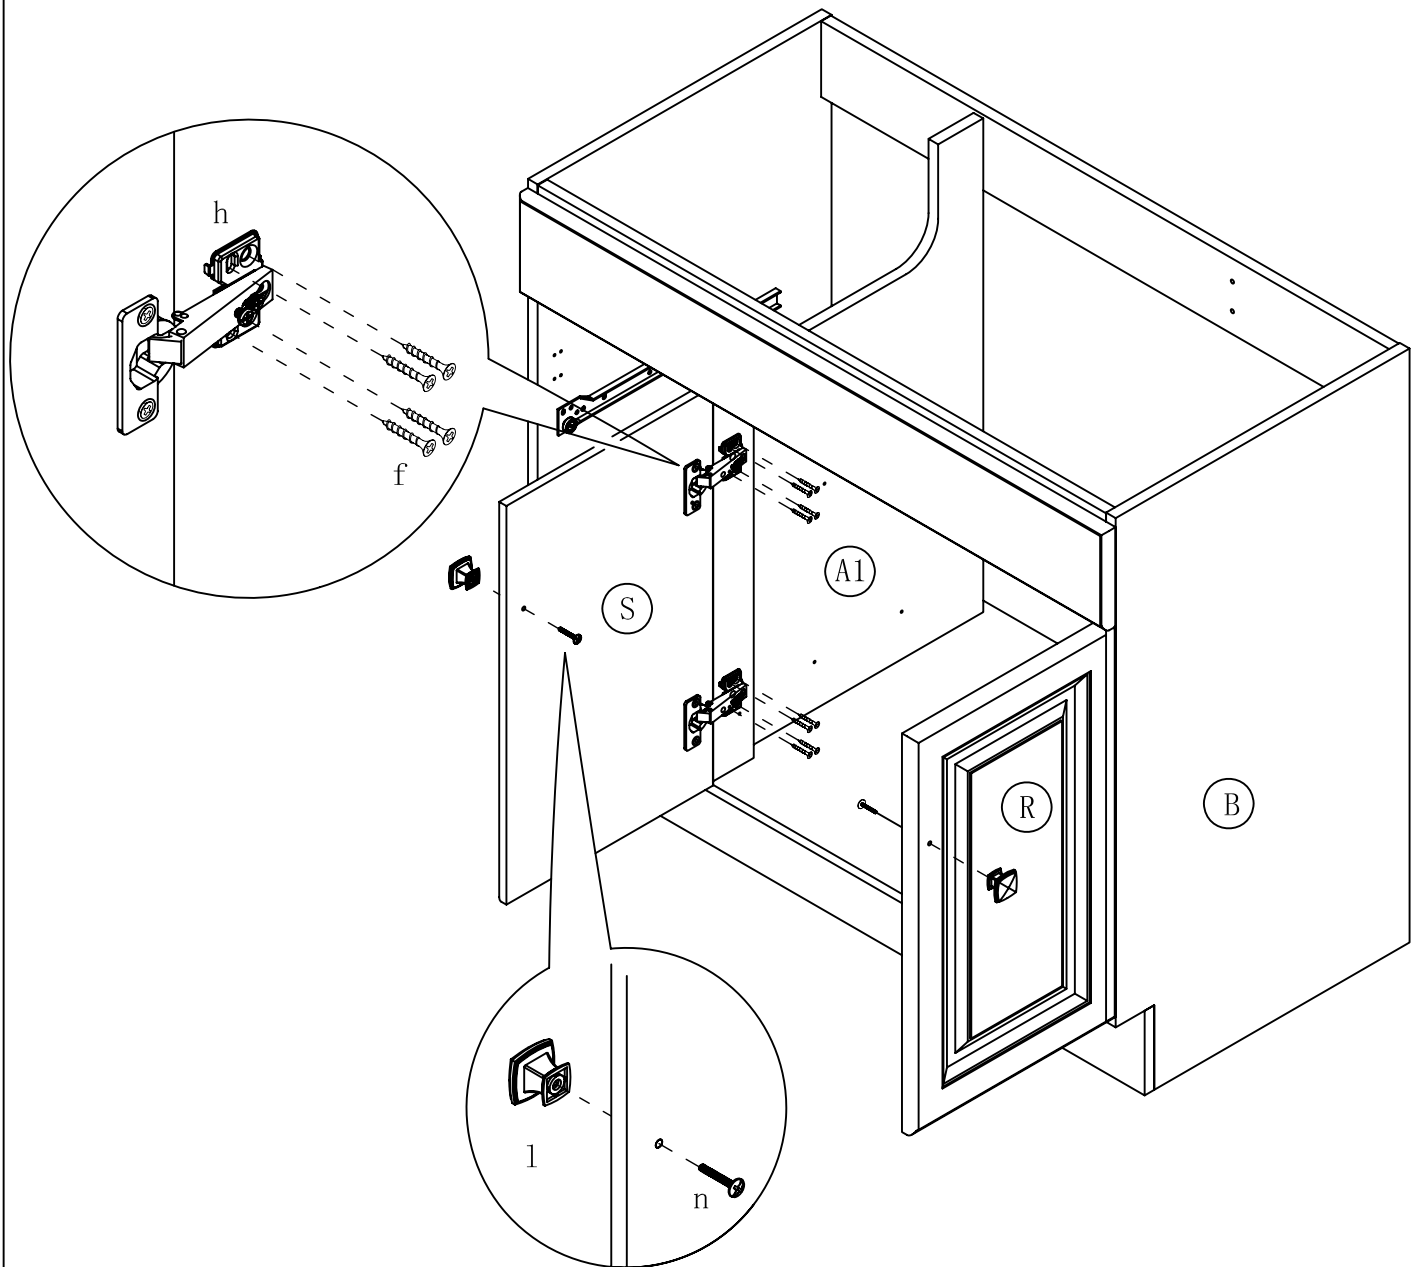

STEP 19

x 2

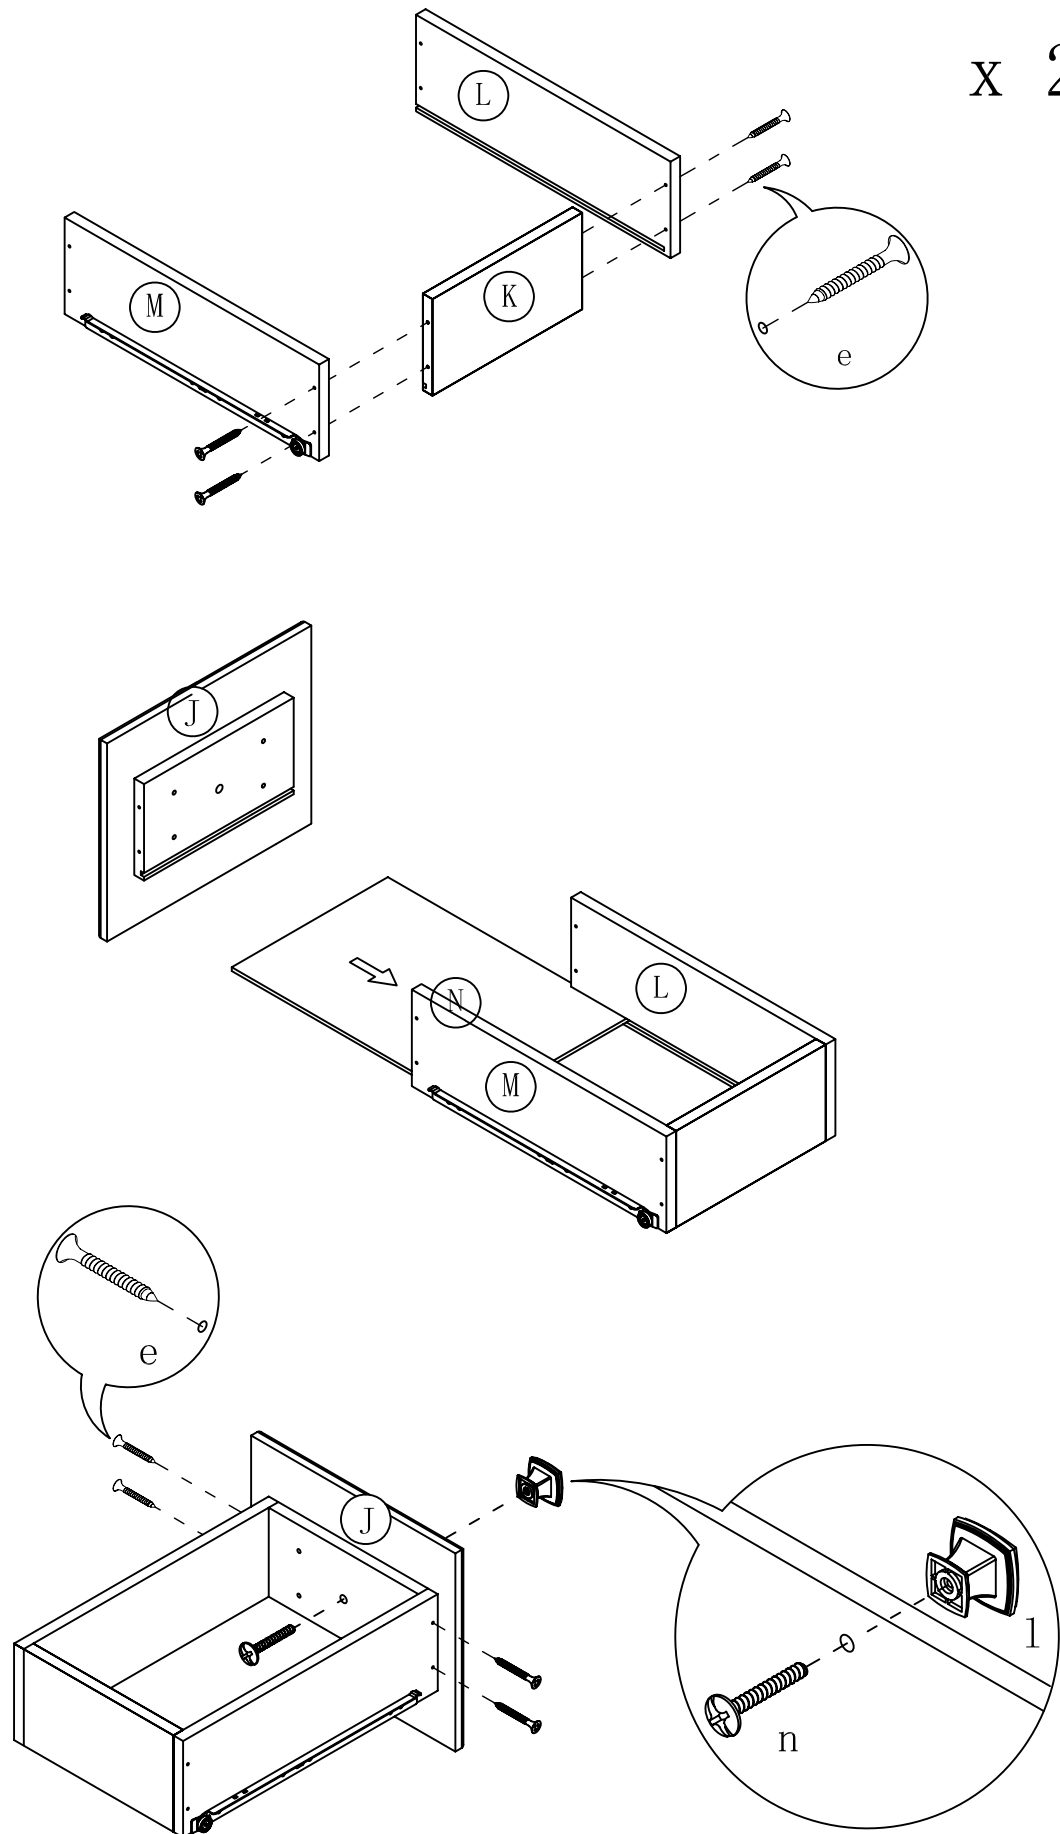

STEP 20

