




www.todaysdesignhouse.com

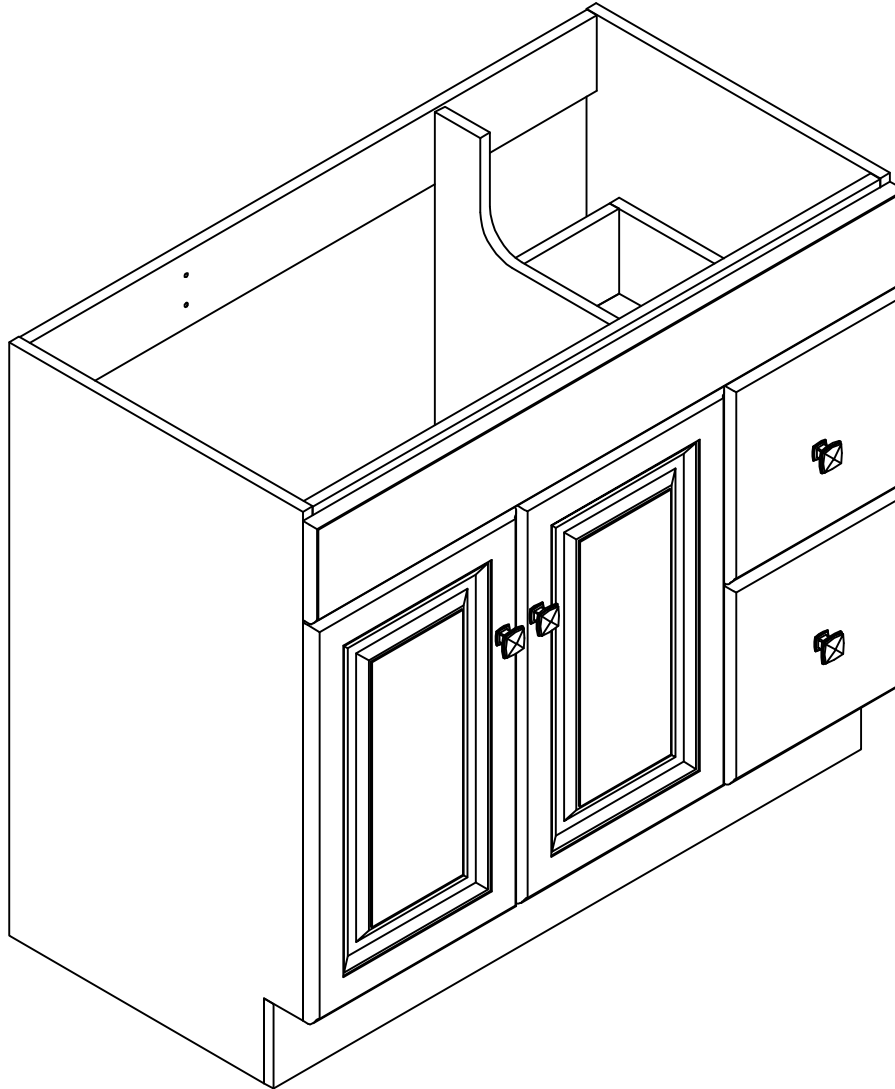


545087 • 545095

# ASSEMBLY INSTRUCTIONS


DHI Corp. • 5205 W. Donges Bay Rd. • Mequon, WI 53092 • 800.558.8700






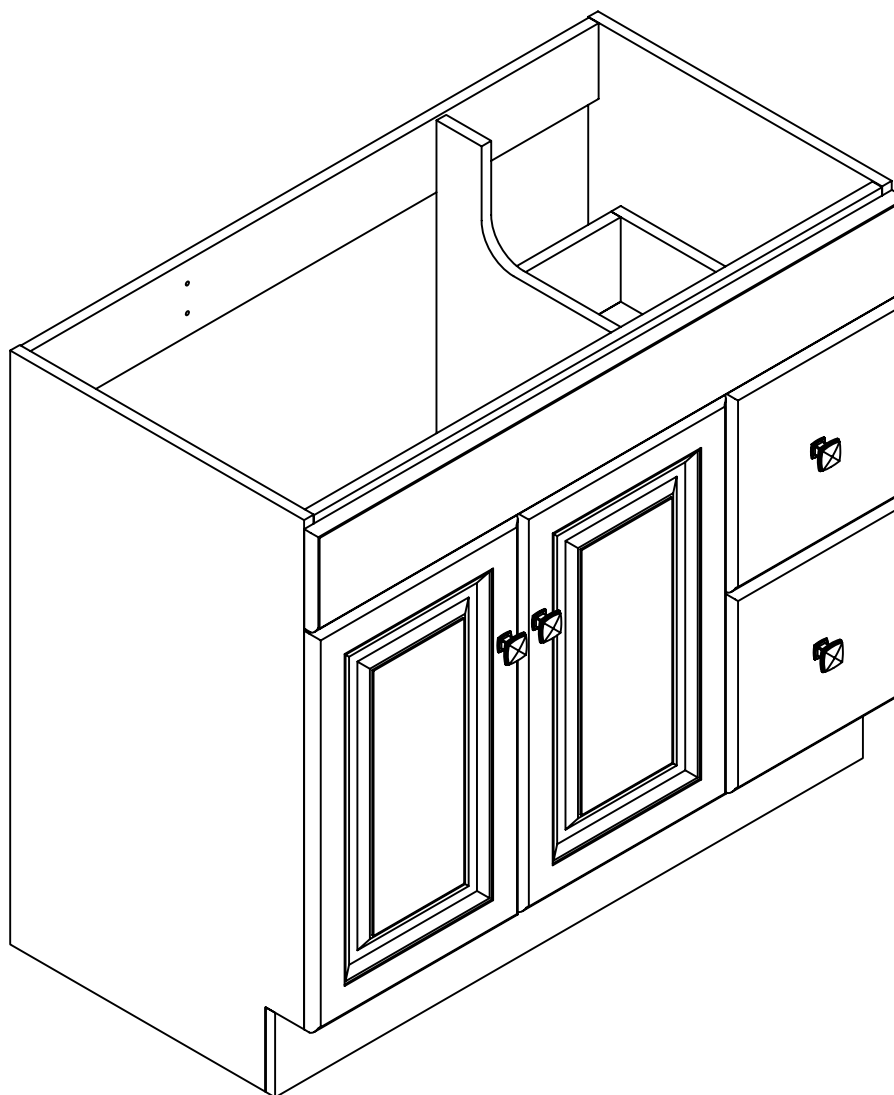


PLEASE FOLLOW STEP1~STEP10 IF YOU  
WOULD LIKE THE DOOR INSTALL ON THE  
LEFT SIDE AND THE DRAWERS INSTALL  
ON THE RIGHT SIDE


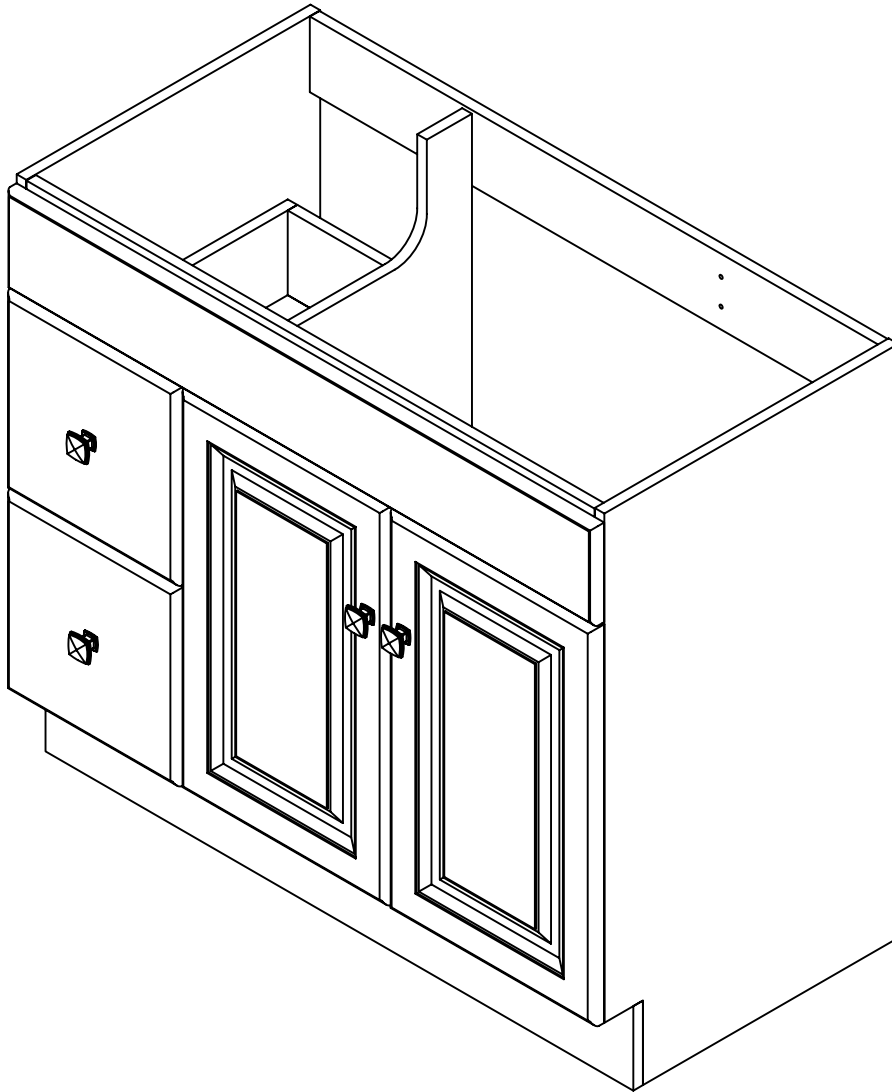


PLEASE FOLLOW STEP11~STEP20 IF YOU  
WOULD LIKE THE DOOR INSTALL ON THE  
RIGHT SIDE AND THE DRAWERS INSTALL  
ON THE LEFT SIDE



# STEP 1

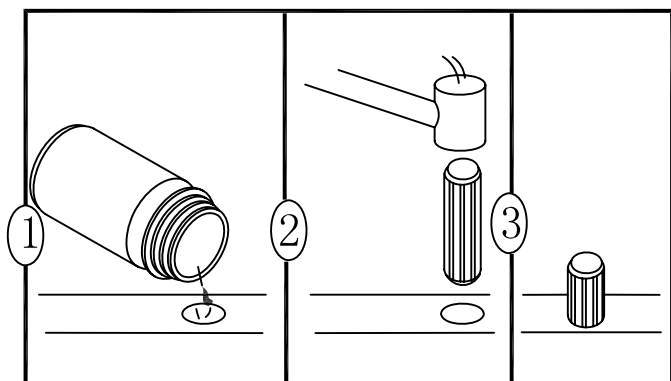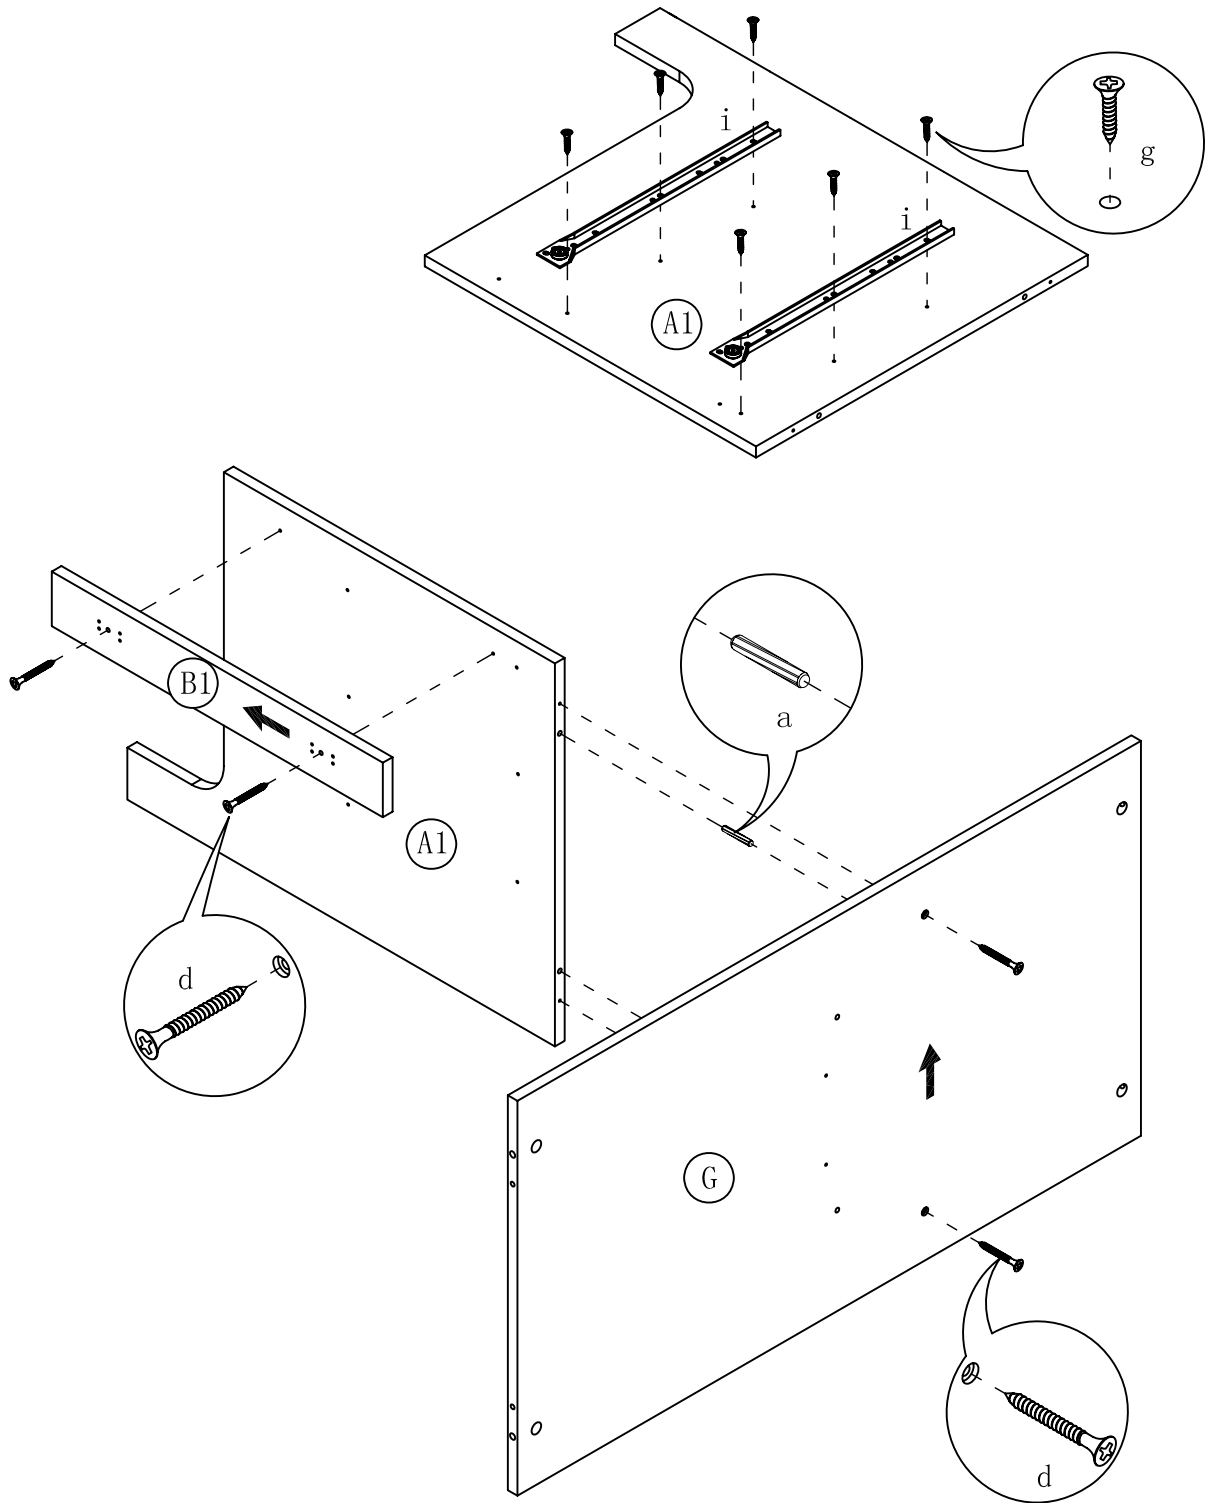

# STEP 2

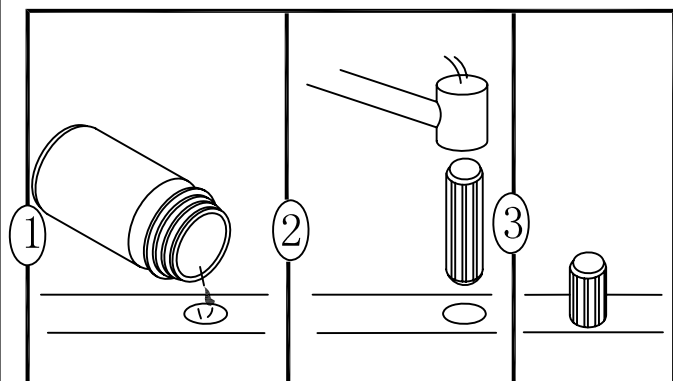
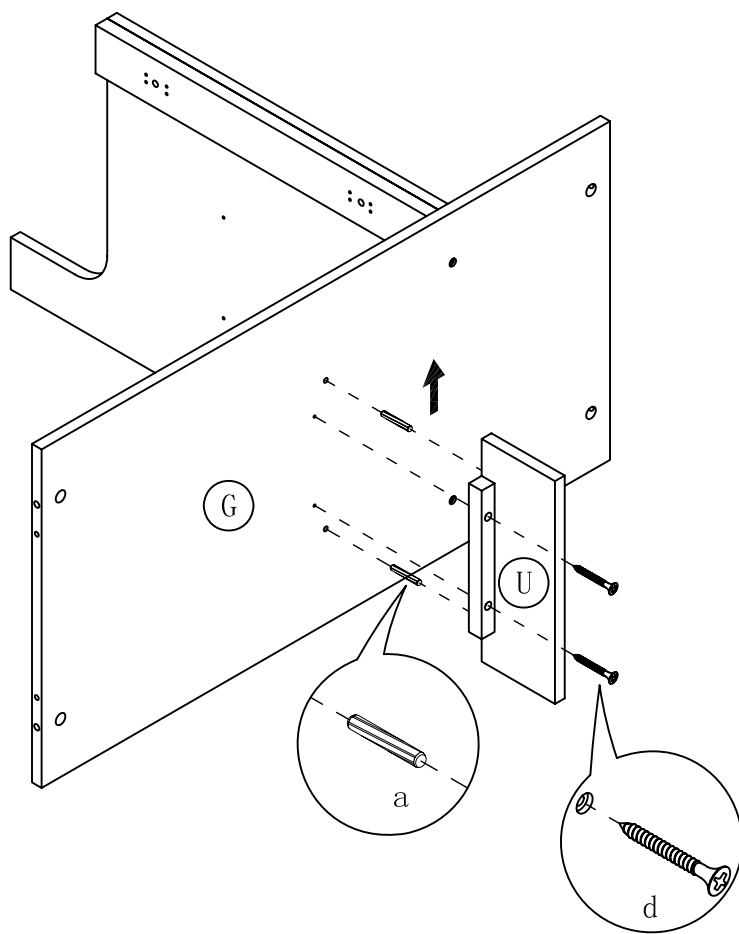


# STEP 3

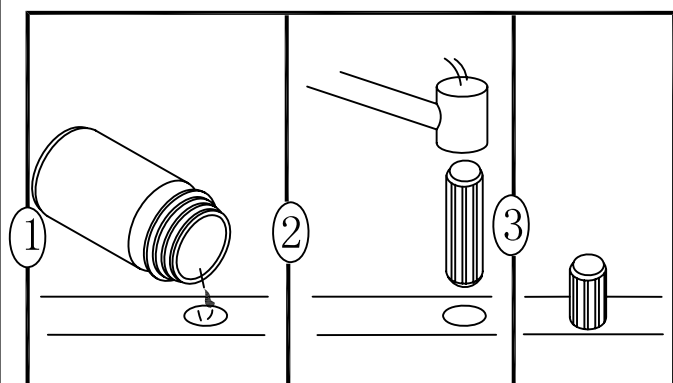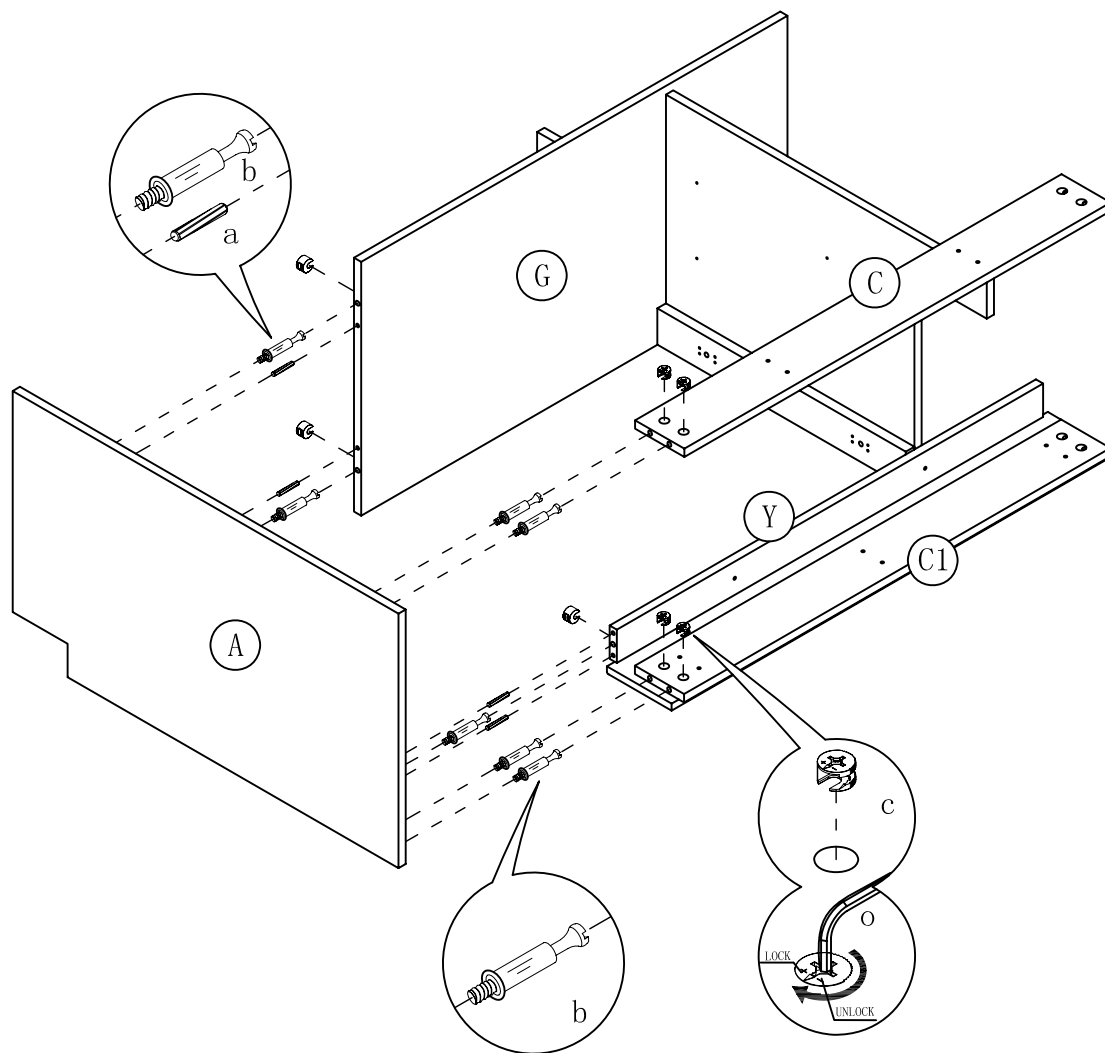






# STEP 4

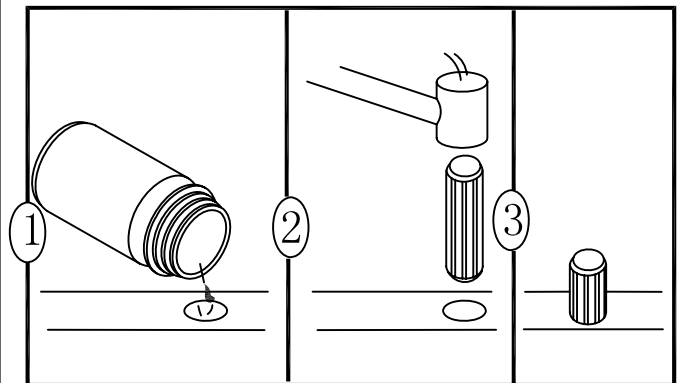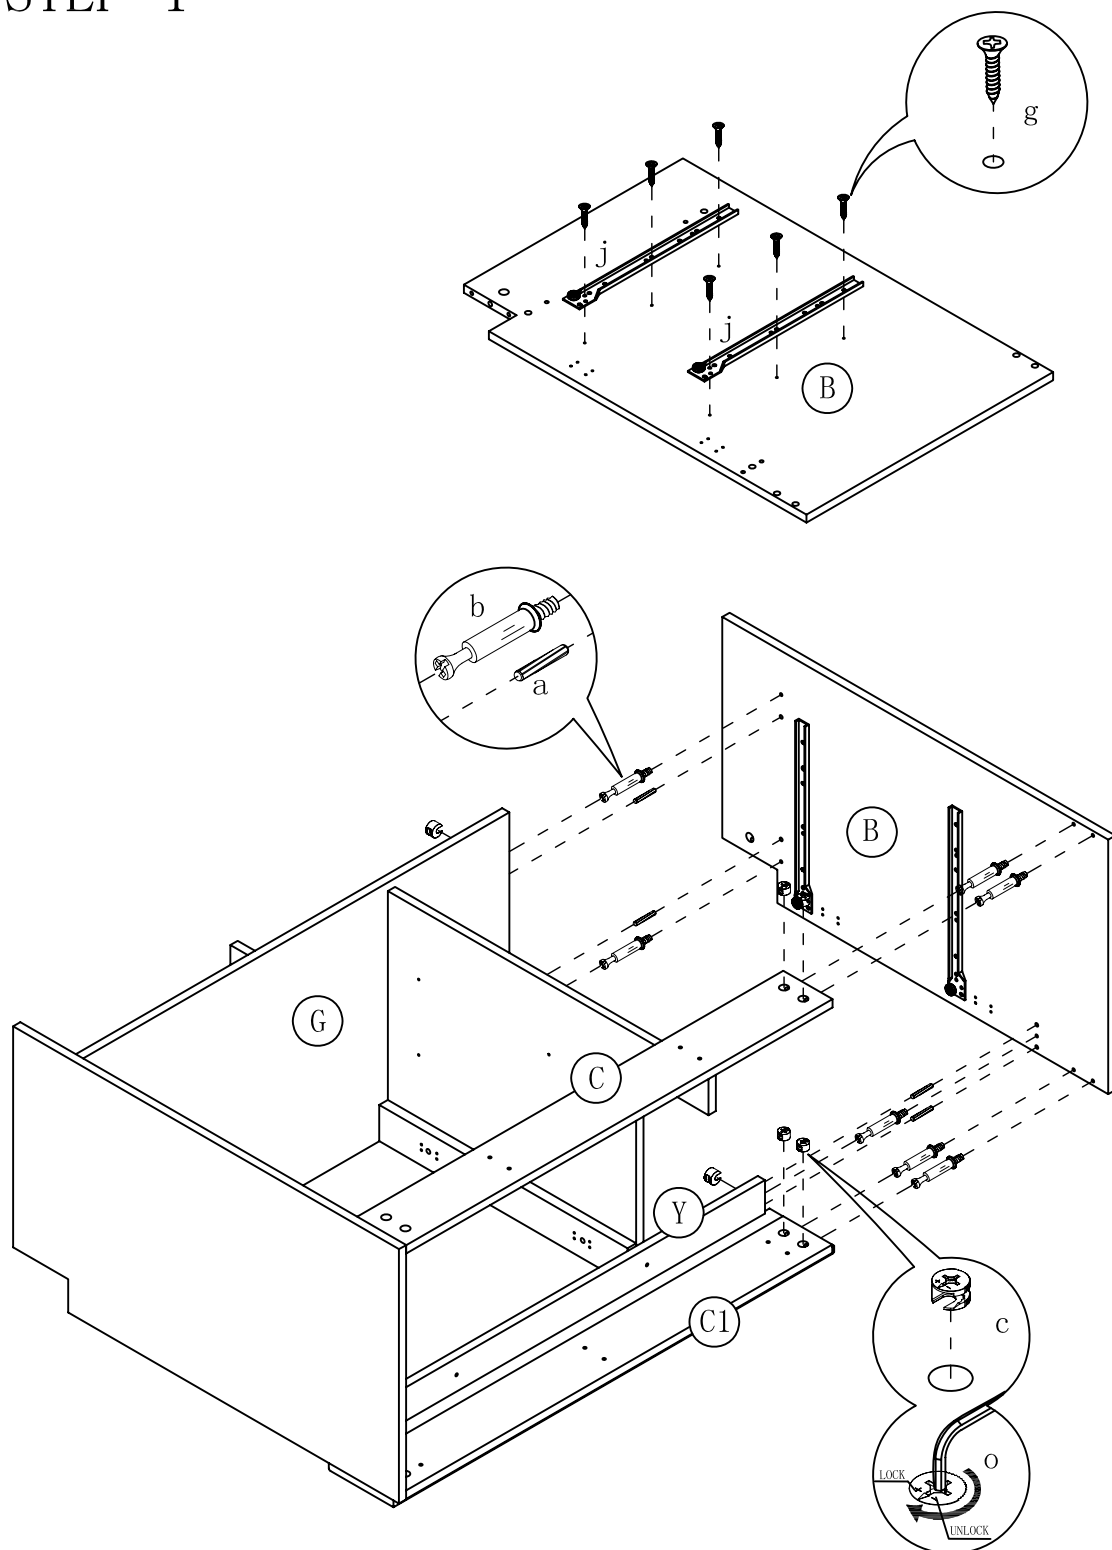



# STEP 5

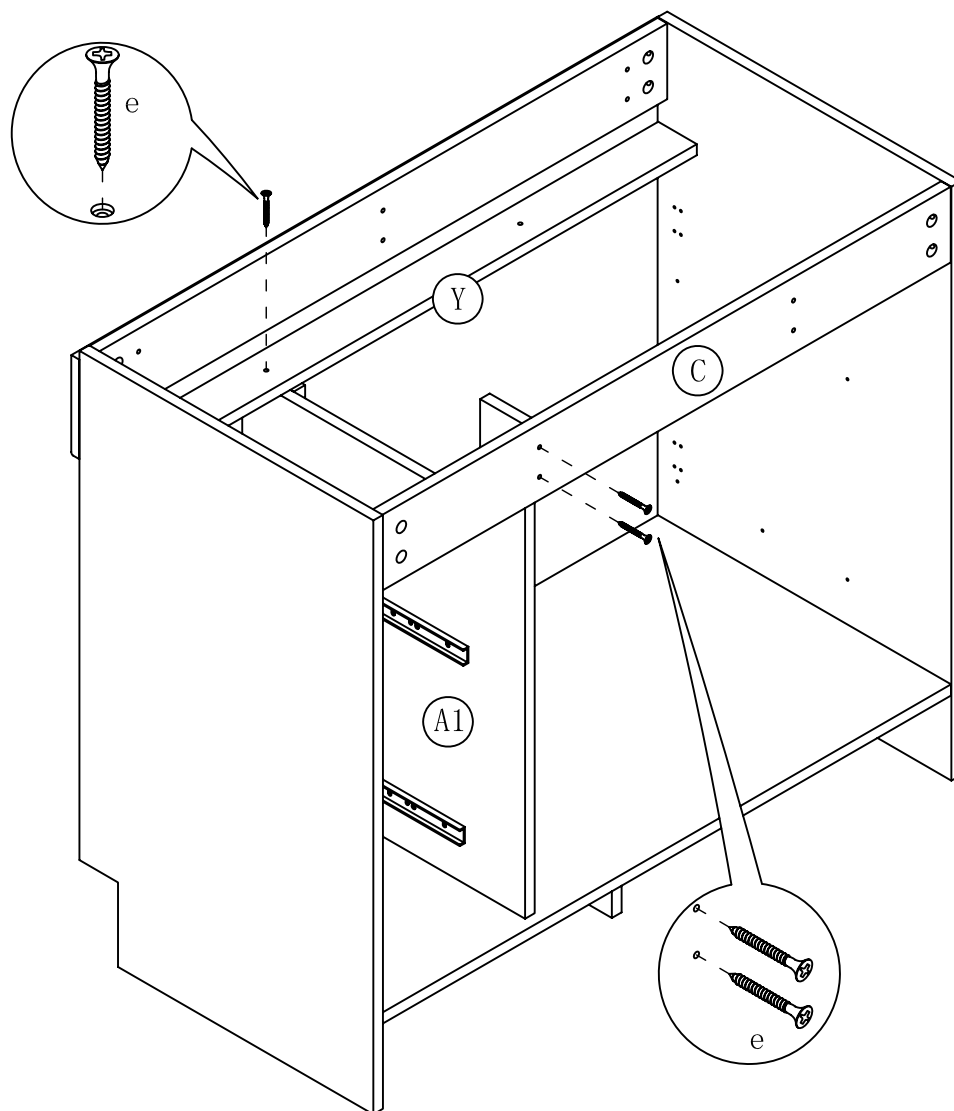


# STEP 6

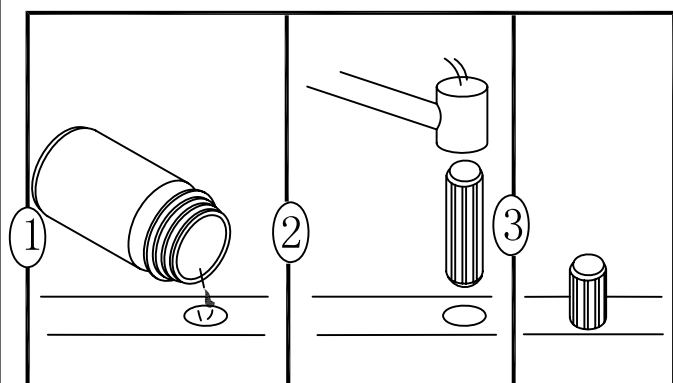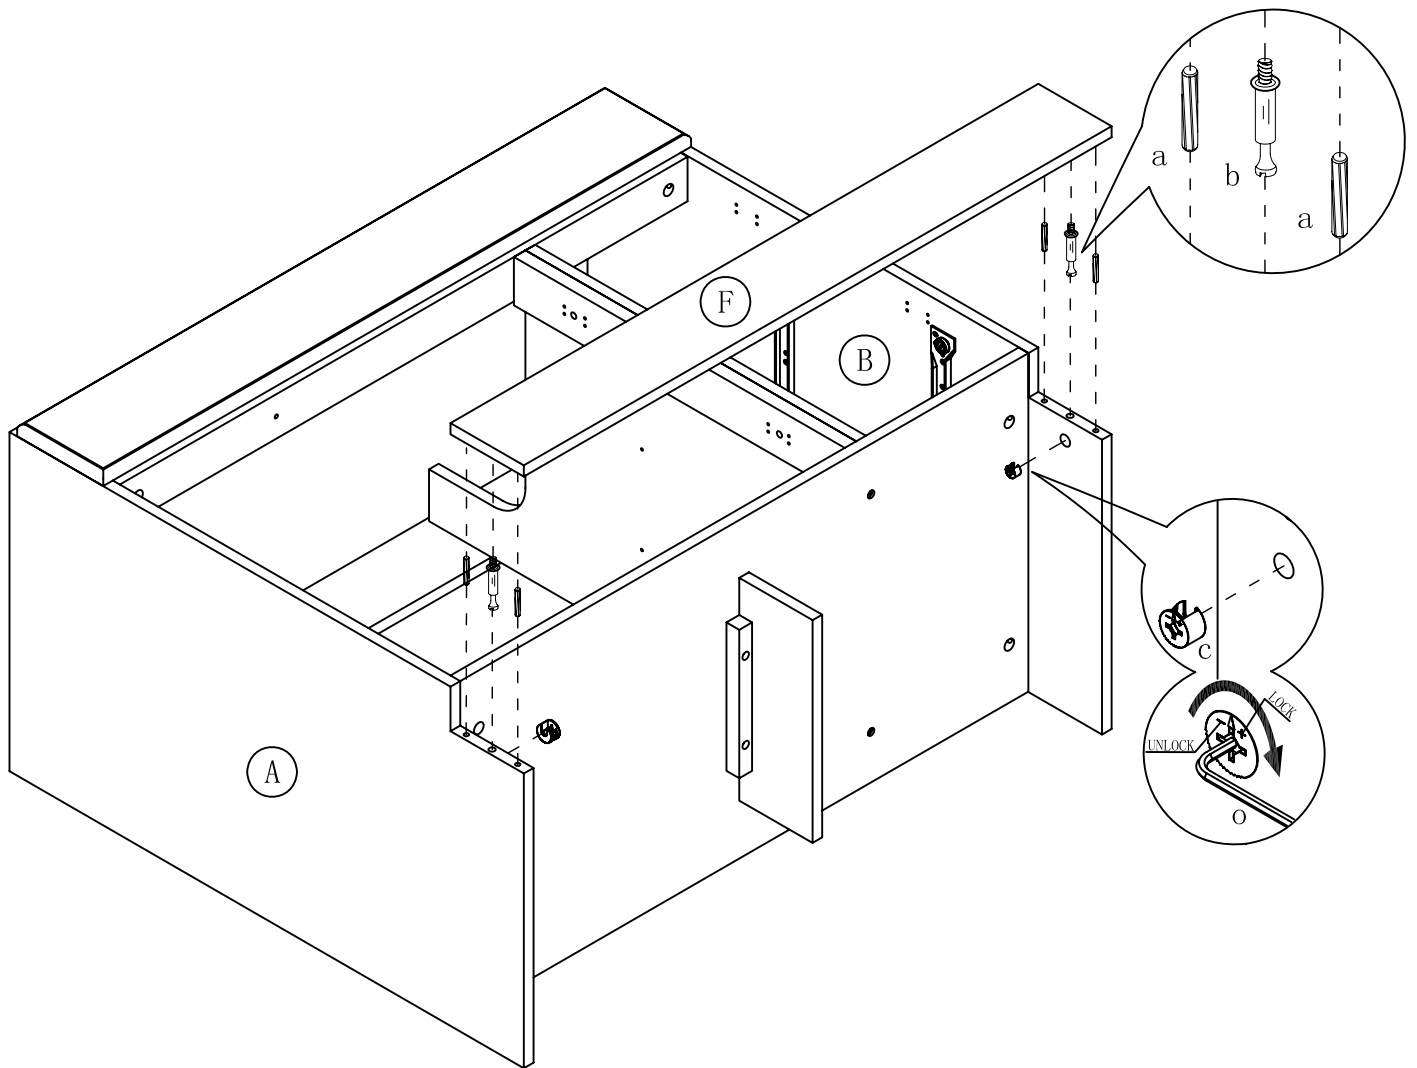

# STEP 7

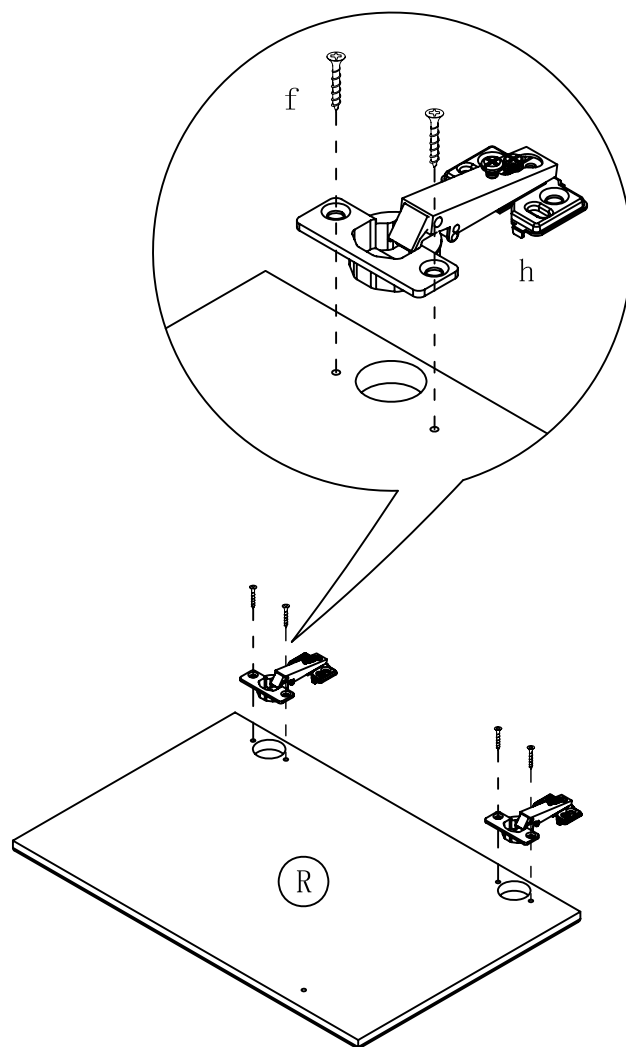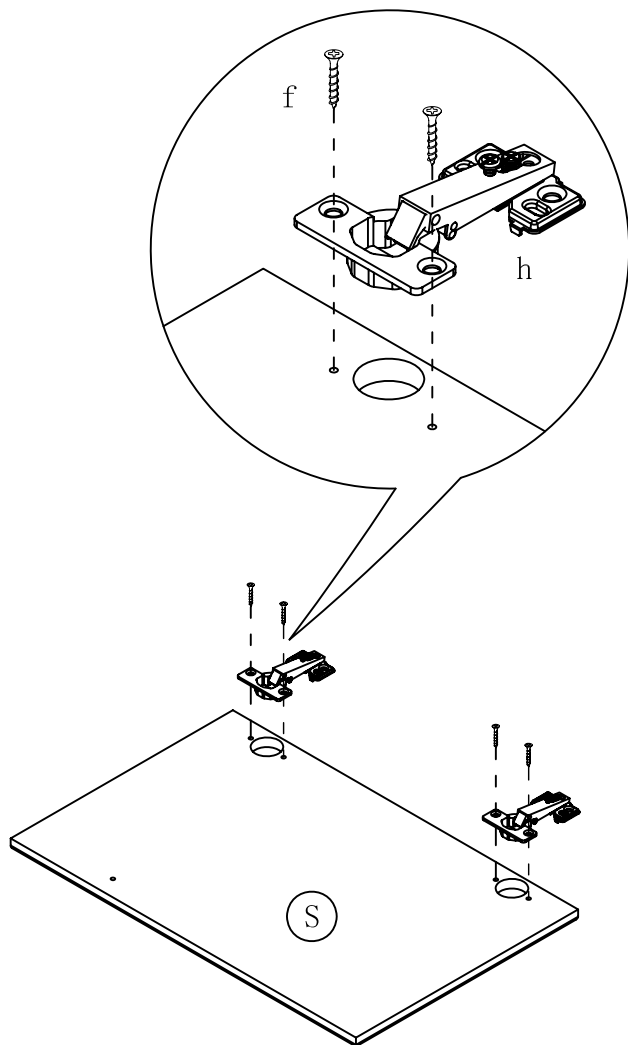


# STEP 8

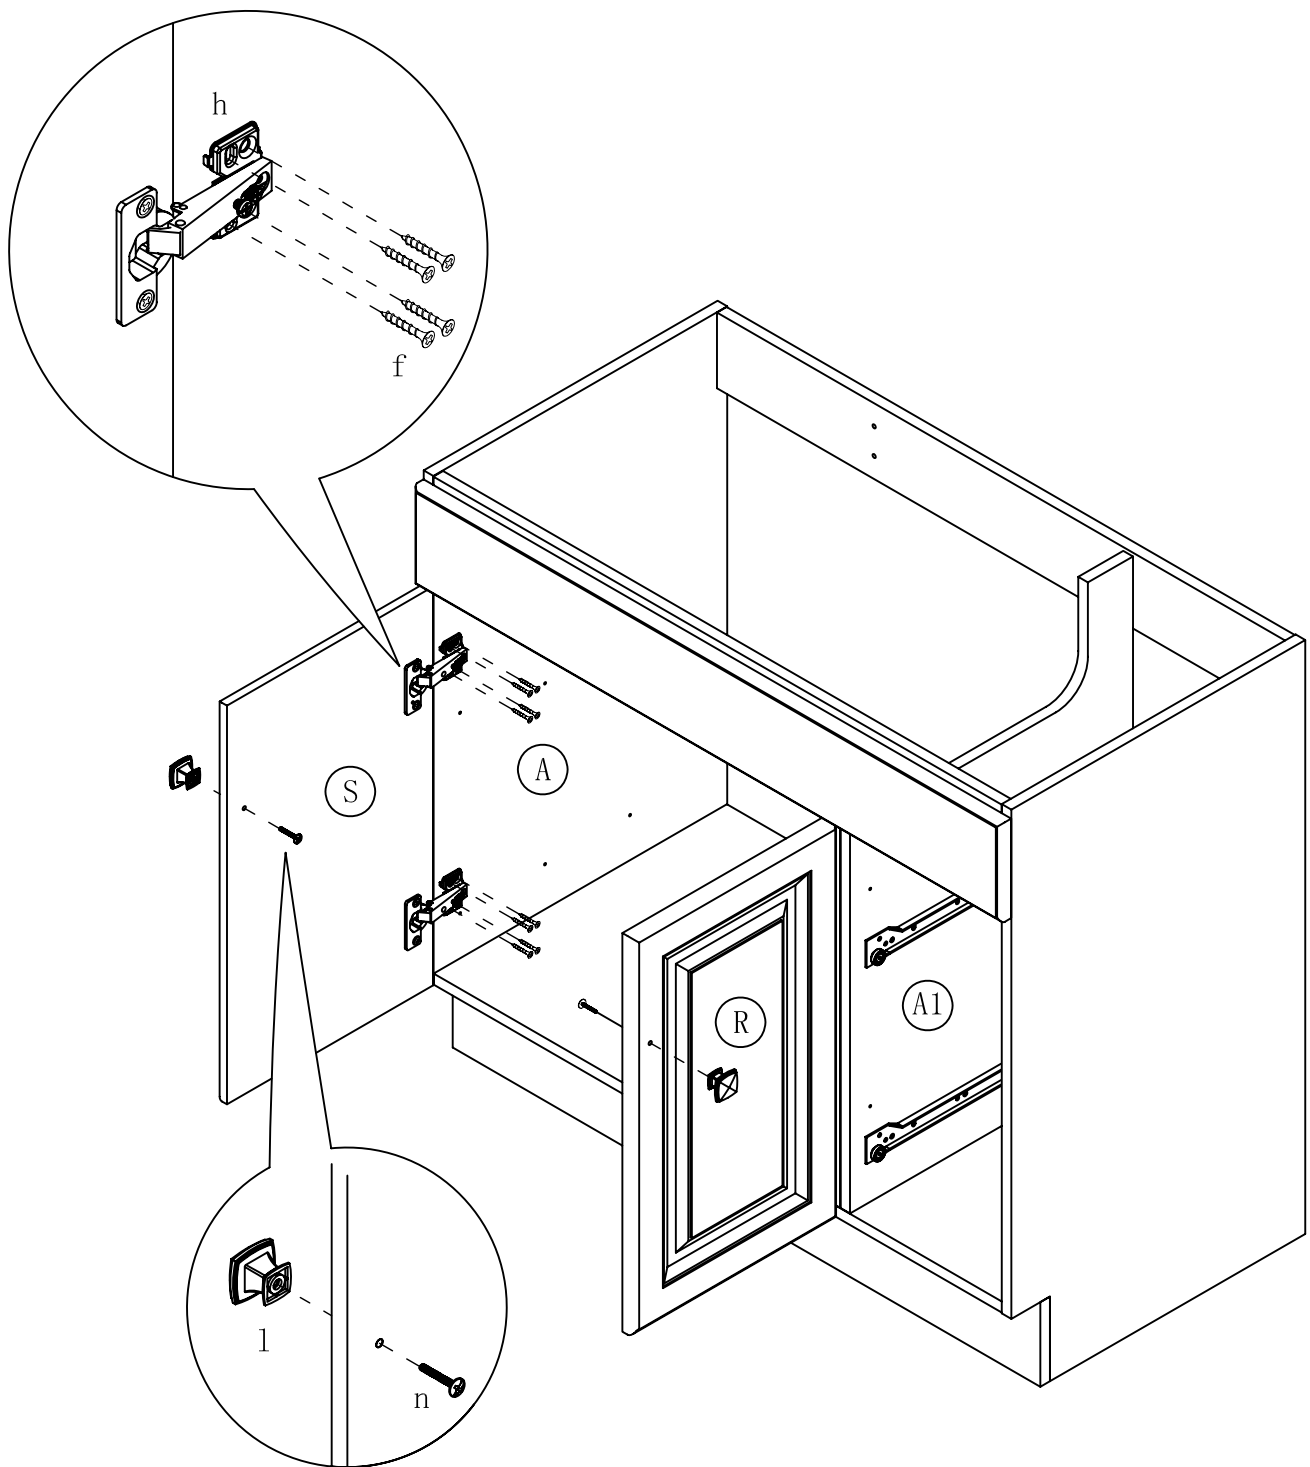


# STEP 9



x 2

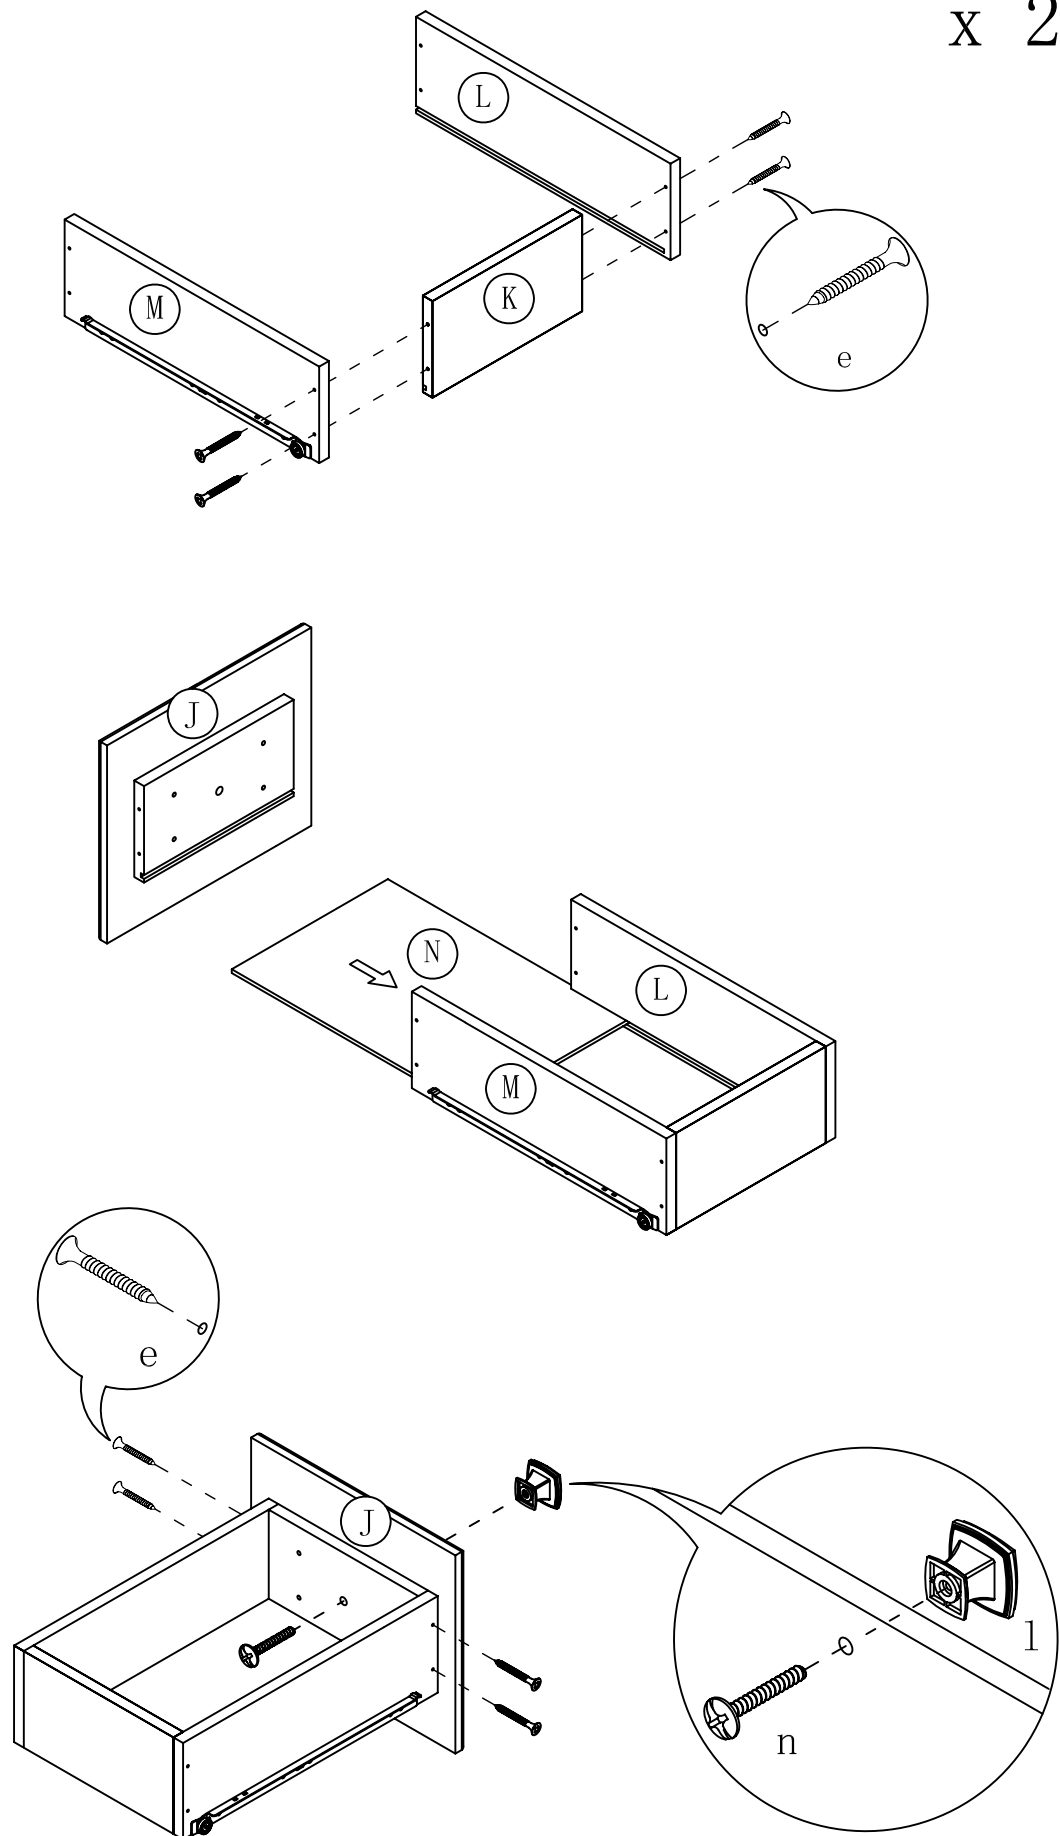

# STEP 10


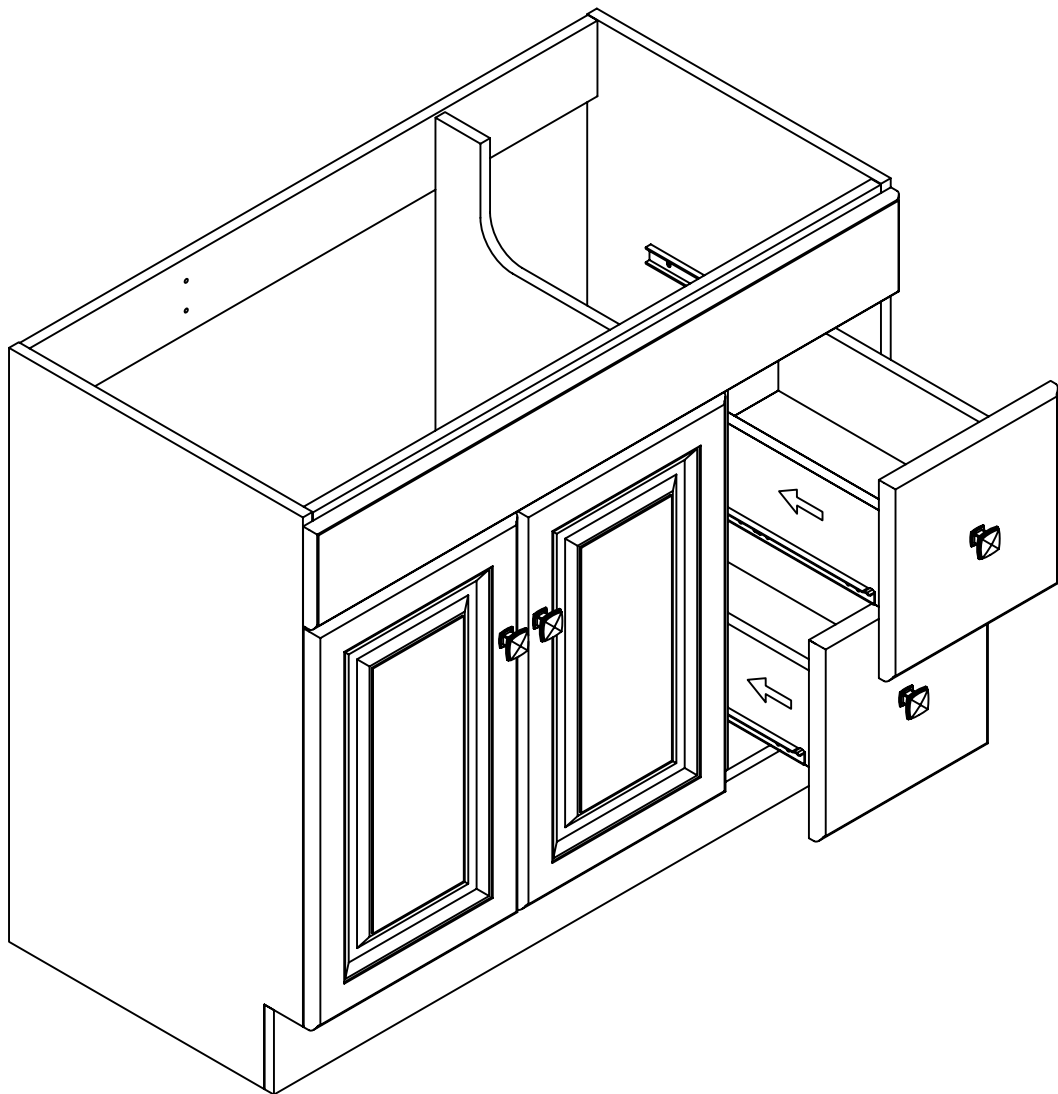


# STEP 11


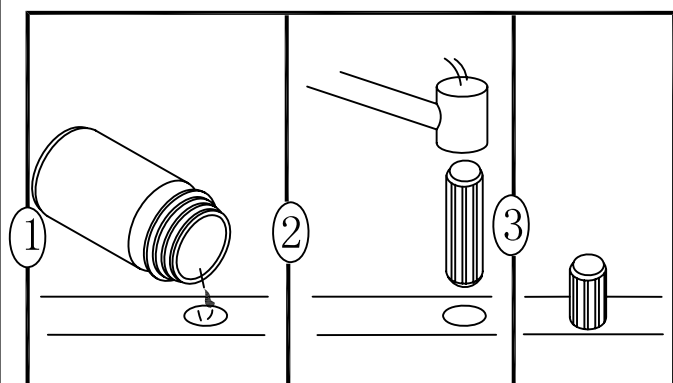
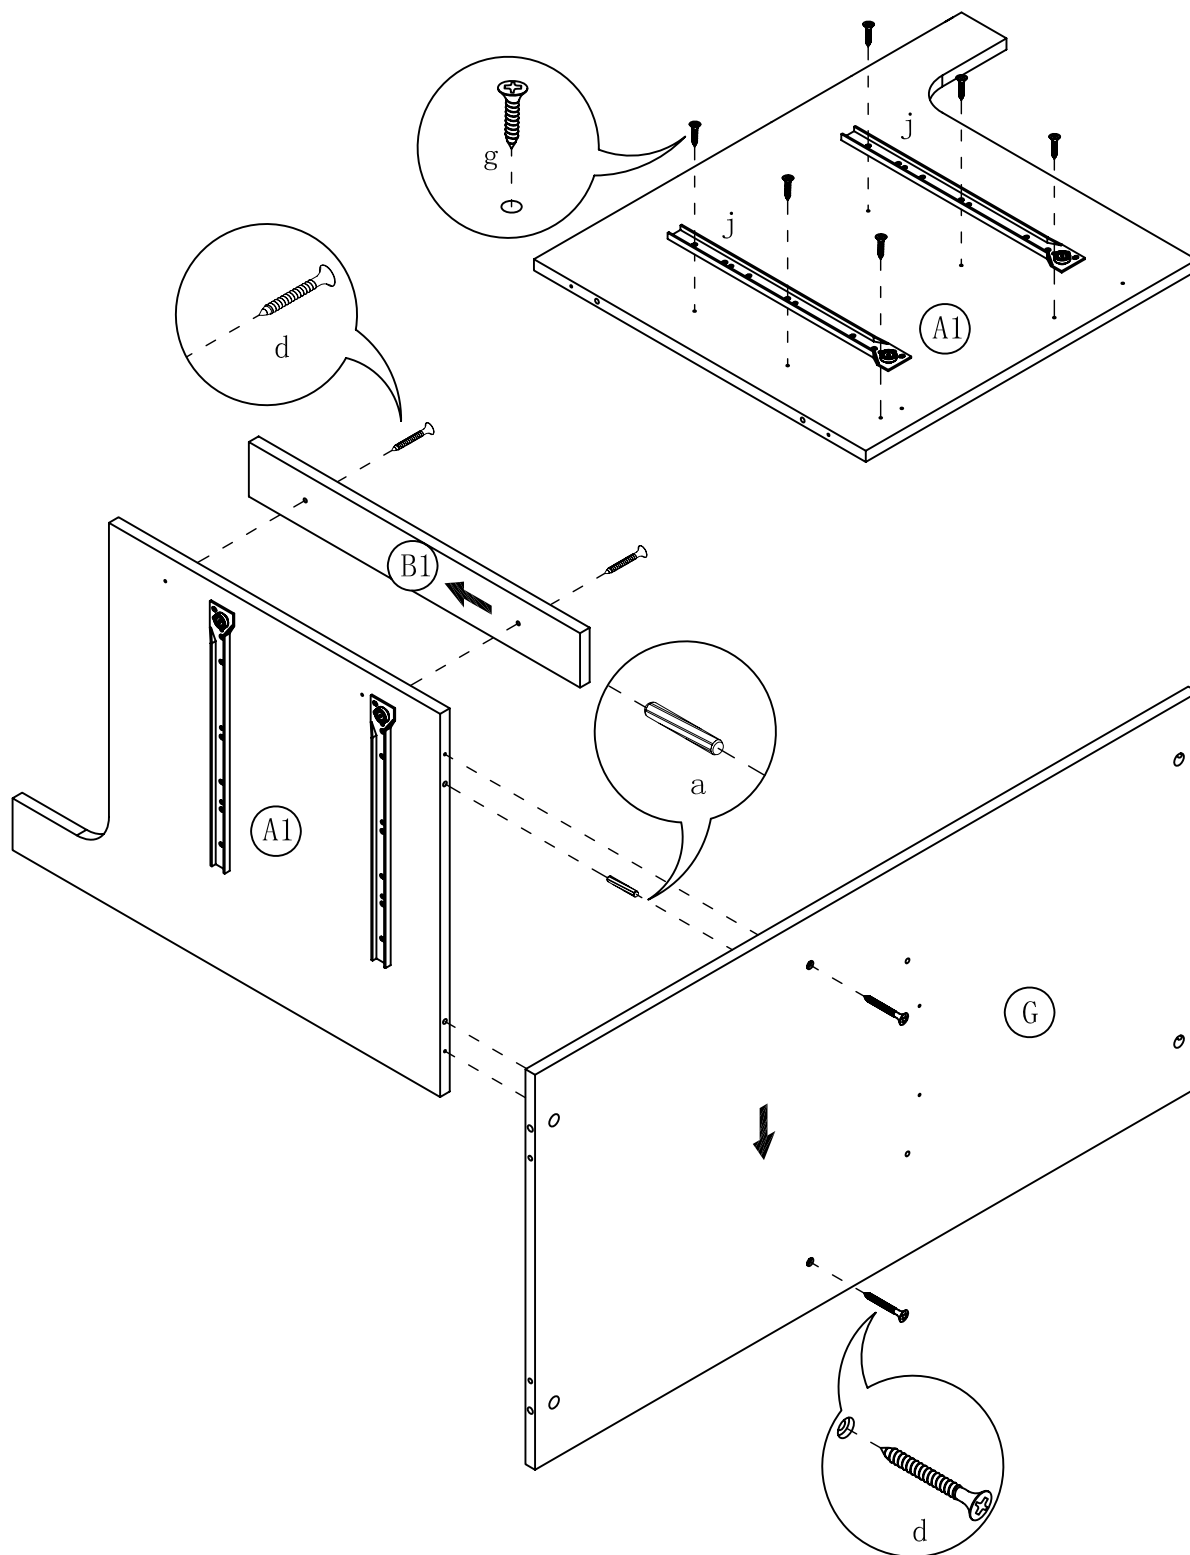






# STEP 12

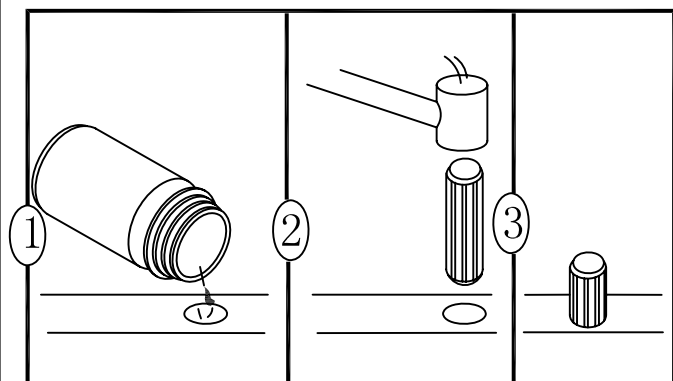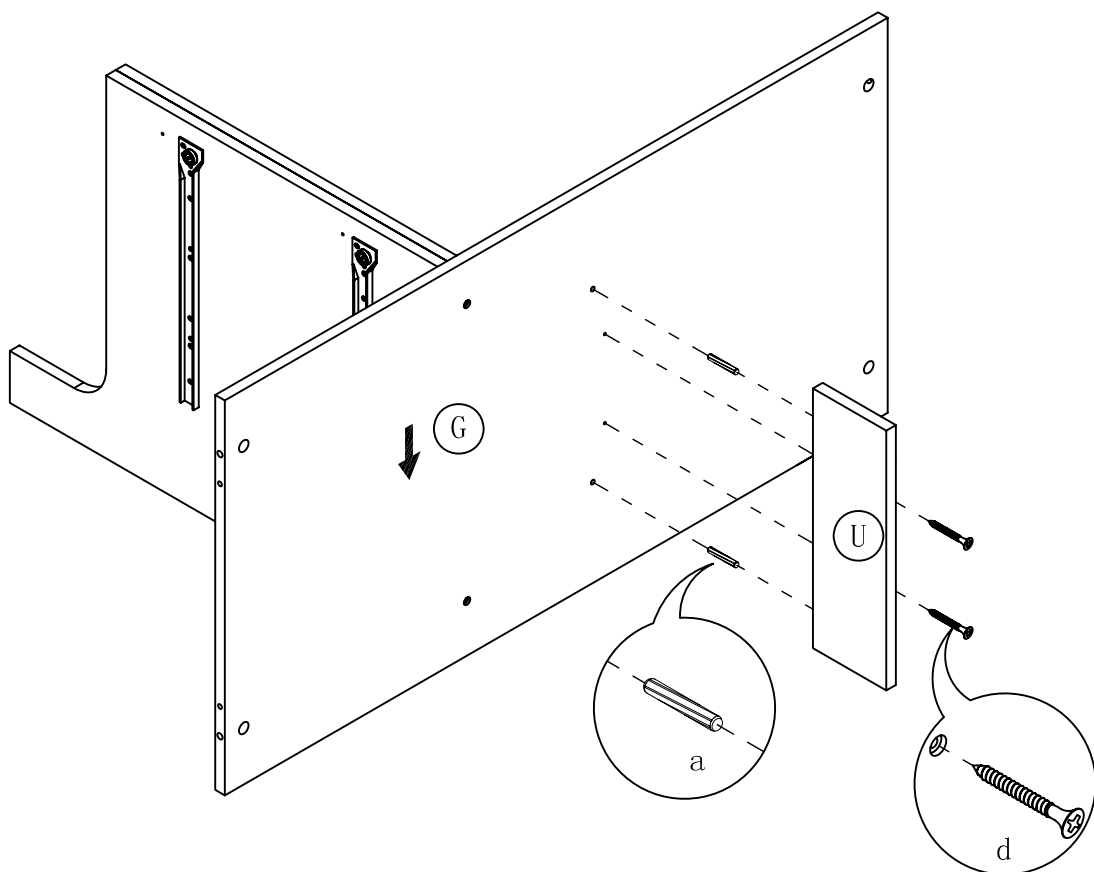


# STEP 13

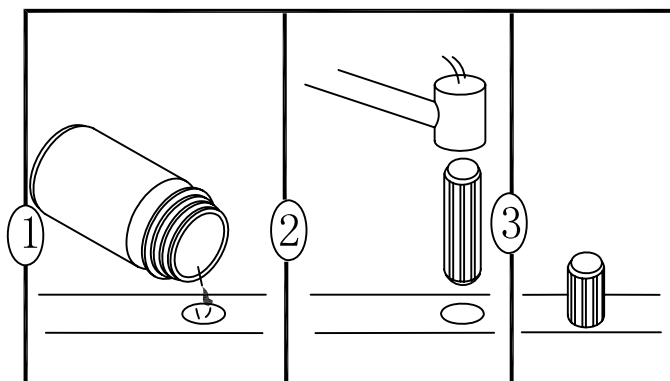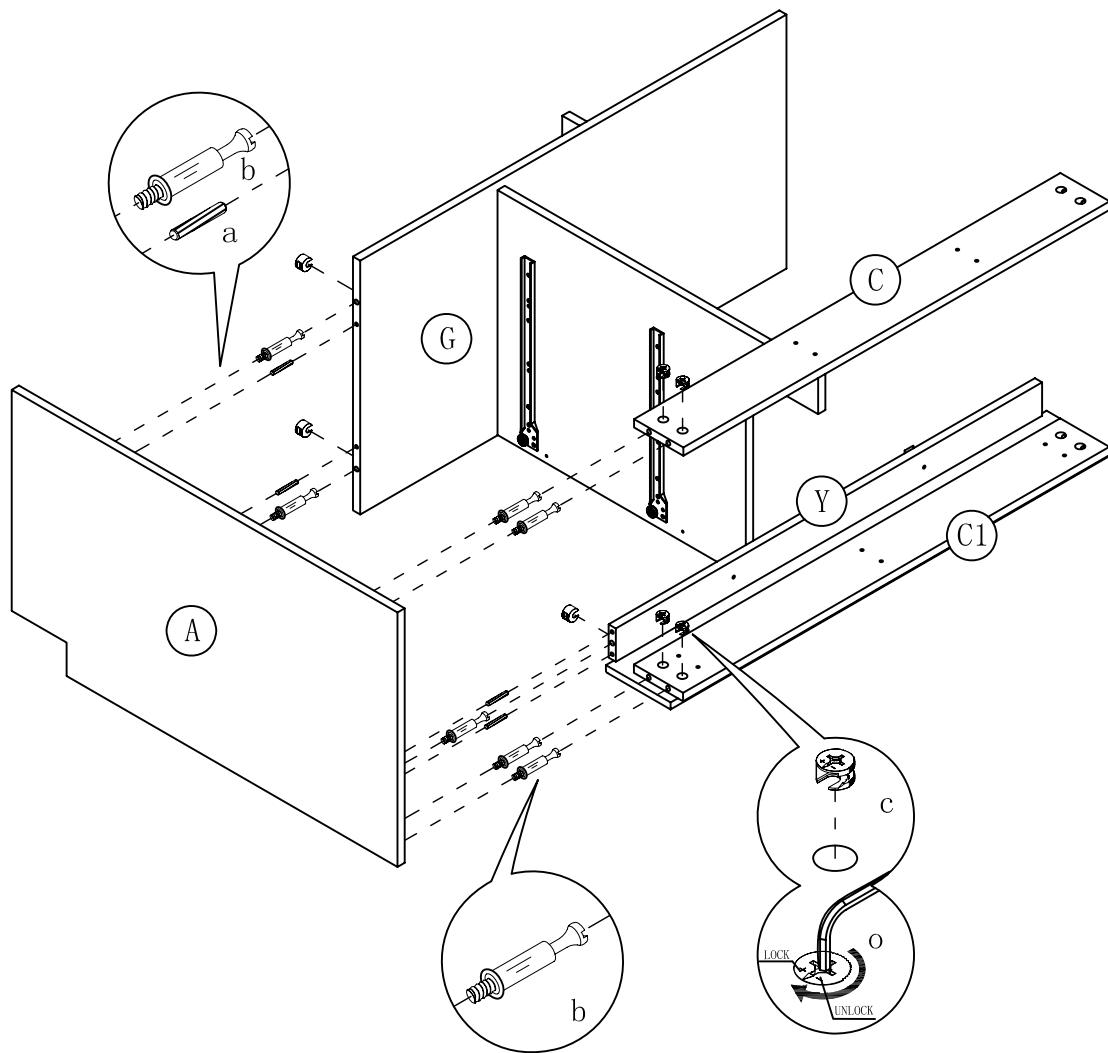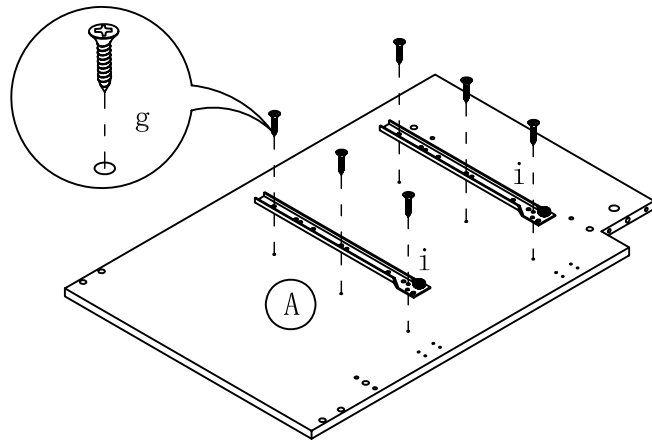



# STEP 14

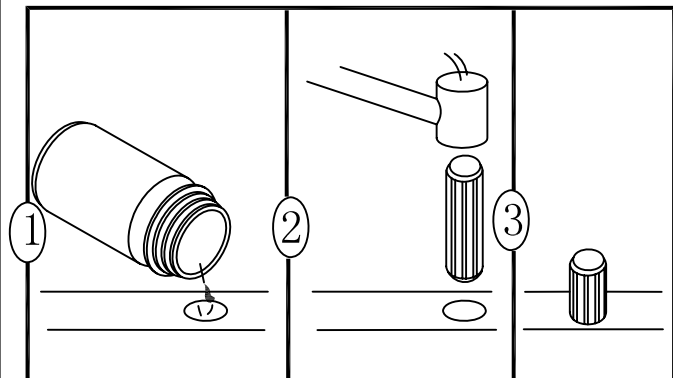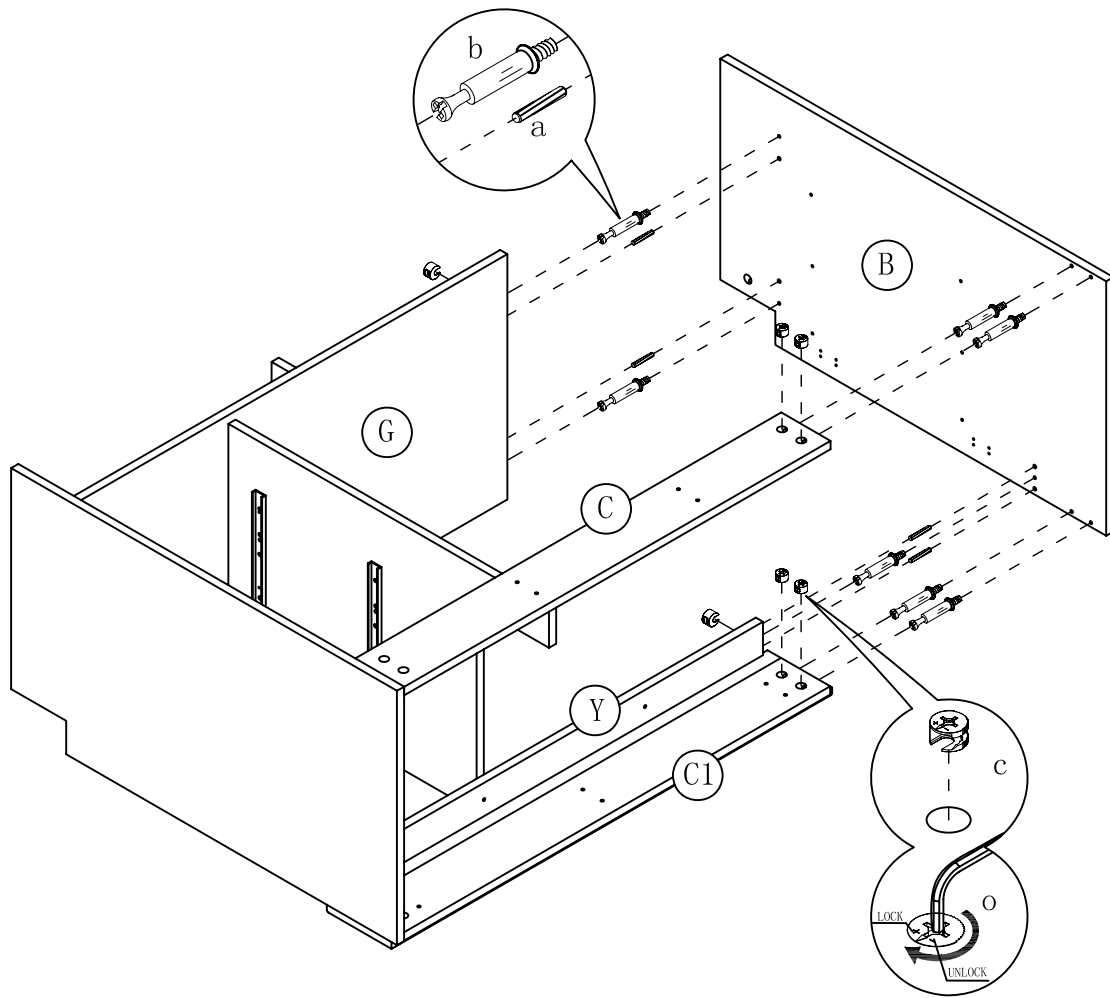



# STEP 15

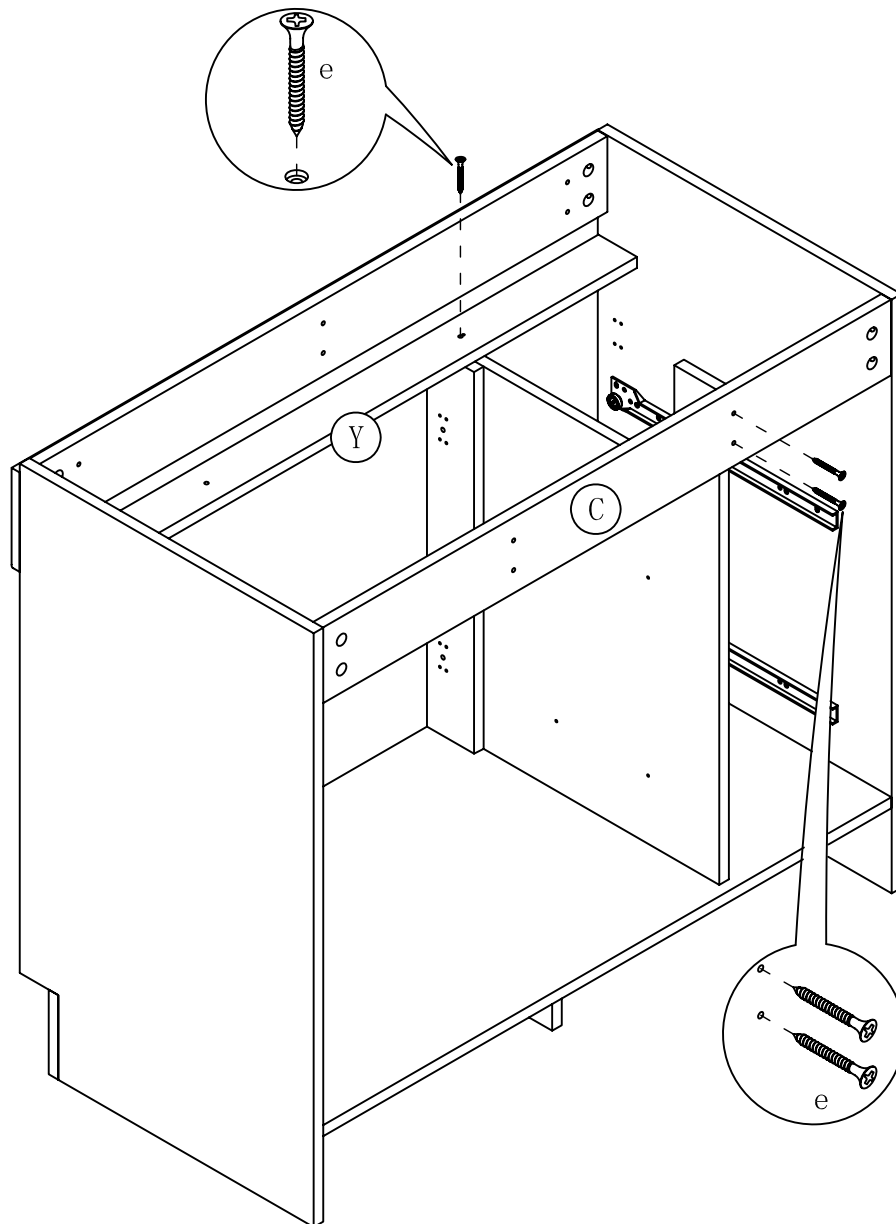


# STEP 16

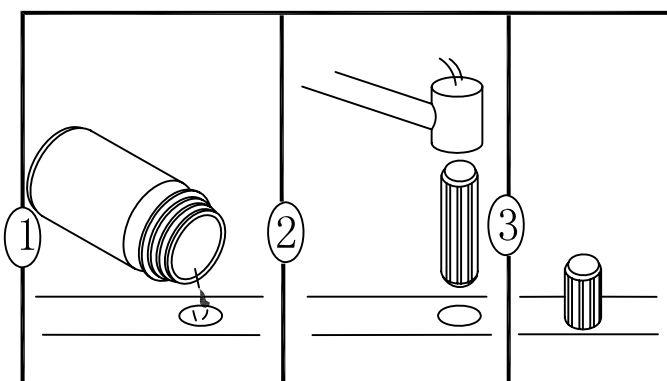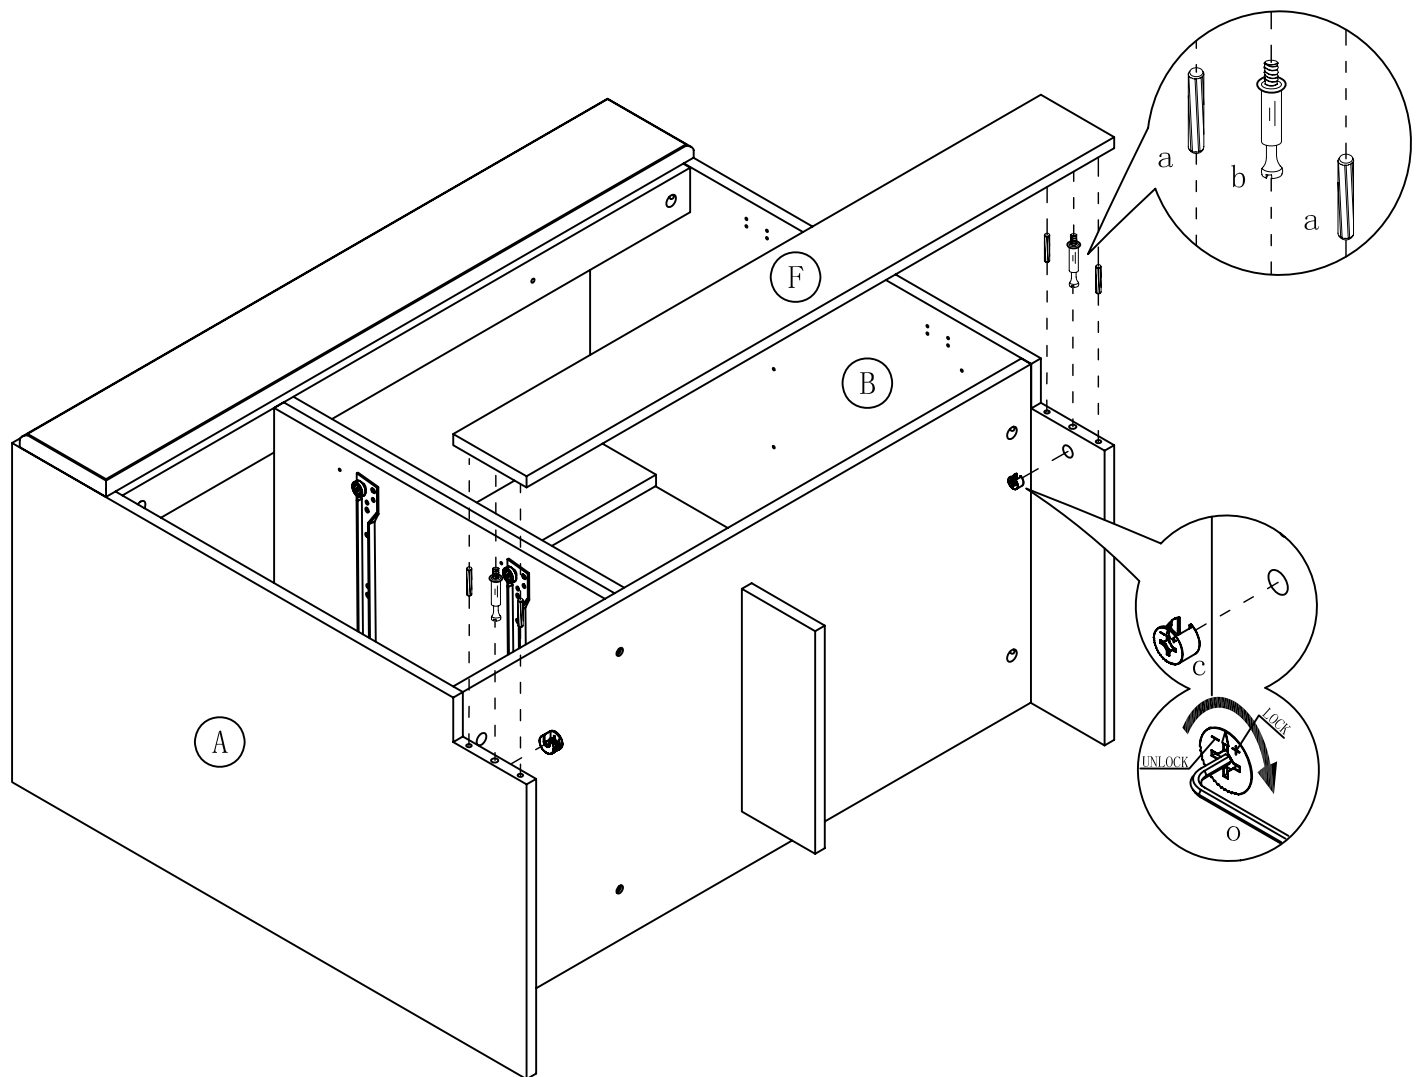

# STEP 17

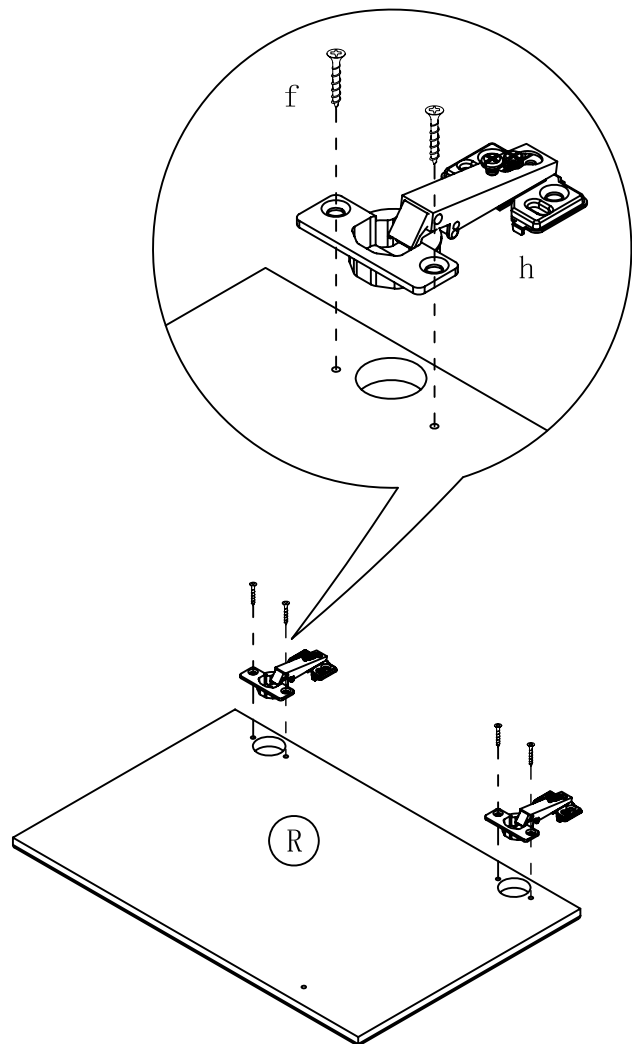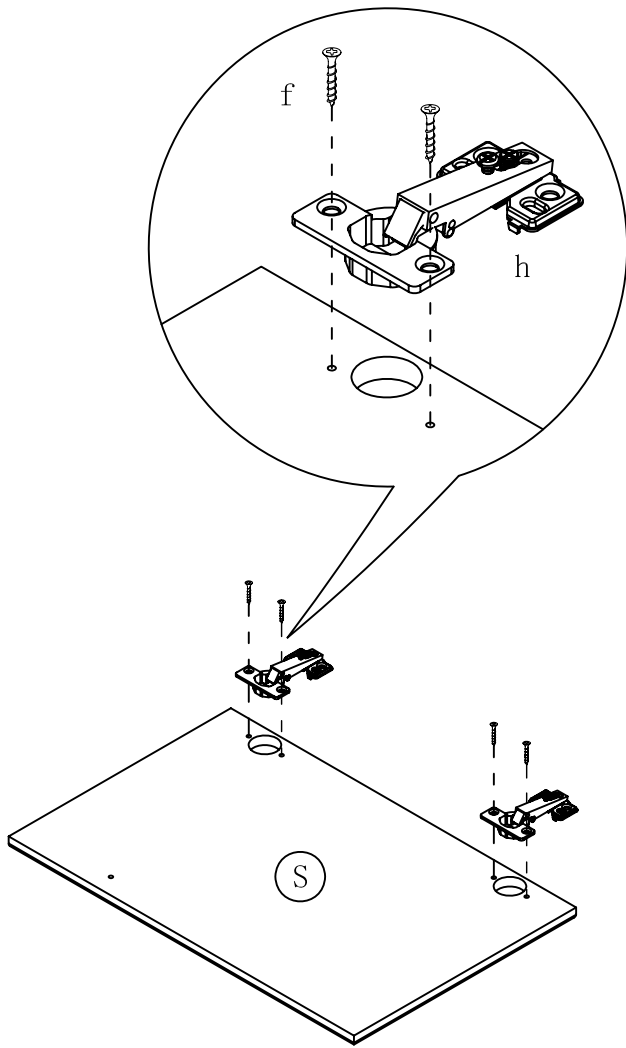


# STEP 18

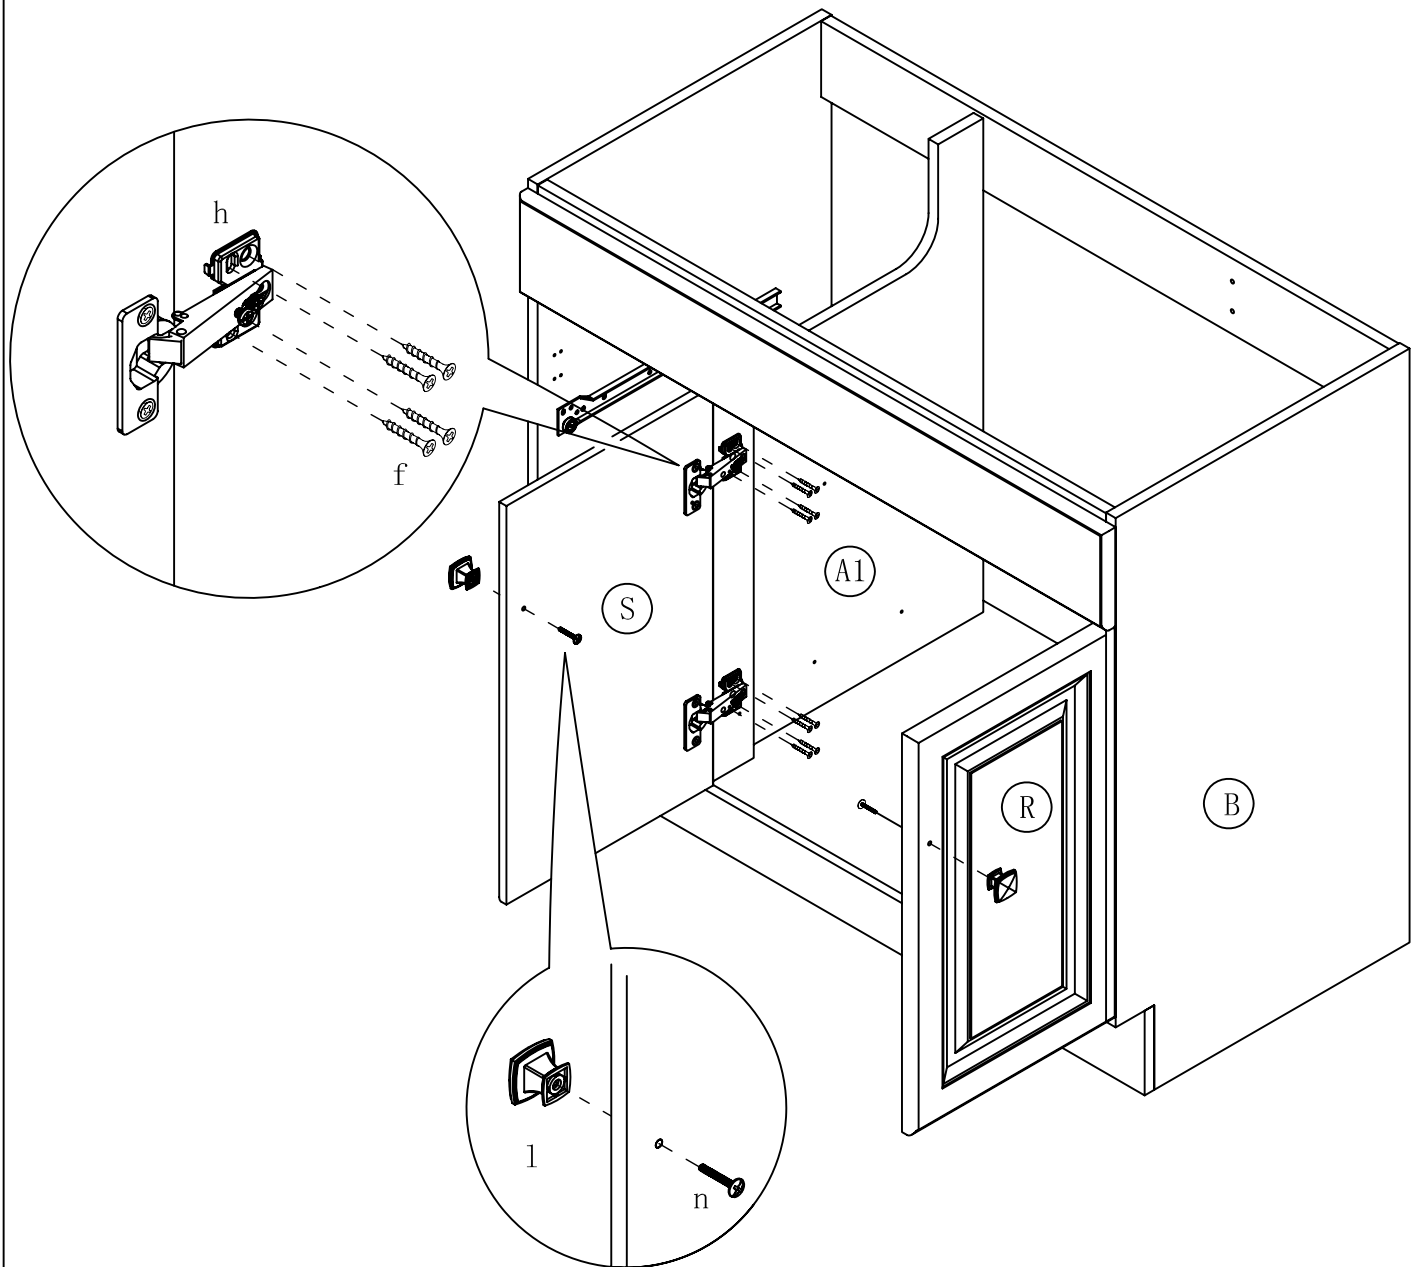

# STEP 19

x 2

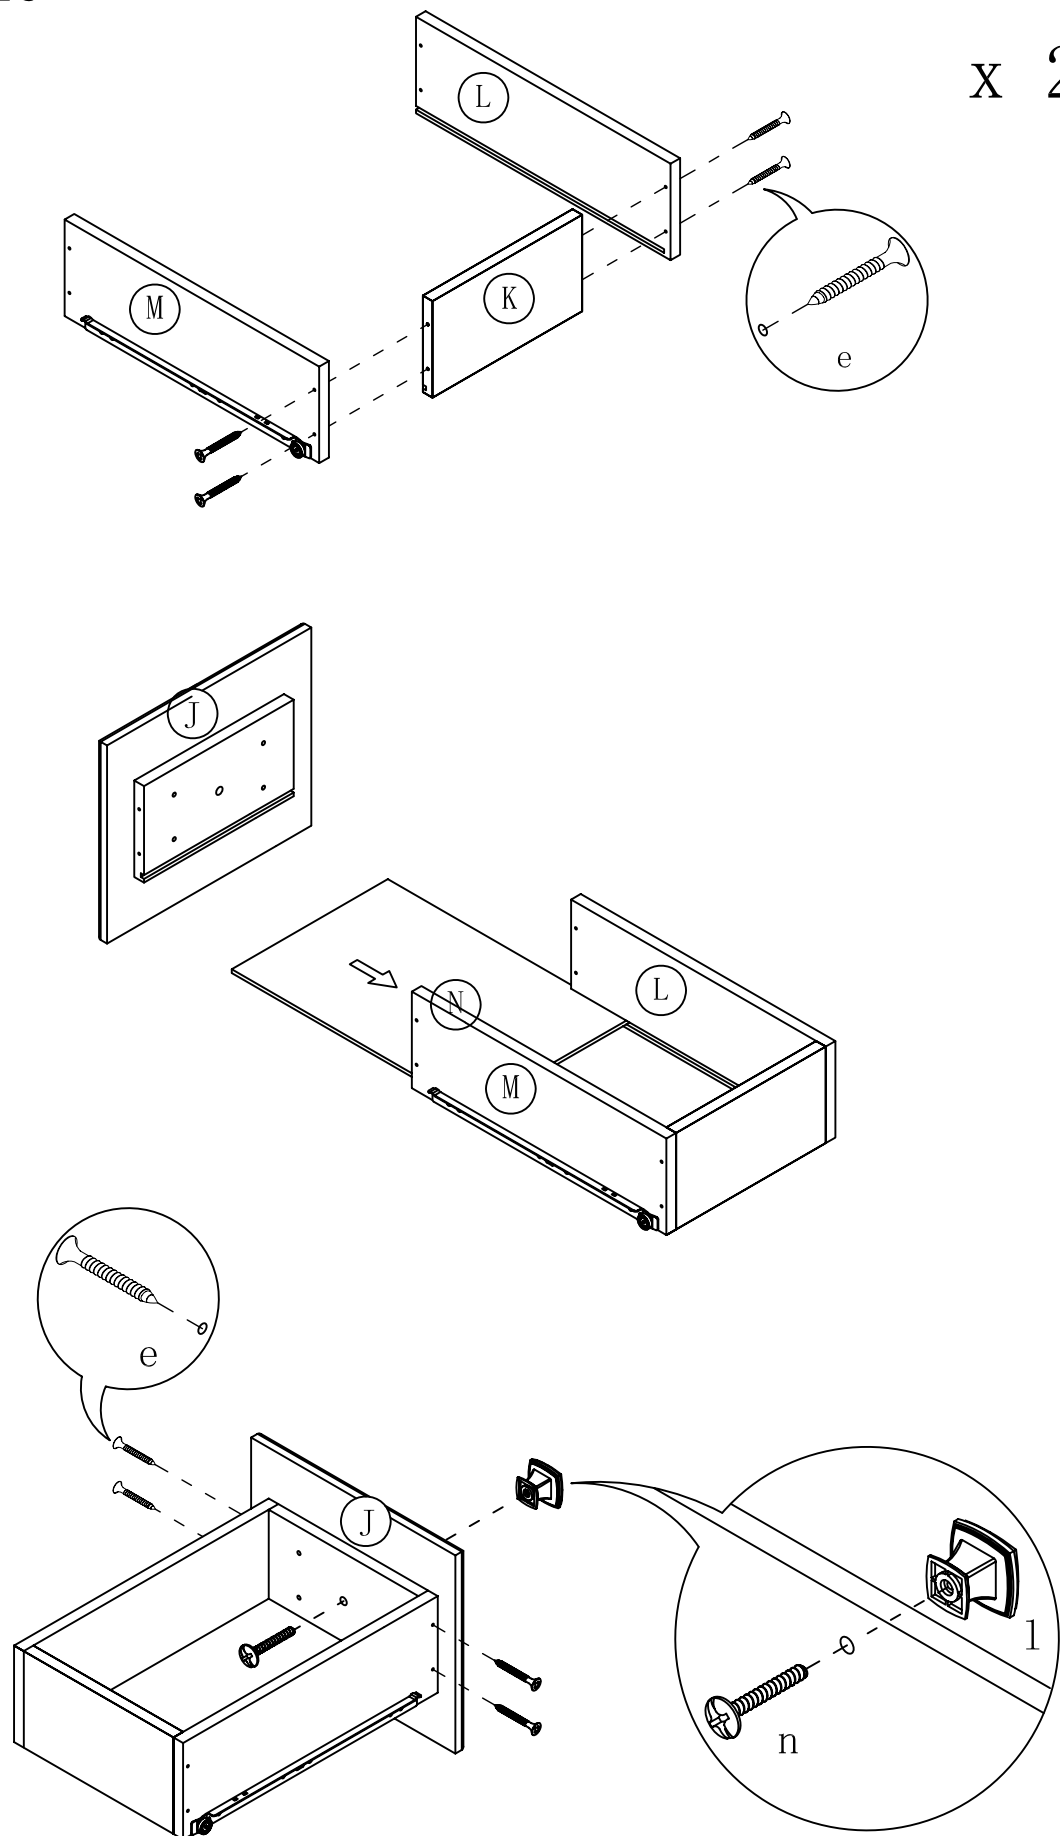



STEP 20

