



## AUBREY 2 LT FLUSHMOUNT ASSEMBLY/INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

### CAUTION

**WARNING:** Risk of Fire. Min 90°C supply conductors. Consult a qualified electrician to ensure correct branch circuit conductor.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

### GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.


Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

## ASSEMBLY AND INSTALLATION

- Before installing, preset the NIPPLE length:
  - Thread the HEX NUT onto the NIPPLE, and screw the NIPPLE into the COUPLING on the FIXTURE PAN a minimum of four turns.
  - Place the center holes of the GLASS SHADE over the NIPPLE and adjust the NIPPLE so that it protrudes out of the PLASTIC WASHER and HEX NUT 1/4". Remove the GLASS SHADE, PLASTIC WASHER and HEX NUT and secure the NIPPLE to the COUPLING in place by tightening the HEX NUT.
- Pull the SUPPLY WIRES and the SUPPLY GROUND WIRE out from the JUNCTION BOX and attach CROSSBAR to JUNCTION BOX, using the slotted holes on the CROSSBAR and the JUNCTION BOX SCREWS.
- Thread the FIXTURE SCREWS two full turns into the appropriate threaded holes in the CROSSBAR. (Check the CROSSBAR against the fixture KEYHOLE SLOTS to ensure proper fit.)
- Make the wiring connection: Connect FIXTURE GROUND WIRE to SUPPLY GROUND WIRE with a wire nut. Proceed to attach them to the CROSSBAR with the GREEN GROUND SCREW. Connect the BLACK SUPPLY WIRE to the BLACK FIXTURE WIRE and WHITE SUPPLY WIRE to the WHITE FIXTURE WIRE with WIRE NUTS.
- Carefully tuck all wiring back into the JUNCTION BOX. Lift the FIXTURE PAN over the JUNCTION BOX, positioning the FIXTURE SCREWS heads through the large openings of the KEY HOLE SLOTS. Rotate the CANOPY until the FIXTURE SCREW heads are seated at the small ends of the KEYHOLE SLOTS, secure them with a screwdriver.
- Install the BULBS (Sold Separately).

## ASSEMBLY AND INSTALLATION (CONT.)

- Locate the GLASS SHADE. Carefully lift up the GLASS SHADE, Align and pass the NIPPLE through the center hole in the bottom of GLASS SHADE. Thread the PLASTIC WASHER and HEX NUT at the bottom of the NIPPLE.
- Thread the FINIAL onto the end of NIPPLE protruding from the HEX NUT.
- Restore electric power to installation point ON. Retain this sheet for future reference.

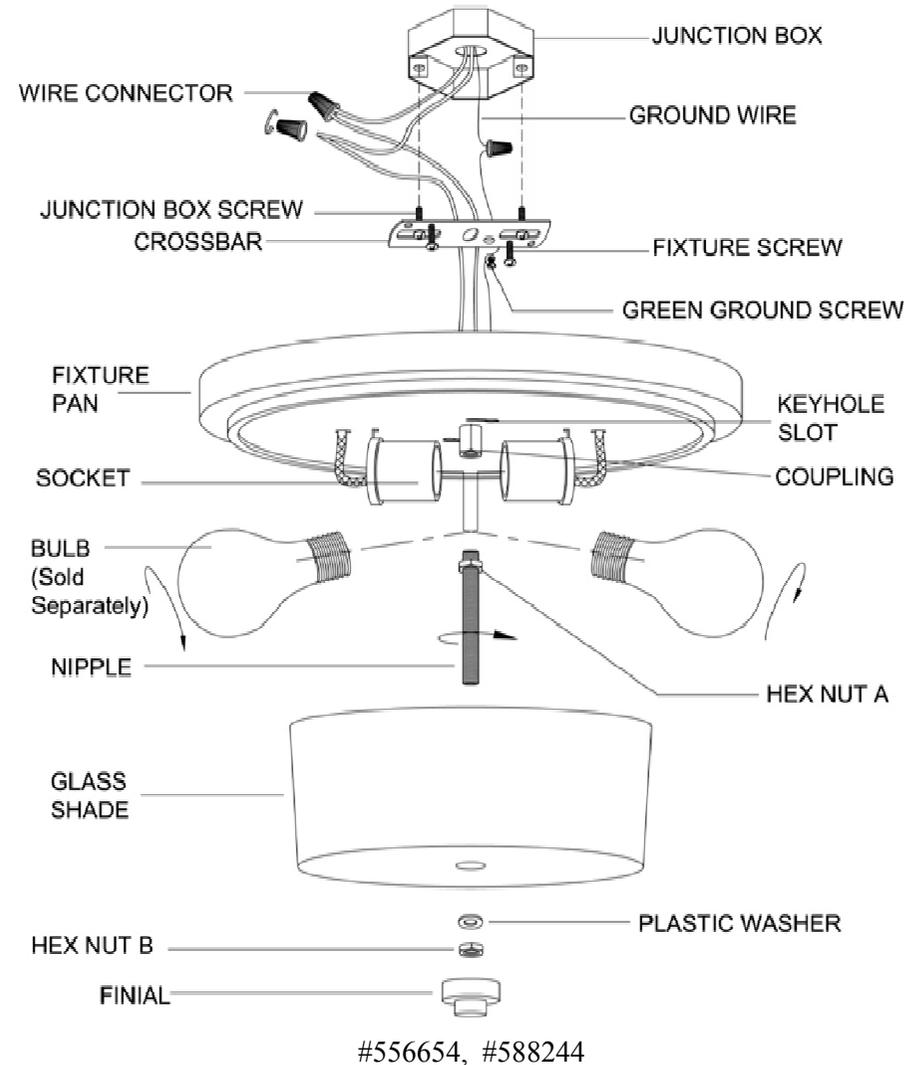

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,  
CONSULT A LICENSED ELECTRICIAN.**